



*Dreamland*

# RELAXWELL LUXURY HEATED THROW

TYPE F2001 F2002  
F2003 F2004

 
 


Operating instructions

 




## DIAGRAMS

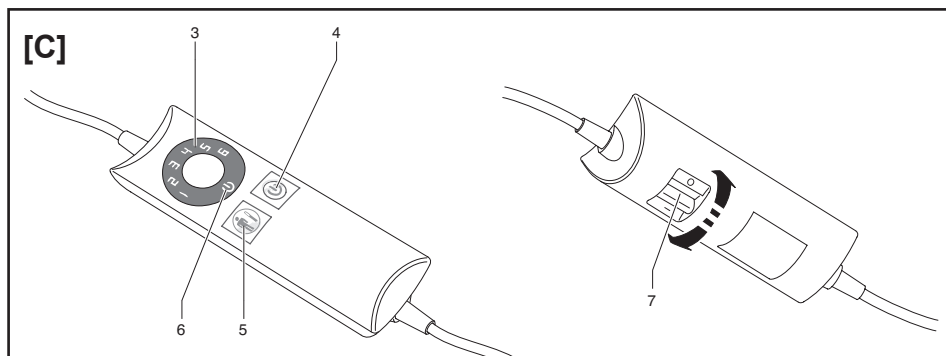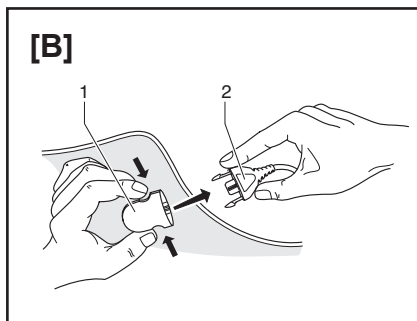

## SPECIFICATIONS

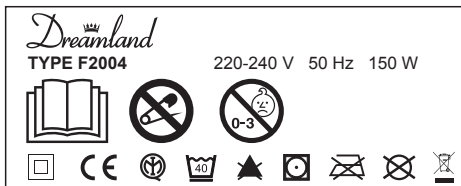



GB



## INSTRUCTIONS FOR USE OF LUXURY HEATED THROW

Dear Customer, DREAMLAND would like to thank you for purchasing this product. We are convinced that you will appreciate the quality and reliability of this appliance, which was developed and manufactured with customer satisfaction always in mind. These operating instructions were created on the European standard EN 62079.

## IMPORTANT INSTRUCTIONS KEEP FOR FUTURE USE.



**IMPORTANT!** Instructions and warnings for safe use.



Before using this appliance, carefully read the instructions and in particular the safety warnings, which must be complied with. Keep this manual and illustrative guide with the appliance for future consultation. Should you pass the appliance on to another user, make sure to also include this documentation.

**NOTE:** should certain parts of this booklet be difficult to understand or should doubts arise, contact the company before using the product, at the address indicated at the last page.

### CONTENTS

SAFETY INSTRUCTIONS	page 1	AFTER SALE ASSISTANCE	page 5
SYMBOL KEY	page 2	REGULAR SERVICING	page 5
POSITIONING AND FITTING INSTRUCTIONS	page 3	ELECTRIC BLANKET RECORD	page 6
USING YOUR THROW	page 3	WARRANTY	page 6
CLEANING AND MAINTENANCE	page 4	DISPOSAL	page 6
STORAGE	page 4	DIAGRAMS	page 1
TROUBLE SHOOTING	page 5	SPECIFICATIONS	page 1

### SAFETY INSTRUCTIONS










- After having removed the appliance from its packaging, verify its integrity based on the drawing and check for any damage caused during transport. If in doubt, do not use the appliance and contact the authorised service centre.
- Do not let children play with the packaging! Keep the plastic wrapping out of the reach of children; risk of suffocation!
- Before connecting the appliance, check that the mains voltage data reported on the technical data corresponds to that of the available electric mains. The technical data is attached to the label of the appliance.
- This appliance must only be used as a heated throw for domestic use as indicated in the instructions. Any other use is to be considered hazardous.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not



 








## GB

play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- The appliance is not to be used by people who are insensitive to heat or vulnerable and unable to react to overheating.
- This appliance must not be used by children aged from 3 years and above if the control devices have not been set beforehand by a parent or guardian or if the child has not been properly instructed on how to use the device safely.
-  **WARNING** – NOT suitable for children under the age of 3. Children under the age of 3 must not use the appliance as they are unable to react in the event of overheating.
-  **DO NOT** activate the temperature control with wet hands.
-  **DO NOT** pull the power cable or the appliance itself to remove the plug from the socket.
- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Any repairs must only be carried out by an authorised technical service centre.
- If the power cable is damaged it must be replaced by an authorised technical service centre, so as to prevent all risks.
- The appliance must be used solely with the types of control indicated on the label.
-  **DO NOT** place the control unit under the pillow or between the sheets or bed covers when the appliance is connected.
- Inspect the appliance frequently to check for signs of wear and tear. If such signs are found or if the appliance has been used incorrectly, contact an authorised technical assistance centre before continuing to use it.
-  **DO NOT** use on an adjustable bed. If the appliance is used on an adjustable bed, check that the throw and cord do not become trapped or rucked, for example in hinges.
-  **DO NOT** tuck in.
- This appliance is not intended for medical use in hospitals.
-  **DO NOT** use if wet.
-  **DO NOT** use the appliance to keep animals warm.
-  **DO NOT INSERT PINS OR NEEDLES.**

### SYMBOL KEY

	Protection class II		Time out indicator light
	Warning		OFF position
	Prohibited		ON position
	Temperature selection		





## POSITIONING AND FITTING INSTRUCTIONS

### POSITIONING THE THROW (DIAGRAM A)

- Sit on your sofa and place your throw over you for blissful comfort.
- You may wish to wrap the throw around you but do not wrap tightly or sit on the throw as this may cause the overheat protection system to activate. Do not allow the throw to ruck or crease.

### FITTING INSTRUCTION

Join the connector (2) of the control unit to the connector (1) on the blanket. Ensure the connector is pushed home until the locking catch engages (**Diagram B**).

## USING YOUR THROW

To operate the throw, insert the plug into the mains power supply and switch on the socket. If the lead does not reach your socket, you can increase the cable length by adding a BSI or ASTA approved extension cable, available from all good electrical retailers.



**WARNING! Only use the electric throw with the control unit supplied. The control model is specified on the care label sewn on the throw. Never cover the control unit with the electric throw.**

- Connect the plug into the mains socket.

### SWITCH ON/OFF

- **ON** – To switch the electric throw on, switch to ON position (I) on the back of the control (7) (**Diagram C**), and select your required temperature.
- **OFF** – To switch off the electric throw, switch to OFF position (O) (7) (**Diagram C**), on the back of the control.
- Switch on the throw, from the back of the control, by positioning the switch ON (I) (7) (**Diagram C**).
- When the controller is turned ON, set to setting 6 (**FAST PREHEAT**) (red light).
- To operate, just select your preferred temperature setting from 1-5 by simply pushing the temperature button (5) (**Diagram C**) until the temperature setting desired will light up on the temperature display (3) with an orange glow. If left at this setting for longer than 8 minutes, the controller will default to this setting when next switched on.

### AUTO OFF FUNCTION

- The throw is fitted with an **AUTOMATIC SHUT OFF** system of 3 hours. When the timer period time has elapsed, the throw will switch off and the indicator (6) will turn blue.
- To turn the throw on again, switch the on/off indicator switch (7) (**Diagram C**) to off then on again.

### DISCONNECT

- To disconnect your throw from the mains, switch the control to OFF position (O) (7), and then safely disconnect the plug from the mains socket.

### USE DETACHABLE CONTROL SWITCH

The throw has a detachable control which allows the electric throw to be washed. The throw may be disconnected from the control switch by separating (1) and (2) (See **Diagram B**). Press retaining clips at the side of the connector with thumb and forefinger and remove control unit with your other hand.











GB

## CLEANING AND MAINTENANCE

### WASHING INSTRUCTIONS

The Dreamland throw is suitable for washing.

	Wash at 40°C.		Tumble dry at a temperature that is less than 40°C
	Hand wash - max temperature 40°C		Do not iron
	Do not bleach		Do not dry-clean.

### WASHING

- Prior to washing disconnect the control lead from the throw, as in **Diagram[B]**.
- Before washing the throw it is essential that you measure it, to ensure that it is stretched to approximately its original size during the drying process.



#### MACHINE WASH

- The throw may be washed in a washing machine at 40°C on a wool programme.



#### HAND WASH

- Use a mild washing powder or detergent and luke warm water to soak your throw for 15 minutes. After soaking, gently wash the throw and rinse thoroughly with clean, lukewarm water.
- Allow the excess water to drain from the throw. It may also be gently squeezed, but never wring the throw.




#### NEVER DRY CLEAN

- Spin dry on wool programme only.  **DO NOT** use an extra spin cycle.



#### DRYING

- Tumble dry on low settings.
- Air dry on a clothes line, but do not use clothes pegs on the wired area of the throw as they may damage it.
-  **DO NOT** use your throw until it is completely dry.

### STRETCHING

- The throw must be stretched back to approximately its original size during the drying process. This is best done whilst damp, working from side to side, stretching a strip at a time. This procedure may need to be repeated a few times until fully dry.
- Inspect the throw to ensure that none of the wires have formed into loops, or become twisted back on themselves. Holding the throw up to the light will make it easier to inspect the wires.
- If any problems with the wires persist after the stretching process, or the throw does not return to close to its original size, return it along with the control to our Service Centre for a safety inspection.

## STORAGE

When not in use store as follows:



**ATTENTION ! When storing the appliance allow it to cool down before folding.**



**ATTENTION! Avoid creasing the appliance.**






GB

**⚠ ATTENTION! ⚠ DO NOT place heavy items on the throw when in storage, as deep creases or folds may damage the wiring.**

**⚠ ATTENTION ! ⚠ DO NOT use any moth proofing chemicals.**

## TROUBLE SHOOTING

These appliances are built to the very highest of standards. There are no user serviceable parts. Follow the solutions if the unit fails to operate. You can also refer to the trouble shooting on our website [www.dreamlanduk.co.uk](http://www.dreamlanduk.co.uk)

Problem	Solution
The light fails to illuminate on the control	- Check the switch is attached and that the instructions have been followed correctly
	- Check fuse has not blown
	- Check mains supply is functional
	- Check that the throw control is "ON"
	- Discontinue use and return it to our Service Centre for a safety inspection
The  time out indicator light on the control is flashing blue when switched on	Check the throw connection is pushed fully home
The supply cord or any wiring is damaged	Throw or control is faulty. If the throw is damaged, discontinue use and return it to our Service Centre for a safety inspection.
The appliance must be returned to the Service Centre for replacement to prevent a hazard. ⚠ DO NOT attempt to repair it yourself.	
Damage to the control switch	Discontinue use and return it to our Service Centre for a safety inspection
Fabric rucking or creasing	
Wear or tear on the fabric	
Heat discolouration of fabric	
The product has been misused or accidentally damaged	

## AFTER SALE ASSISTANCE

1. Pack it carefully.
2. Enclose your name, address and day time telephone number.
3. Give the reason why you are returning it.
4. If within the guarantee period, state where and when it was purchased and include a valid proof of purchase (e.g. receipt).
5. Send it to our Service Centre at the address below.

**SERVICE CENTRE** - UNIT 7 Holly House Estate - Middlewich Road - Cranage - Cheshire - CW10 9LT - Tel: 01606 837222 E-mail: [customerservice@imetec.co.uk](mailto:customerservice@imetec.co.uk) - [www.dreamlanduk.co.uk](http://www.dreamlanduk.co.uk)

## REGULAR SERVICING

The appliance must be repaired at the manufacturer's Service Centre, the defective appliance, if under guarantee, must be sent to the Service Centre for replacement repairs with a proper receipt or invoice that attests the date of sale of purchase. Your throw should be returned for a safety inspection at least once every 2 years. It should be suitably packed with control, lead and original fitted plug. To ensure minimum inconvenience, please return your throw for routine safety inspection between April and September.



GB

**SERVICE CENTRE** - UNIT 7 Holly House Estate - Middlewich Road - Cranage - Cheshire - CW10 9LT - Tel: 01606 837222 E-mail: customerservice@imetec.co.uk - www.dreamlanduk.co.uk

## ELECTRIC THROW SERVICE RECORD

<b>DATE OF PURCHASE</b>	
<b>DATE FIRST SERVICE DUE</b> (2 years from the purchase date)	<b>DATE SENT</b>
<b>DATE SECOND SERVICE DUE</b> (within 2 years of first service)	<b>DATE SENT</b>

## WARRANTY

This product is guaranteed for a period of 2 years from the date of purchase against material, mechanical and electrical defects. The warranty is binding if it is accompanied by a valid receipt of payment. This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions provided that is not connected to an unsuitable electricity supply, dismantled, interfered with in any way damaged, through misuse, fair wear and tear. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

PLEASE NOTE, THE COST OF A SAFETY INSPECTION IS NOT COVERED BY THIS GUARANTEE. A CHARGE WILL BE MADE IN RESPECT OF ANY PRODUCT RETURNED UNDER THIS GUARANTEE, WHERE NO FAULT IS FOUND.

This guarantee is offered as an extra benefit and does not affect your statutory rights as a consumer. This guarantee does not confer any rights other than those expressly set out above and in particular we shall not be liable for any indirect or consequential loss or damage. Nothing in this guarantee or the instructions relating to the product excludes, restricts or otherwise affects your statutory rights. In line with our policy of continuous development, we reserve the right to change this product, packaging and documentation without notice. If a defect appears and after checking that the throw is being used properly in accordance with the instructions, return it with a valid proof of purchase, as soon as possible to the manufacturer's Service Centre. This guarantee is valid in the UK only.

**CUSTOMER SERVICE** - UNIT 7 Holly House Estate - Middlewich Road - Cranage - Cheshire - CW10 9LT - Tel: 01606 837222 E-mail: customerservice@imetec.co.uk - www.dreamlanduk.co.uk

## DISPOSAL



The product packaging consists of recyclable materials. Dispose of these in an environmentally appropriate manner.

In accordance with EU directive 2002/96/EC, the appliance must be disposed of properly at the end of its service life. This involves the recycling of valuable substances contained within the appliance and reduces the impact on the environment. For more information, contact your local disposal company or the store where you purchased the appliance.

*Dreamland*

MI001658  
0314 (MMYY)