

## Use in small spaces

Use the dehumidifier in small and confined spaces, such as wardrobes, boxes, cupboards and cars; to prevent condensation, damp, mould, mildew and musty smells developing.



Wardrobes



Boxes



Cupboards



Cars

1

## Product features

### Colour Indicator

Is orange when the dehumidifier is dry and turns green when it has absorbed moisture to its maximum capacity.

### Vents

Moisture is absorbed through these holes

Ventilation points

On / Off switch

**LED light:**  
Illuminates when the base is on

Base

2

- Absorbing material : Silica gel (SiO<sub>2</sub>)
- Weight: 350 grams ± 5 %
- Absorbs up to 100ml of water
- AC 220~240V, 50/60Hz, 68W
- Fuse: 3 Amps

## Recharging the dehumidifier



The dehumidifier will turn green (WET) when it has absorbed moisture to its maximum capacity.



Slot the dehumidifier onto the base, plug in and switch on.



In around 2 hours, the dehumidifier will turn orange (DRY) when it is ready to use again.



The LED light illuminates when the base is on.

3

## Using the shoe airer

Use for airing damp footwear, walking shoes and sport shoes.



Slot the shoe airer onto the base.



Put your shoes onto each end of the airer, plug in and switch on. The LED light will illuminate when the base is on.



Check your shoes at regular intervals. When they are dry, switch off the base and unplug.

- Place each end of the shoe airer inside each shoe.
- Shoes will take approximately 1 hour to dry.
- Do not use the shoe airer for longer than 1 hour at a time, this may damage your shoes.
- Be careful when using this airer with shoe insoles. Some insoles may be affected by high temperatures and will need to be removed before airing. Check with the manufacturer if in doubt.
- Check your shoes at regular intervals.

4

## Safety Cautions

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact a qualified electrician.
- Do not use this appliance if the lead is damaged. If the lead is damaged it must be replaced with a special lead by a qualified electrician.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those included.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or lid in water or other liquids.
- Do not leave the lead hanging over the edge of a table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.

5

- This appliance should be used as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 04/108/EC (Electromagnetic Compatibility) and 06/95/EC (Safety of Domestic Electrical Appliances).
- WARNING: A cut off plug inserted into a 13amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
- CAUTION: the plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Do not touch the ventilation points after using the appliance, they will be hot.
- Only recharge the dehumidifier if the colour indicator has turned green and it has absorbed moisture to its maximum capacity.
- The recharging of the dehumidifier will vary according to the humidity level of the environment and seasonal changes.
- The dehumidifier and shoe airer will generate heat and become warm when used with the base unit. This is completely normal, keep other objects at least 10 cm away from the appliance when plugged in and in use.
- Recharge the dehumidifiers and plug in the shoe airer away from other objects in an open space with good airflow, to allow moisture to be reabsorbed into the air. Do not use the appliance in a hot environment, use at room temperature.

6

## Safety Cautions

- Keep out of reach of small children
- Contains small parts which may cause choking.
- Avoid contact with oil, grease and water.
- If the beads come into contact with skin, wash the area immediately, and dispose of the beads.



Design & Manufactured: Drytech Corporation Ltd.  
Address: No. 34-3, Tsai Liau, San Hsieh Li, Chia Li Dist., Tainan City, Taiwan  
TEL: +886-6-7265676 FAX: +886-6-7265425  
Email: sales@drybox.com.tw  
Website: www.drybox.com.tw

7



## Small Space Electric Dehumidifier Instructions

