

"House mate"™



Our SHOWER HEAD DESCALER KIT

Multi-use concentrated thick gel formula

CLEANS UP TO
4+
SHOWER HEADS



WARNING

KEEP OUT OF THE REACH OF CHILDREN.
May cause severe irritation to eyes and skin.
Wash hands thoroughly after handling.
Wear protective gloves/protective clothing/eye protection/face protection.
IF IN EYES: Irrigate immediately and copiously with clean water for at least 10 minutes. If irritation persists, obtain medical advice immediately.
SKIN CONTACT: Remove contaminated clothing. Drench skin with plenty of water. If large areas of skin are damaged or if irritation persists, obtain medical advice immediately.
IF SWALLOWED: Do not induce vomiting. Seek medical attention URGENTLY.
Contains 1.5-4% AMMONIUM FORMATE/FORMIC ACID.
Store in a cool (20° C) dry place, in full tightly closed packaging, protected from sunlight.

House Mate™ Shower Head Descaler Kit contains 500ml thick cleaning gel, 2 bags, 2 pairs of disposable impermeable gloves and 1 applicator brush.




House Mate is a registered trade mark of RDi International Ltd, Unit 4 Park Farm, CM77 8JX. Manufactured in the UK.

500ml e

0800 074 7788

www.house-mate.info

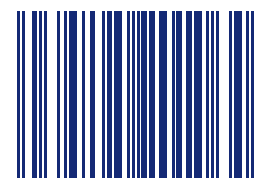

5 039295 201064 >

ALL YOU NEED TO DESCALE
YOUR SHOWER HEAD



POWERFUL
CLEANING GEL



BRUSH



2 PAIRS
OF GLOVES



2 BAGS
FOR 2 CLEANS

"House mate"™



Our SHOWER HEAD DESCALER KIT

Multi-use concentrated thick gel formula

CLEANS UP TO
4+
SHOWER HEADS



ALL YOU NEED TO DESCALE
YOUR SHOWER HEAD



POWERFUL
CLEANING GEL



BRUSH



2 PAIRS
OF GLOVES



2 BAGS
FOR 2 CLEANS

- ✓ Cleans up to 4+ shower heads
- Also ideal for:
- ✓ Kettles
- ✓ Coffee Machines
- ✓ Steam Irons

DIRECTIONS: For best results, we suggest all items that can be unscrewed/dismantled are cleaned using the cleaning bag(s) provided.

Non-removable items: The product can be applied undiluted from the bottle using the special applicator brush provided.

SHOWER HEADS/OTHER REMOVABLE OBJECTS:

Add descaler and warm water in a ratio of 1 part descaler to 3 parts water to the cleaning bag, ensuring there will be enough solution to cover the object(s) fully. Gently squeeze the bag to ensure the descaler is thoroughly mixed with the warm water. Place the object(s) into the cleaning bag 'face down' so that the mixture can enter inside the objects being cleaned. Before sealing, flatten the cleaning bag and get as much air out of the bag as possible, then close the seal. Place the bag on a suitable surface, ensuring the object is fully immersed. Leave for 4 hours or until fizzing stops, then remove from bag which can be re-used after cleaning with water. Discard of solution safely and rinse away any residue. Agitate and remove any stubborn limescale using the toothbrush end of the supplied applicator brush. Rinse the cleaned object thoroughly with cold water and dry.

NON-REMOVABLE OBJECTS:

Apply generous quantities of descaler neat using the applicator brush provided. Ensure the brush is fully 'loaded' with descaler when applying. Leave until fizzing stops. The higher the concentration of limescale, the longer the descaler should be left to work. For really stubborn areas, reapply descaler as above. Areas of built-up limescale can be dislodged using the small toothbrush end of the applicator. Difficult to reach areas can also be cleaned using the smaller toothbrush end. Rinse the cleaned object thoroughly with cold water.

KETTLES: Add 150ml of descaler to your kettle filled with warm water, two thirds full. Leave for 4 hours or until fizzing stops, then empty kettle. Refill with clean water, boil, and flush out again before use.

COFFEE MACHINES: Pour 150ml of descaler and 600ml cold water into the reservoir. Switch machine on for 1 minute. Switch machine off and leave for 60 minutes. Boil through remainder of descaler solution. Boil through twice with clean water.

STEAM IRONS: Refer to manufacturers cleaning instructions before descaling. Add 50ml of descaler to water container of hand water iron. Top up water container with warm water and set control to steam position. Gently shake iron over sink until solution starts to drain through the steam holes, allowing to drain for 30 minutes. Rinse thoroughly with cold water and dry.

NOTES/GENERAL INSTRUCTIONS:

- For extremely stubborn limescale, increase the concentration of formula used.
- Always test on an inconspicuous area before use.
- Use within 24 months of opening.