

Caution – Important Safeguards

When using an electrical appliance, basic precautions should always be observed, including the following:

To reduce the risk of fire, electric shock, or injury read all safeguards and instructions carefully before using this product and retain for future reference.

- Do not leave the appliance connected to an electrical outlet when it is not in use.
- Do not operate this appliance if the cord or plug has been damaged or after the appliance has malfunctioned in any manner.
- Never disconnect the cord by pulling it from the outlet; grasp the plug and pull to disconnect.
- Do not pull or carry by the cord, use the cord as a handle, close a door on the cord or pull the cord around sharp corners or edges.
- Do not allow the cord to make contact with hot surfaces.
- Do not use extension cords or outlets with inadequate current rating. Care should be taken to arrange the cord so that it can not be pulled or tripped over.
- Do not run any of the attachments over the cord or allow the cord to come into contact with the roller brush.
- Do not handle the plug or vacuum cleaner with wet hands.
- Use only as described in this manual and use only the manufacturer's recommended attachments and accessories.
- Do not treat it as a toy. Close attention is necessary when used near children, pets or plants.
- Do not use outdoors or on wet surfaces.
- Do not put any objects into the openings, or use with any opening blocked. Keep all openings free of dust, lint, hair, and anything which may restrict the airflow.
- Keep hair, loose clothing, fingers and all parts of the body away from the openings and moving parts.
- Do not pick up hot coals, cigarette butts, matches or any hot, smoking, or burning objects.
- Avoid picking up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up flammable, toxic or combustible materials, or use in areas where they may be present.
- Take extra care when vacuuming on stairs and keep your work area well lit.
- Unplug the appliance from the electrical outlet before adding or removing components or cleaning.
- Turn off all controls before unplugging the cleaner from the mains outlet.
- Store your vacuum cleaner indoors in a cool, dry area.
- This unit is for household use only.

SAVE THESE INSTRUCTIONS

Ensure the above safety precautions are understood

Trouble Shooting Guide

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Hand Vacuum Cleaner will not operate.	1. Power cord not firmly plugged into outlet. 2. No power in wall outlet.	1. Plug unit in firmly 2. Check fuse or breaker. Replace fuse/reset breaker.
Hand Vacuum Cleaner will not pick-up or suction power is weak.	1. Dust cup is full. 2. Hose (5) clogged. 3. HEPA Filter needs cleaning or replacing. 4. Belt stretched or broken.	1. Empty dust cup (see page 5). 2. Turn unit off and unplug from wall outlet. Remove HEPA Filter and check for objects in air duct and remove. 3. Clean or replace HEPA Filter. (see page 5) 4. Replace belt. (see page 6)
Dust escaping from Hand Vacuum Cleaner.	1. Dust cup is full. 2. HEPA Filter is not installed correctly. 3. There is a puncture/hole in HEPA Filter.	1. Empty dust cup. 2. Review HEPA Filter instructions. (see page 5) 3. Replace HEPA Filter. (see page 5)
Hand Vacuum Cleaner hose or attachments will not pick-up.	1. Hose clogged. 2. Dust cup is full.	1. Remove hose and/or bushes. Remove obstruction from hose. 2. Empty and clean dust cup.

Guarantee and Service Information

Home-tek electrical appliances are fully guaranteed for one year from the date of original purchase against any deficiency or fault in manufacture.

This guarantee in no way prejudices your rights under common law and is offered as an addition to consumers' statutory rights.

This guarantee does not cover normal wear and tear, damage caused by overloading, negligence, accident or improper use. Any change or modification made by the purchaser or user to the appliance will invalidate the guarantee, as would any attempted repair.

The guarantee applies only when the appliance has been operated in accordance with the instructions and connected to an electricity supply, which matches that shown on the base of the appliance.

The guarantee will be rendered invalid if the product is resold. The product must be used solely for domestic purposes.

Operating Instructions

NOTE: The HEPA Filter must be used when operating the hand vacuum.

Using The Unit As A Hand Vacuum Cleaner

Insert the dusting brush/hose connector into the brush chamber exhaust port and locate the flexible hose into the hose clip at the rear. (see Fig 1)

Cleaning With the Hose

To use the hand vacuum with only the hose and the dusting brush or crevice tool:

- Rotate the brush cover by pushing on the brush cover release button until it clicks in place. (fig. 2)
- Remove the flexible hose from the brush chamber exhaust port and take the hose out from the hose clip. (fig. 3)
- To use the flexible hose with the dusting brush, hold the hose in one hand and with the other, pull out the dusting brush and turn the brush anti-clockwise to lock the extended brush in place. (fig. 4 below)



- To use the flexible hose with the crevice tool, make sure that the brush is in the storage position and insert the crevice tool into the opening of the hose. (fig. 5)

CAUTION: The Hand Vacuum is a very powerful unit. Make sure that you hold it firmly, otherwise it can slip out of your hand and cause injury.

IMPORTANT: After each use always remove and clean the HEPA Filter and debris screen. (see page 5 for cleaning instructions)

WARNING: Failure to do this will reduce the suction power, may lead to the motor over-heating and will invalidate your warranty.



Figure 1

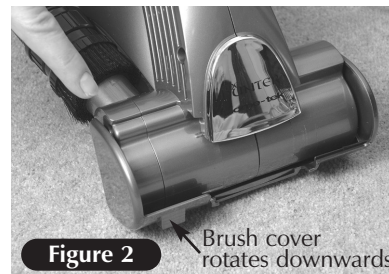


Figure 2



Figure 3



Figure 5

Cleaning and Maintenance

Cleaning & Changing the HEPA Filter

WARNING: Always unplug the unit from electrical outlet before opening the dust cup container.

IMPORTANT: Do NOT use the HEPA Filter cartridge without the debris screen in place.

CAUTION: The suction hose must be free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

Important, Please Note: The HEPA Filter & debris screen will stop most of the tiniest dust particles and airborne allergens from re-entering the air you breathe. In fact it stops 99.97% of all particles as small as 0.3 microns- many times smaller than a human hair!!! Because of this incredible filtration performance, the HEPA Filter will quickly accumulate dust inside the white filter folds, many fine dust particles that are difficult to see but which will eventually block or reduce your suction power if not properly maintained. Clean the HEPA Filter and debris screen after each use as described in this section.

- To remove the dust cup container, hold the unit in the upright position to prevent the dust from falling out of the dust cup. (Fig. 6)
 - To open the dust cup container, push the dust cup release button and remove the dust cup container by hinging away from the handle. (Fig. 7)
 - Rotate the lower dust cup anti-clockwise to separate it from the filter chamber. Empty and clean the dust cup. (fig. 8 below)
- Do NOT over tighten the dust cup when re-fitting.

Figure 6



Figure 8

- Pull the HEPA Filter to remove from the filter chamber. A lug is provided in the centre of the filter to ease removal (fig. 9)



Figure 7



Figure 9

- Separate the debris screen from the HEPA Filter cartridge by grasping the debris screen with one hand and the filter frame with the other and pull apart. (fig. 10)

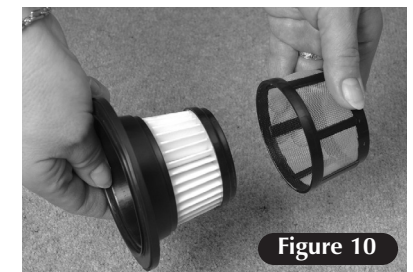


Figure 10

- Vigorously tap the HEPA Filter on a hard surface until no more dust is observed falling out from between the pleats of the filter, a soft brush can be used as required. (fig. 11)
- Tap the debris screen clean or rinse under a tap until clean. Remember that the debris screen must be completely dry before reinstalling in the vacuum.
- Replace the debris screen on the HEPA Filter and reinstall filter assembly in the vacuum. (not shown)



Figure 11

PLEASE NOTE: The white pleated filter material in the HEPA Filter will discolour over time, this is NORMAL. If the HEPA Filter is properly cleaned after each use and suction does not return to near 100%, then we suggest that the HEPA Filter is replaced.

Please Note: The HEPA Filter is washable. It should, however, be replaced every (6) months to ensure peak performance of your vacuum cleaner.

Important: Make sure that the HEPA filter is completely dry before re-installing back in the vacuum cleaner.

Belt Replacement Procedure

- Remove brush safety cover (1)
Hinge forward then spring off the edge location using slight sideways pressure on one end.
- Remove casing screw adjacent to silver shield cover. With screw removed the shield will slide down 3-4mm then lift away.
- Remove 2 screws on the end cover (9) where the flexible hose fits, note one screw goes through the wheel. Observe the position and number of washers, lift the cover (9) away this will expose the brush roller that can now be lifted out of the brush chamber. Note one end of the brush bearing cap is hexagonal this end goes first when re-assembling and locates at the end of the brush chamber. Take this opportunity to remove all debris from the brush and bearing caps.
- Thread a new belt over the brush, place brush back into the chamber locating it at the hexagonal location. Replace the end cover (9) note this locates in a slot in the casing also on the brush end cap. Replace screws and wheel check that the brush rotates freely. Place a screwdriver through the belt from left to right and lever the belt over the drive shaft. The front face of the belt should be visible and disappearing over the motor shaft. Turning the shaft clockwise should wind the belt down the shaft. Switch on the vacuum momentarily to confirm this before re-fitting the shield if the belt is thrown off it has been fitted onto the shaft in the wrong direction re-fit belt. When you are sure all is right re-fit the silver shield, by slotting into grooves and sliding upwards, replace the screw and re-fit the brush safety cover (1).

IMPORTANT

Electrical Requirements:

Please ensure that the voltage shown on the rating plate of your appliance corresponds with your household electricity supply which must be A.C. (Alternating Current).

Appliances supplied with a fitted plug:

If the electrical sockets in your home are not suitable for the plug fitted to this appliance, the plug should be removed and an appropriate one fitted.

Note: Any plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.





Notice: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice.

Main Components

1. Brush Safety Cover
2. On/Off Switch
3. Dust Cup Release Button
4. Hose Clip
5. Flexible Hose
6. Dusting Brush
7. Dust Cup
8. Main Unit
9. Brush Chamber Exhaust Port
10. Hepa Filter
11. Debris Screen
12. Filter Chamber
13. Cover Release Button
14. Crevice Tool

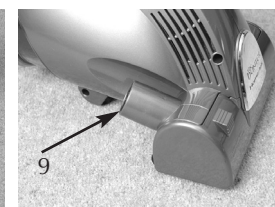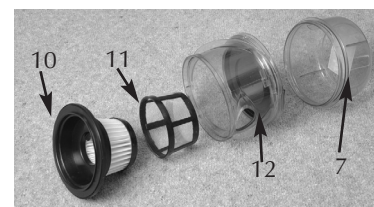

PRECAUTIONARY MEASURES

Important: If the suction opening of the hose is BLOCKED, switch off the vacuum cleaner and remove the blockage before you start the unit again.

- Do not operate the vacuum cleaner too close to heaters or radiators.
- Before you start vacuuming, make sure to pick up and remove large or sharp objects that might damage the HEPA Filter.
- Do not use without HEPA Filter in place.
- When vacuuming fine dust particles such as talcum powder, flour or any other fine dust, empty the dust cup and frequently tap the dust cup filter clean to avoid over heating the motor.

After Sales Service Returns Form - Guarantee Slip

If your appliance requires attention:

1. Firstly check the operating instructions supplied to make sure the failure is not due to a problem you can rectify yourself.
2. If the appliance is still under warranty return it to the retailer, their details will appear on your receipt.

In order to enjoy the benefits of the one-year guarantee, please retain your proof of purchase, ensuring that it shows the date of purchase, or ask your retailer to stamp this guarantee slip with the date of purchase. Please retain in your possession in case of future claim. Proof of purchase will be required within the guarantee period.

Model No:

Name:

Address:

Postcode:

Date of Purchase:

Retailers Name:

Retailers Address:

.....

.....

Home-tek Customer Services

Home-tek International (UK) Ltd
Roe Head House, Far Common Road
Mirfield, West Yorkshire WF14 0DQ
Telephone: 01924 491177
Fax: 01924 491166

IMPORTANT: PLEASE NOTE, DUE TO OUR CONTINUED DEVELOPMENT OF PRODUCTS, WE RESERVE THE RIGHT TO ALTER PRODUCT SPECIFICATIONS.

Home-tek

Hunter Hand-held Turbo Vacuum Cleaner

Instruction Manual

Model HT807

Please read these instructions fully before using this product



Home-tek The Home of Innovation