
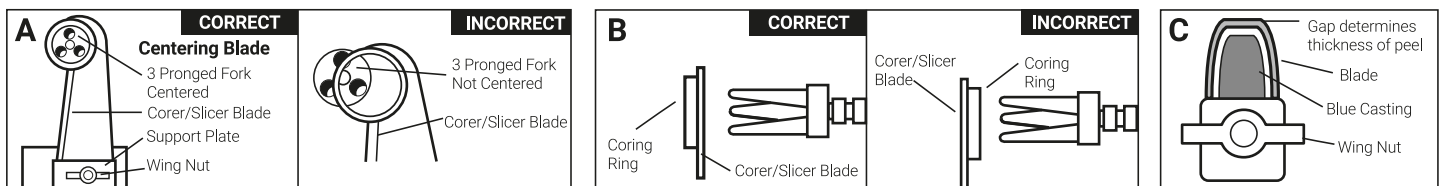


LAKELAND

Apple Master

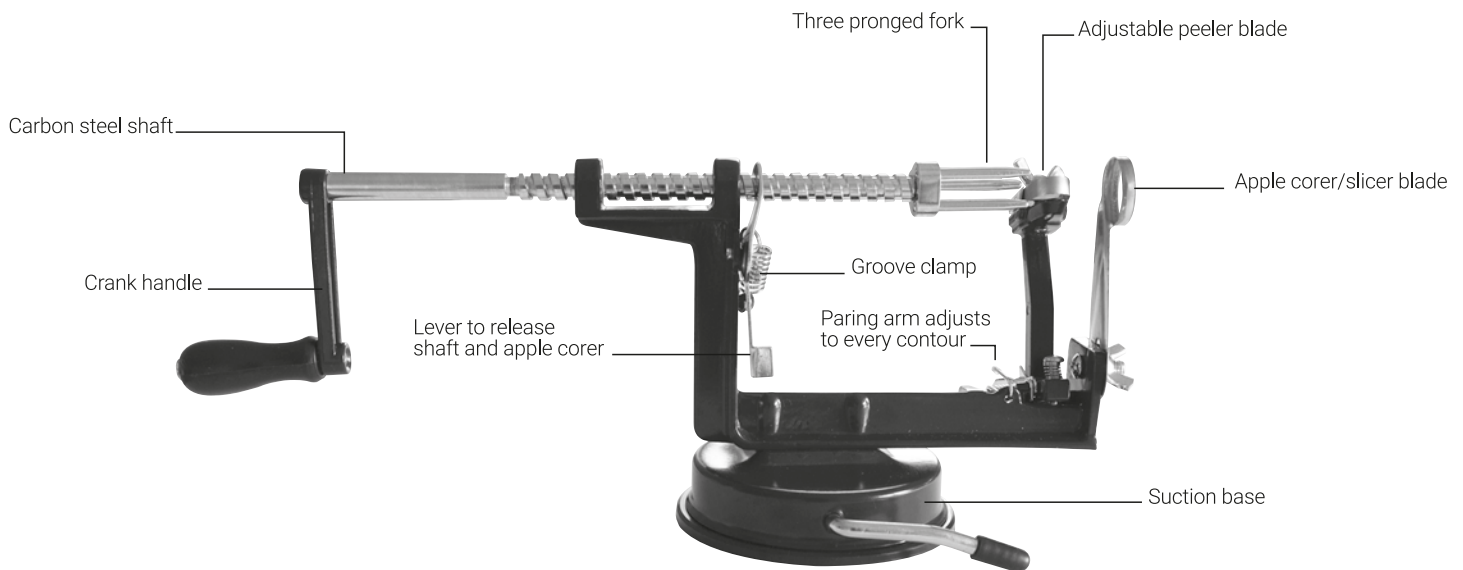

Caution! Please be careful when handling this machine – blades are sharp.

Setting up your Apple Master

1. Secure machine onto a clean, dry, smooth surface, such as a counter or table top, by turning the lever on the suction base.
2. Attach crank handle.
3. Check alignment of the three pronged fork and the position of the corer/slicer blade. They should look like diagrams A and B.

Pare, core and slice

1. Release the groove clamp by pushing down on the lever to release the shaft and pull the crank handle all the way back.
2. Push apple securely onto the three pronged fork (either end of the apple will work).
3. Simply turn the crank handle until the apple comes into contact with the blade. If necessary, to adjust the depth at which the blade peels the apple, loosen the wing nut on the peeler blade and adjust the gap between the blade and the blue casting (see diagram C). **Note:** A little adjustment goes a long way.
4. Remove the apple core by releasing the groove clamp and firmly pulling back on the crank handle. The apple core will pop off the three pronged fork.

Core and slice only

1. Carefully pull back on paring arm and flip lever to hold back paring arm.
2. Leave corer/slicer blade in position.

Cleaning

1. Immediately after use, rinse the machine with warm water and dry well. This machine is not dishwasher safe. Hand wash only.