

LAKELAND

TRAVEL KETTLE

INSTRUCTION BOOKLET



Model: 13661

LAKELAND TRAVEL KETTLE

Thank you for choosing the Lakeland Travel Kettle.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Travel Kettle is ideal for enjoying your favourite hot drink whilst on holiday, or for boiling smaller quantities of water at home. The dual-voltage kettle comes with a drawstring storage bag plus two plastic travel cups, teaspoons and a container for your tea bags, coffee etc.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	3
Safety cautions	4-5
Using the Travel Kettle for the first time	6
Instructions for use	7
Hints and tips	8
Frequently asked questions	9
Care and cleaning.....	10
Technical information	11
Electrical connections	11
Recycling your electricals	11

PRODUCT FEATURES


1. Hinged lid
2. On/off switch
3. Power indicator light
4. Handle
5. Cord and plug
6. 1000W concealed element
7. Dual-voltage dial (underside of kettle)
8. Cable storage guides
9. Teaspoons
10. Lidded divider storage container
11. Travel cups
12. 500ml stainless steel body




SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or base unit in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This Travel Kettle has been designed for the purpose of boiling drinking water only.

- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Unplug the kettle before filling with water. Take care not to fill above the MAX level as boiling water may splash out.
- To protect against electric shock, do not immerse the kettle, power cord or plug in water. Do not allow the cord or plug to get wet.
- To prevent scalding, make sure the lid is securely closed and do not open the lid whilst water is boiling.
- The kettle will get hot during use. Please do not touch the hot kettle sides, and beware of steam escaping from the spout and when opening the lid to refill.
- Unplug the kettle when not in use, and before cleaning. Grasp the plug, not the power cord. Let the kettle cool down completely before cleaning or storing away.

WARNING – HOT SURFACES

- The surfaces marked with this  symbol will get very hot during use.
- **DO NOT TOUCH** as possible injury could occur. Allow the appliance to cool completely before touching these surfaces, handling, moving or storing this appliance.
- Be careful when removing the lid. Open it facing away from you. Be careful as hot steam will escape and can burn.




USING YOUR TRAVEL KETTLE FOR THE FIRST TIME

- Unpack the Travel Kettle and remove all the packaging materials.
- Wipe the body with a clean, damp cloth and dry.
- Wash the travel cups, teaspoons and container in warm, soapy water and dry.
- Before using the kettle, fill it with fresh water, boil, then pour the water away. Repeat two to three times.

INSTRUCTIONS FOR USE

This travel kettle is dual-voltage for making drinks at home and abroad. Before using, please select the correct voltage for the country you are in by turning the dial on the underside of the kettle. The kettle may be damaged if the correct voltage is not selected.

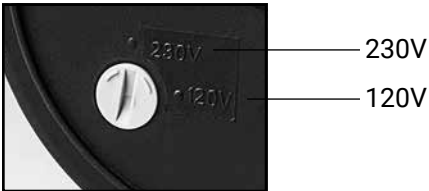

- Ensure the kettle is unplugged and open the lid.
- Fill with fresh, cold water, paying attention to the 'MAX' mark inside the kettle. Boiling water may escape from the spout if the kettle is too full. The maximum capacity is 500ml.
- Press the lid down, you will hear a 'click' when it is closed securely.
- Plug in the kettle. Press the kettle On/off switch. The indicator light will show the kettle is working.
- The kettle will switch off automatically when the water has boiled.
- To re-boil, let the kettle cool down a little before pressing the On/off switch again.
- After use, the kettle should be emptied of water. Switch off at the socket and unplug.
- Allow the kettle to cool down completely before storing in its drawstring bag.

WARNING: The kettle will be hot to touch when it is heating and for some time after it is has boiled. Avoid touching surfaces other than the handle, and use lid switch to open. Steam will escape as soon as the lid is opened.

BOIL-DRY PROTECTION

If the kettle is switched on with too little or no water, it will cut out automatically to stop it boiling dry. To reset the On/off switch, unplug the kettle and let it cool before filling with water. The kettle should now work as normal.

HINTS AND TIPS

- Only use this kettle to heat water.
- Only heat the amount of water you need to use.
- Clean and descale regularly even in soft water areas.

MINIMISING SCALE

- Empty the kettle after each use; do not allow water to stand in the kettle overnight.
- Use filtered water instead of tap water.
- Descale the kettle regularly, at least once a month. In areas of very hard water you may need to descale more often.

FREQUENTLY ASKED QUESTIONS

Question: Why won't the kettle light up when switched on?

Answer: It may not be switched on at the plug.

Question: Why is there water spitting out of the spout when boiling?

Answer: There is too much water in the kettle. Only fill the kettle to the 'MAX' mark. The kettle's capacity is 500ml.

Question: Why has the kettle cut out?

Answer: There isn't enough water in the kettle. This is a safety feature so the kettle does not boil dry. Unplug the kettle and allow it to cool down before filling and using again.

Question: Why doesn't the kettle switch off?

Answer: The lid is not securely closed. Ensure the lid is properly closed.

Question: Why is the water cloudy?


Answer: Some drinking water has limescale which goes cloudy when being boiled. This is perfectly normal.

Question: Why do drinks made with water from the kettle leave a scum in the cups?

Answer: The kettle may need descaling. Follow the descaling instructions in this manual.

CARE AND CLEANING

- Unplug the kettle and allow it to cool completely before cleaning and storing.
- Periodically check all parts before use.
- Never immerse the kettle, cord and plug in water or any other liquid.
- Wipe the kettle, inside and out, with a damp soft cloth. You may use a little mild detergent, but if you do, rinse well with clean water to avoid tainting when the kettle is next used.
- Do not use harsh or abrasive, or alkaline cleaning agents or solvents.
- Store the kettle with the power cable loosely coiled. You can pull out the two cable storage guides on either side to help locate for storing.

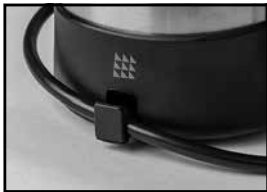

- Never wrap it tightly around the kettle.
- Do not place in the dishwasher.

DESCALING

- Limescale may be white, coloured, even rusty-looking, but it's normally visible on the floor of the kettle. Phosphate scale isn't generally visible, but it's there, even in soft water areas.
- All scale causes overheating and reduces the kettle's life.
- Even with soft water, descale regularly, to help keep your kettle in working order. Use a descaler suitable for plastic products (all kettles have plastic parts).
- When descaling has finished, rinse and boil the kettle several times and discard the water.

TECHNICAL INFORMATION

- Power: 1000W.
- Voltage: 120-230V.
- Frequency: 50/60Hz.

ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 10 AMP FUSE

Use a 10 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).



RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.



Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 **lakeland.co.uk**