


Robert Welch.

EASY TO REPLACE CERAMIC WHEEL

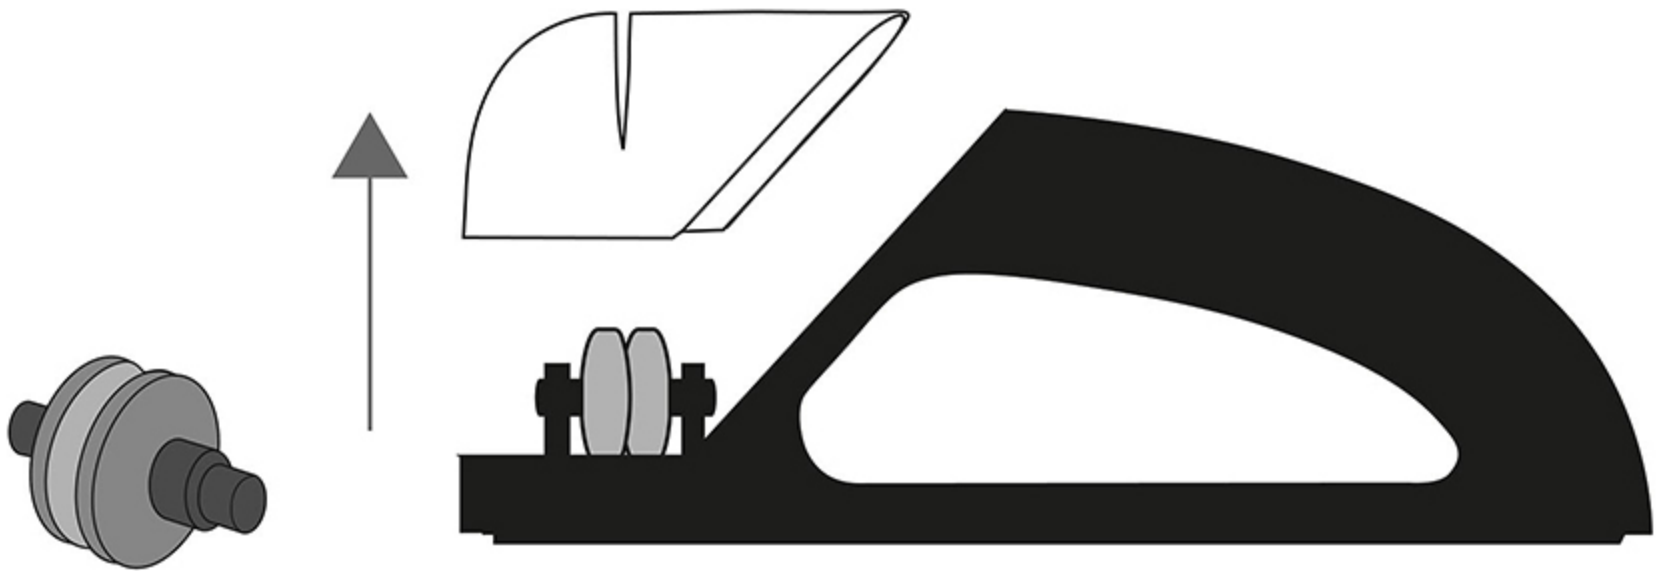

The ceramic wheel should be replaced every 12-24 months.
A replacement wheel unit is available. The ceramic wheel is sold separately and in pairs.

- To replace, pull upwards on the plastic cover to expose your existing ceramic sharpening wheel.
- Remove and replace with the new wheel.
- Push on the plastic cover to secure.