

 LAKELAND

USER MANUAL




TIMELESS
COLOUR

LATTEMAGIC

Model: 15309
Helpline No: 015394 88100

The Lakeland Guarantee....
is probably the simplest guarantee in the world!
If you are not satisfied at any time, you receive your money back!
This is our promise.

Lakeland
Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

INTRODUCTION

Thank you for choosing the Lakeland Lattemagic which can transform home-made, cappuccinos and hot chocolates into coffee-shop perfection at the touch of a button. To help you make the most of your purchase, please take a few moments to read these instructions before using the Lattemagic for the first time, and keep them in a safe place for future reference.



FEATURES

1. Transparent lid
2. s/s jug with non-stick coating
3. Button for heating milk
4. Button for cold milk
5. Base unit with power cord
6. Whisk for frothing milk
7. Whisk for heating milk
8. Fixing clip for spare whisk

Power: 600W

Operating Voltage: 230V-50Hz

IMPORTANT SAFEGUARDS

When using this Lattemagic, please follow these basic safety precautions.

1. Please read all instructions before use
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. This Lattemagic is for household use only. It is not suitable for commercial use, or for use outdoors.
4. Using the Lattemagic with accessories not recommended by the manufacturer may result in fire, electric shock or injury, and should be avoided.

5. Place the Lattemagic on a level, sturdy and dry surface.
6. Do not let the power cord hang over the edge of your table or worktop, where a child could grab it or people could trip over it. The power cord must not become tangled or touch any hot surfaces.
7. Do not place the Lattemagic on or near a hot gas or electric burner, or in or near a heated oven.
8. Do not place the appliance on a polished wood, or a very delicate surface
9. Do not operate without milk in the jug
10. After frothing or heating allow 2 minutes for the thermostat to reset and the frother to be ready for use again. To shorten this time, rinse with water and wipe dry after each use.
11. The unit will become hot during use – do not touch the metal parts, the filter holder or its housing when the appliance is in use.
12. To protect against electric shock, never immerse the Lattemagic, power cord or plug in water or any other liquid. Do not let the power cord or plug get wet.
13. The Lattemagic is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the milk frother.
14. Do not use the Lattemagic if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair or replacement. Never try to repair the milk frother yourself as this may cause electric shock.

BEFORE USING YOUR LATTEMAGIC FOR THE FIRST TIME

Carefully unpack the Lattemagic and remove any packaging. Wipe the inside of the milk frother with a slightly damp cloth and dry with a soft cloth.

Using the milk frother

1. Choose the appropriate whisk and fix into the jug. The other whisk that is not being used can be placed into the fixing in the lid.
2. Pour milk into Lattemagic. Ensure that you don't exceed the maximum capacity indicated inside
3. Press button to start milk frother

Whisk	Function	Max capacity of milk	Time
	Frothing cold milk	Min/Max 75ml/125ml	60s/90s
	Frothing & heating	Min/Max 75ml/125ml	60s/90s
	Heating (small amount of froth)	250ml	Approx 2mins

TO FROTH AND HEAT MILK OR HEAT MILK

Press the top button and the red light will illuminate and the middle light turns blue at the same time. After approx 60-80 seconds, the red light will switch off and the blue light will continue to flash for 20 seconds..

TO FROTH MILK

Press the bottom button for 2-3 seconds until the blue light illuminates. After approx. 1 minute, the blue light will switch off and the middle power light will continue to flash for 20 seconds

HELPFUL HINTS

For best results use whole milk

Milk will be heated too approximately 65-70°C. This is the ideal temperature to ensure the flavour of your drink is not impaired.

The Lattemagic is designed to heat and froth milk. If you add flavourings, coffee granules or hot chocolate powder in the frother ensure you thoroughly clean immediately after using.

CARE AND CLEANING

Before cleaning the Lattemagic, ensure it is switched off and the power cord is unplugged from the mains socket.

Jug- Wash inside with warm, soapy water and dry thoroughly. Do not use abrasives The exterior of the jug should be cleaned using a soft cloth, do not use abrasive cleaning products or metal brushes as these may cause damage to the stainless steel surface.

Lid and whisk – Clean in warm, soapy water and dry thoroughly.

CAUTION: the jug and base unit must never be immersed in water or any other liquid.

SERVING SUGGESTIONS

With frothed milk

Cappuccino

1/3 espresso

Add 2/3 frothed milk

Top with cocoa powder

Latte Macchiato

Pour frothed milk in a tall glass

Add espresso carefully along rim of the glass.

With hot milk

Caffè Latte

1/3 espresso

Add 2/3 heated milk and stir.

Hot Chocolate

Pour heated milk into a large mug

Add chocolate powder and stir to mix.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point.




ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

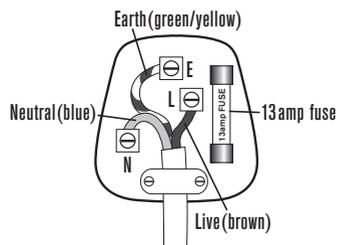

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).