

LAKELAND

INSTRUCTION BOOKLET

SMART TOUCH INDUCTION HOB



Model: 17883

LAKELAND SMART TOUCH INDUCTION HOB

Thank you for choosing the Lakeland Smart Touch Induction Hob.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

This lightweight, slim hob is easy to store in your kitchen, wipes clean easily, heats up quickly, makes cooking simple, quick and is very energy efficient.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features.....	3
Safety cautions.....	4-5
Using your Smart Touch Induction Hob for the first time.....	6
Instructions for use	7-8
A guide to cooking modes	9
Hints and tips.....	10
Frequently asked questions.....	11
Care and cleaning	12
Electrical connections.....	13
Recycling your electricals	13

PRODUCT FEATURES


1. LED display showing selected mode
2. Child safety lock
3. Timer button
4. Power/temperature display
5. Heat control dial
6. On/off button
7. Control panel
8. MODE button
9. Cooking plate
10. Air cooling vents

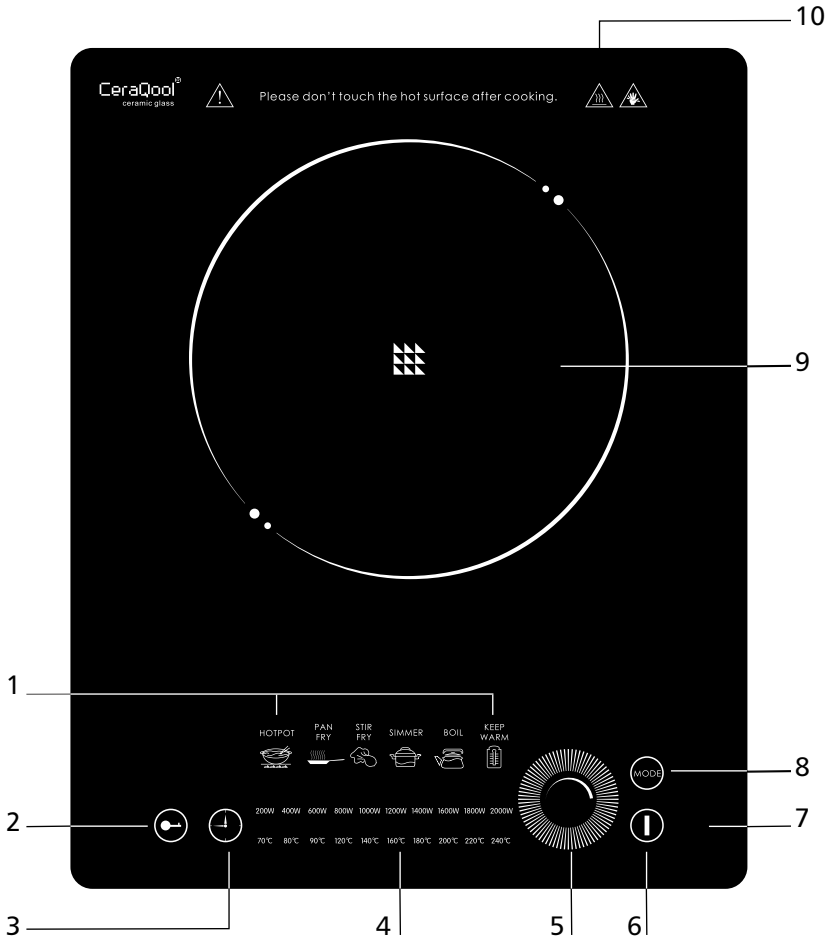


SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. If the lead is damaged it must be replaced with a special lead. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- **DO NOT** place the induction hob on steel or aluminium surfaces.
- Never place or use the appliance on or close to a cooking hob or other sources of heat.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or lid in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for preparation of food as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.

- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- The Smart Touch Induction Hob should be sited at least 10cm away from a wall, so the airflow through the hob is not compromised. **DO NOT** insert anything in the air outlets.
- **DO NOT** place metal or magnetic articles such as credit cards, computer discs etc. which are affected by magnetic fields on the hob.
- The Smart Touch Induction Hob heats very rapidly, so place the food into the pan before turning the hob on. Heating an empty pan can discolour the metal and may warp the base.
- Place all pans centrally on the glass. Do not use a pan with a base larger than 26cm as the heat created may cause the plastic casings to deform.
- **DO NOT** use a heat diffuser or place any other material between the hob and the pan when in use.
- If the glass hob surface is cracked, turn the power off immediately and do not use.
- The hob has fully integrated safety features including pan detection, boil dry protection and auto shut off.
- **DO NOT** leave the induction hob unattended when in use.

WARNING – HOT SURFACES

The surfaces marked with this  symbol will get very hot during use.

DO NOT TOUCH as possible injury could occur. Let the appliance cool completely before touching these surfaces, handling or moving this appliance.



NOTE: Customers with implanted cardiac pacemakers or other electronic medical implants may be advised by their doctors to avoid proximity to induction cooking surfaces and other sources of magnetic fields. We therefore do not recommend the Lakeland Smart Touch Induction Hob for sale to these customers.

USING YOUR SMART TOUCH INDUCTION HOB FOR THE FIRST TIME

- Unpack the Smart Touch Induction Hob, remove all the packaging materials.
- Before first use, wipe the hob surface with a clean damp cloth and then a clean dry cloth.
- Place the Smart Touch Induction Hob on a flat surface near a socket, at least 10cm away from walls and other surfaces to allow airflow through the fan vents. Do not insert anything in the fan vents.
- **DO NOT** place the induction hob on steel or aluminium surfaces.
- Never place or use the appliance on or close to a cooking hob or other sources of heat.
- The Smart Touch Induction Hob is now ready to use.

INSTRUCTIONS FOR USE

SELECTING THE CORRECT PAN

- Induction cooking uses an electromagnetic coil to convert energy into heat. When the hob is turned on and when an **induction suitable** pan is in place on the hob, a magnetic field is generated which heats then pan and therefore the food inside it.
- Only use flat-bottomed pans that are induction suitable with this hob. If you are unsure whether the cookware you have it suitable for use with this hob test by holding a magnet to the base of the pan. If you find that the magnet sticks, the pan can be used on the hob. If the cookware is unsuitable for use, the hob will not detect the pan.
- The hob is suitable for pans with a **base diameter of 12cm – 26cm**.
- Metal cooking utensils are not recommended as they can be heated through the induction hob if left in the pan whilst cooking. Use heat resistant, wooden or silicone utensils.

TURNING ON AND OFF

- Place the pan with food on the hob. Turn the hob on by pressing and holding the On/off button. The six red mode lights will blink on and off.
- To turn the hob off, press the On/off button. The fan will run automatically for a minutes to cool the hob.

USING THE MODE AND TEMPERATURE FUNCTIONS

- Press the MODE button until the LED below the mode you require is illuminated on the display. The hob will make a small sound as the electromagnetic coil is activated and the magnet starts to heat.
- To change the power/temperature sweep you finger around the heat control dial. Red indicator lights will highlight the power and equivalent temperature on the display.

NOTE: The power/temperature can only be changed on the Hot Pot, Pan Fry and Stir Fry modes. The power/temperature is pre-set on the other modes, see 'A Guide to Cooking Modes' table.

TIMER

This induction hob has a timer function that allows you to cook for a certain amount of time before switching off, this prevents food from boiling dry or burning.

To set the timer:

- Set your dish to cook on the desired 'Mode' setting, see 'A Guide to Cooking Modes' table.
- Press the 'Timer' button, the time is shown in minutes, and the display will show '000' to indicate that no time has been set. Sweep your finger around the heat control dial to set your desired length of cooking time.






 
NOTE: On 'Simmer' mode the default time is 120 minutes.

- The hob will wait for 6 seconds after you have set the time before heating. The display will then countdown the time left to cook.
- At the end of the timed session 'End' will be displayed. The hob will turn off and the fan will run for a minute to cool down the hob.
- During timer cooking on the Hot Pot, Pan Fry and Stir Fry modes you can adjust the heat using the heat control dial.
- To stop the timer, turn the hob off and back on again and it will reset to '000'.

CHILD SAFETY LOCK

To turn on the lock when you have selected the mode and power/temperature, press the 'Child safety lock' button for 2 seconds. A red light above the button will indicate the lock is on. When the lock is on only the On/off switch can be used, all the other buttons will be locked. Press the 'Child safety lock' button again for 2 seconds to unlock the hob.

A GUIDE TO COOKING MODES

MODE	POWER/TEMPERATURE	TIMER
<p>Hot Pot</p> 	<p>Power/temperature can be adjusted manually. When the power/temperature is too high the hob will automatically switch off.</p>	<p>The timer is 'off' by default and can be set manually.</p>
<p>Pan Fry</p> 	<p>Power/temperature can be adjusted manually.</p>	<p>The timer is 'off' by default and can be set manually.</p>
<p>Stir Fry</p> 	<p>Power/temperature can be adjusted manually. When the power/temperature is too high the hob will NOT switch off, it automatically regulates the temperature.</p>	<p>The timer is 'off' by default and can be set manually.</p>
<p>Simmer</p> 	<p>Power/temperature cannot be adjusted manually. The hob is programmed to first use medium-high power to reach boiling point, then it will automatically decrease for simmering. The simmering time is the remaining time shown on the timer. 'END' will be displayed when finished.</p>	<p>The timer is 'on' and automatically set to 120 minutes. You can adjust the time by pressing the 'Timer' button and sweeping your finger around the heat control dial to set your cooking time.</p>
<p>Boil</p> 	<p>Power/temperature cannot be adjusted. The hob is programmed to boil water as quickly as possible. The unit senses the rising temperature and will let the water boil for a while longer and then the hob symbol will automatically turn off. It will show 'END' on the display when finished.</p>	<p>The timer is 'off' by default and can be set manually.</p>
<p>Keep Warm</p> 	<p>Power/temperature cannot be adjusted. The hob will keep food warm at about 60°C.</p>	<p>The timer is 'off' by default and can be set manually.</p>

HINTS AND TIPS

- It will take you a few times using the Smart Touch Induction Hob to understand how quick and efficient it is and how to adapt your cooking times accordingly.
- The first few times you use this hob it may seem very fast, do not use the timer, watch your food so you can alter the heat, if required.
- As the hob is so efficient, you may want to start with a lower cooking temperature that you usually would.
- The hob may not look hot after use, but it could be very warm, do not touch it until it has completely cooled down.

FREQUENTLY ASKED QUESTIONS

Question: Why does the hob not recognise the pan I have placed on it?

Answer: The pan may not be compatible with the induction hob. Check that a magnet will stick to the base of the pan, if not, it will not work with this hob.

Question: Why does my food keep burning?

Answer: As the hob is very efficient it often cooks faster at a lower temperature than gas or electric hobs. Reduce the cooking time and temperature from what you would if using other hobs.

Question: Why has the hob started cooking my food but then turned itself off?

Answer: Your pan may have spilled over. If so, lift the pan, dry the hob and return the pan then turn on again.

Question: Why has the hob stopped cooking and why is 'E1' or 'E2' appearing on the display?

Answer: The power source voltage is too high or too low. Turn off the hob and check the power supply is compatible with the voltage on the rating label.

Question: Why has the hob stopped cooking and why is 'E3' or 'E9' appearing on the display?

Answer: Your pan is overheating or is dry cooking. Remove the pan from the heat and allow it to cool. Wait until the hob is cool then add oil or water to the pan and resume cooking.

Question: Why has the hob stopped cooking and is displaying 'E4' or 'E10'?

Answer: The fan air cooling vent may be blocked, the fan has stopped running, or it is too hot in the room you are using the hob in. Switch the hob off and make sure there is nothing blocking the air cooling vent. Remove any items from around the hob which may be emitting heat. Contact the Lakeland customer care team on 015394 88100 if the problem continues.

Question: Why has the hob stopped cooking and is displaying 'E5', 'E6', 'E12' or 'E13'?

Answer: There is a fault with the temperature sensor. Contact the Lakeland customer care team on 015394 88100.

CARE AND CLEANING

- Unplug the Smart Touch Induction Hob and allow it to cool completely before cleaning.
- To clean the unit and control panel, wipe with a clean, damp cloth and dry before storing.
- Do not use any abrasive cleaners, steel wool or abrasive materials or cleaners. You may use specialist glass hob cleaner to wipe the surface, if required, but always try on a small area before first use.
- Periodically check all parts before use.
- Never immerse the hob in water or any other liquid.
- Store the Smart Touch Induction Hob with the power cable loosely coiled. Never wrap it tightly around the hob unit.

ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 13 AMP FUSE

Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.



Lakeland

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ

Tel: +44(0)15394 88100 www.lakeland.co.uk