

Sage™ by Heston Blumenthal® Customer Service Centre

Freephone (UK Landline): 0808 178 1650

Mobile Calls (National Rate): 0333 0142 970

www.sageappliances.co.uk
customerservice@sageappliances.co.uk

Register your product and get more from your purchase

Product registration takes only a few minutes and ensures a record of your purchase. Registration also makes it easier to get support and advice on any questions or issues that you might have in the future. If you wish, we can also send you free recipes and additional hints and tips on making the best of your appliance.

➤ Go to www.sageappliances.co.uk and click on 'Product Registration'.

What's on your mind?

Our constant aim is to improve the quality and features of our appliances. We welcome your comments and ideas in assisting our ongoing development.

➤ Go to www.sageappliances.co.uk and click on 'Support'.

the Smart Toast™

Instruction Booklet



BT A825UK/BT A845UK

Sage™ by heston blumenthal®

Registered in England & Wales No. 8223512. Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

Copyright BRG Appliances 2014.

BT A825UK/BT A845UK Issue - B14

Sage™ by heston blumenthal®

- 3 We recommend safety first
- 8 Getting to know your new appliance
- 9 Operating your new appliance
- 15 Care, cleaning & storage of your new appliance

At Sage™ by Heston Blumenthal® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.
- Your Sage™ by Heston Blumenthal® appliance includes a BS 13 amp moulded mains plug on the supply cord.
- Should you need to change this plug, please complete the rewiring as follows (after safe disposal of the moulded plug).
- Please note that a cut off plug inserted into a socket is a serious danger risk.
- Wires are coloured as follows:
 - Blue = Neutral
 - Brown = Live
 - Green & Yellow = Earth
- As the colours of the wire may not correspond with the coloured markings which identify the terminals in your plug, please refer to the following:
 - The Blue wire must be connected to the terminal which is marked 'N'.
 - The Brown wire must be connected to the terminal which is marked with the letter 'L'.
 - The Green & Yellow wire must be connected to the terminal which is marked with the letter E or the earth symbol \perp .
- Please note that if a 13 amp plug is used, a 13 amp fuse should be used.

WE RECOMMEND SAFETY FIRST

- Carefully read all instructions before operating for the first time and save for future reference.
- Remove and safely discard any packaging materials and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.
- Always operate the toaster on a stable, heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- A fire may occur if the toaster is covered or touching flammable materials, including curtains, draperies, walls and the like, when in operation.
- Curtains and other flammable items can catch fire if they are near or above the toaster.
- While toasting, the bread may burn. Therefore do not use the toaster near or below combustible material, such as curtains.
- Do not allow hot surfaces of the toaster to come in contact with countertops or tables.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch any other source of heat.
- This appliances is not intended to be operated by means of an external timer or separate remote-control system.
- When operating the toaster, keep a minimum distance of 10cm of space from the surrounding sides & 20cm above.
- Sage does not recommend placing the toaster in enclosed areas.
- Do not use the toaster on a sink drain board.
- Do not move toaster while in operation.
- Avoid contact with moving parts.
- Do not use harsh abrasive, caustic cleaners or oven cleaners when cleaning the toaster.

WE RECOMMEND SAFETY FIRST

- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the toasting slots. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Do not place toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not touch hot surfaces. Toaster surfaces are hot during and after operation. To prevent burns or personal injury, always use protective hot pads or insulated oven mitts, or use handles or knobs where available.
- Metal utensils such as a knife, should not be inserted into the toaster to remove jammed toast, bagels or any other items from the toaster. This can damage the heating elements as well as lead to electrocution.
- Do not attempt to dislodge food when the toaster is plugged in.
- Oversized foods, metal foil packages, or utensils must not be inserted into the toaster as they may cause a fire or risk of electric shock.
- Do not use the toaster without the slide out crumb tray in place. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard. To turn the toaster off, remove the power plug from the power outlet.
- Always remove the power plug from the power outlet if the toaster is not in use, before attempting to move, before cleaning, and when storing. Allow to cool before putting on or taking off parts.
- Do not clean with metal scouring pads. Pieces can break off and touch electrical parts, creating a shock hazard.
- Strictly follow the care and cleaning instructions described in this book.
- The use of attachments not sold or recommended by Sage may cause fire, electric shock or injury.

FOR ALL ELECTRICAL APPLIANCES

- Fully unwind cord before use.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces, or become knotted.
- Do not leave the appliance unattended when in use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be carried out by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is recommended for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- It is recommended to regularly inspect the appliance. Do not use the appliance if the power cord, power plug, or appliance becomes damaged in anyway. Immediately cease use and call Sage Consumer Service for examination, repair or adjustment.

- This appliance is equipped with a power cord having a grounding wire with a grounding plug. The appliance must be grounded using a 3-hole properly grounded outlet. In the event of an electrical short circuit, grounding reduces the risk of electrical shock.
- If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.
- If the power outlet is a standard 2-prong outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong power outlet.
- Do not, under any circumstances, cut or remove the third (ground) prong from the power cord or use an adapter.
- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

NOTE

This toaster is electronically controlled and will not operate until the toaster is plugged into a 220-240 volt power point and switched on.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR NEW APPLIANCE - 2 SLICE (BTA825UK)



GETTING TO KNOW YOUR NEW APPLIANCE - 4 SLICE (BTA845UK)



- | | |
|---|---|
| <p>A. TOAST/CANCEL button
With motorised lowering and raising, and toast ready sound alert.</p> <p>B. A BIT MORE™ button</p> <p>C. CRUMPET/FRUIT LOAF setting</p> <p>D. FROZEN button</p> | <p>E. Motorised 'A QUICK LOOK™' button</p> <p>F. Extra wide self centring slots</p> <p>G. LED toasting progress indicator</p> <p>H. Variable browning control</p> <p>I. Cord storage</p> <p>J. Slide out crumb tray</p> |
|---|---|

OPERATING YOUR NEW APPLIANCE

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Insert the power plug into a 220 – 240V power outlet then turn the power on. The TOAST/CANCEL button surround will illuminate in white. The LED toasting progress indicator will illuminate from left to right, then align to the selected browning setting (indicated by the position of the browning control slide). The toaster will revert to stand-by mode after 30 seconds if a button is not pressed or the browning control slide is not adjusted.

BEFORE FIRST USE

We suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odor on initial use. This is normal and not detrimental to the performance of the toaster.

2. Place 1 slice of bread, 1 Bagel/crumpet or half a muffin only, into each of the toasting slots. Ensure items for toasting are not too large or too thick to fit in the toasting slots.

The BTA825UK has a single browning control slide and a row of function buttons that simultaneously control the two toasting slots.

The BTA845UK has dual independent controls allowing each pair of slots to work independently so you can simultaneously toast to different preferences.

3. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest). The LED toasting progress indicator will illuminate in blue and align to the selected browning setting (as indicated by the position of the browning control slide).

NOTE

We suggest to start with browning setting '3'. Various types of bread and personal preference may require a different browning setting. For example, white light-textured breads may require a lighter setting, whilst heavier textured breads may require a darker setting.

4. To start the toasting process, press the TOAST/CANCEL button on top of the toaster. The TOAST/CANCEL button surround will illuminate in red and the carriage will automatically lower into the toasting position and starts the toasting cycle. As the carriage automatically locks into position, the A QUICK LOOK™ button surround will illuminate in white and the LED toasting progress indicator (above the selected browning setting) will flash and start to gradually count down (towards the left) indicating the toasting progress.

5. The A Quick Look™ button can be pressed up until 10 seconds before the end of the toasting cycle to view the browning of the bread. When selected, the A QUICK LOOK™ button surround will flash and the LED toasting progress indicator will remain steady (indicating that the selected browning setting has not been interrupted by the carriage rising). The toasting recommences immediately as the carriage lowers and locks into position, and as indicated by the A QUICK LOOK™ button surround illuminating and the LED toasting progress indicator flashing.

6. Approximately 10 seconds before the end of the selected browning setting, the A QUICK LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
7. Once the toasting cycle has completed and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle.

NOTE

The toaster will revert to stand-by mode after 30 seconds if a button is NOT pressed or the slide is not adjusted. All button surrounds and LED toasting progress indicator will cease illumination.

NOTE

The toaster will re-activate from stand-by mode and the TOAST CANCEL button surround and LED toasting progress indicator will illuminate when:

- Any of these buttons are pressed (except the TOAST/CANCEL button which will start the toasting process).
- The browning control slide is moved.
- The power at the power outlet is turned off then on again.

 **WARNING**

Do not leave the toaster unattended when in use as toast may jam. In the unlikely event that bread, crumpet, bagels or muffins become jammed in the toasting slots, all the button buttons and the LED toasting progress indicator will flash and the elements will turn off. Switch the toaster off at the power outlet, remove the power plug and allow the toaster to cool completely before carefully easing the bread out of slots. Take care not to damage the elements.

TOAST/CANCEL BUTTON

The TOAST/CANCEL button surround will illuminate in white for up to 30 seconds when the appliance is turned on. The toaster will revert to stand-by mode after 30 seconds if a button is not pressed or the browning control slide is not adjusted.

- Press the TOAST/CANCEL button once to lower the carriage and start the toasting process. The TOAST/CANCEL button surround will then illuminate in red.
- Press the TOAST/CANCEL button during operation to cancel the toasting process or any other functions. The TOAST/CANCEL button illumination will change from red to white and stay illuminated for up to 30 seconds.

NOTE

Toasting can be stopped at any time by pressing the TOAST/CANCEL button located on the top of the toaster. This will cancel the operation and the carriage will move to the raised position.

NOTE

The toaster features a A QUICK LOOK™ button. This automatically raises the carriage without cancelling or resetting the selected browning setting. Use the A QUICK LOOK™ button to view browning progress during the toasting and, if necessary, cancel the process when the desired toast colour is achieved.

A BIT MORE™ SETTING

This feature can be selected after or during the toasting cycle.

To use this feature during the toasting cycle:

The A BIT MORE™ button surround will illuminate in white when selected. The toasting time will automatically increase but will not illuminate more of the LED toasting progress indicator. A BIT MORE™ function can be cancelled by pressing the A BIT MORE™ button again and the original toasting cycle will continue.

To use this feature after the toasting cycle has completed:

1. The A BIT MORE™ button surround will illuminate in white when selected. The carriage will automatically lower and begin the additional toasting time. The LED toasting progress indicator will automatically align with the lowest browning setting then flash and count down for the additional browning time.
2. The TOAST/CANCEL button surround will also illuminate in red and the A QUICK LOOK™ button surround will illuminate in white allowing you to check on the toasting progress and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when the desired toast colour is achieved.

3. Approximately 10 seconds before the end of the additional browning, the A QUICK LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash, the LED toasting progress indicator will cease flashing and the A BIT MORE™ button surround will cease illumination. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
4. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle.

NOTE

The A BIT MORE™ button can be used with the TOAST, CRUMPET/FRUIT LOAF and FROZEN functions

CRUMPET/FRUIT LOAF BUTTON

Use this feature to select between the Crumpet / Fruit Loaf function to automatically adjust the toasting time.

Crumpet SETTING:

The CRUMPET setting activates additional heat to the centre heating elements to toast crumpet tops and lightly toast the crumpet bases.

Toast Crumpet

1. Place the crumpets into the toasting slots with crumpet tops facing inwards as per the crumpet markings on the top cover plate above the centre elements of the toaster.

2. To select the CRUMPET setting, press the CRUMPET/FRUIT LOAF button once and the button will illuminate white.
3. Select the desired browning setting by adjusting the BROWNING CONTROL slide on the front of the toaster.
4. Press the TOAST/CANCEL button and the surround will illuminate in red. The crumpets will automatically lower into the toasting slots. The middle and side heating elements will automatically adjust.
5. The QUICK LOOK™ button surround will also illuminate in white allowing the toasting progress to be checked and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when the desired toast colour is achieved.
6. Approximately 10 seconds before the end of the selected browning setting, the QUICK LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
7. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the crumpets. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle. The CRUMPET button surround will remain illuminated and should be pressed twice to cancel if a subsequent toasting function other than crumpets is required. The CRUMPET button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point.

NOTE

Place the crumpets into the toasting slots with crumpet tops facing inwards as per the crumpet markings on the top cover plate above the middle elements of the toaster.

To toast bagels:

- The CRUMPET/FRUIT LOAF button can also be used to toast bagels.
1. Place the bagel centre into the toasting slots with bagel facing inwards.
 2. To toast the bagel, press the CRUMPET/FRUIT LOAF button once and the button will illuminate white.
 3. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. We suggest to start on setting '1'.
 4. Press the TOAST/CANCEL button and the surround will illuminate in red. The bagel will automatically lower into the toasting slots. The middle and side heating elements will automatically adjust.
 5. The QUICK LOOK™ button surround will also illuminate in white allowing the toasting progress to be checked and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when the desired toast colour is achieved.
 6. Approximately 10 seconds before the end of the selected browning setting, the QUICK LOOK™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.

7. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the bagel. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle. The CRUMPET/FRUIT LOAF button surround will remain illuminated and should be pressed twice to cancel if a subsequent toasting function other than bagel is required. The CRUMPET/FRUIT LOAF button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point.
6. Approximately 10 seconds before the end of the selected browning setting, the A Quick Look™ button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
7. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the fruit loaf. The TOAST/CANCEL button surround will re-illuminate in blue for up to 30 seconds, ready for the next toasting cycle. CRUMPET/FRUIT LOAF button surround will remain illuminated in blue and should be pressed once or twice to cancel if a subsequent toasting function is required. CRUMPET/FRUIT LOAF button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point.

FRUIT LOAF SETTING

Fruit Loaf, due to its high sugar content, needs less toasting time compared to standard white bread. The FRUIT LOAF setting automatically adjusts the toasting time for this type of bread.

To toast fruit loaf:

1. Place the Fruit Loaf into the toasting slots.
2. To select the FRUIT LOAF setting, press the CRUMPET/FRUIT LOAF button twice and the blue button will illuminate.
3. Select the desired setting by adjusting the browning control slide on the front of the toaster. The browning settings range from 1 (the lightest) to 5 (the darkest). We recommend setting 3 when toasting fruit loaf.
4. Press the TOAST / CANCEL button which will then light up in red. The Fruit Loaf will automatically lower into the toasting slots.
5. The A Quick Look™ button will light up in blue allowing the toasting process to be checked and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when your chosen toast colour is achieved.

FROZEN BUTTON

This feature activates additional toasting time required to toast frozen bread.

To toast frozen bread:

1. Place the bread into the toasting slots.
2. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest).
3. Press the TOAST/CANCEL button and the surround will illuminate in red then press the FROZEN button and the surround will illuminate in white. The bread will automatically lower into the toasting slots. The toasting time will automatically increase.

4. The A QUICK LOOK™ button surround will illuminate in white allowing you to check on the toasting progress and, if necessary, cancel the cycle by pressing TOAST/CANCEL button when the desired toast colour is achieved. Approximately 10 seconds before the end of the selected browning setting, the A QUICK LOOK™ button will cease illumination.
5. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
6. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in white for up to 30 seconds, ready for the next toasting cycle. The FROZEN button surround will remain illuminated and should be pressed once to cancel if a subsequent toasting function is required. The FROZEN button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point. The FROZEN button works for frozen crumpets/bagels as well.

A QUICK LOOK™ BUTTON

This feature automatically raises and lowers the carriage so you can check progress without interrupting and/or cancelling the toasting cycle.

To select this feature:

1. The A QUICK LOOK™ button surround will illuminate in white during the toasting cycle and when using the A BIT MORE™ feature. You can press the A QUICK LOOK™ button during toasting cycle to view the toasting progress. If selected, the A QUICK LOOK™ button surround will flash. The LED toasting progress indicator will cease to flash indicating that the selected toasting cycle time has not been interrupted. When the A QUICK LOOK™ cycle has finished, the toasting cycle will re-commence, indicated by the resumed flashing of LED toasting progress indicator.
1. Approximately 10 seconds before the end of the selected browning setting, the A QUICK LOOK™ button will cease illumination and cannot be activated in this time.

CARE AND CLEANING

1. Switch the toaster off at the power outlet and then remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. To clean any crumbs from the toaster, remove the crumb tray (located under the control panel at the front of the toaster) by pulling it outwards. Empty and replace the crumb tray before using the toaster again. Replace the crumb tray by sliding it inwards until it locks into position.
3. To remove any additional crumbs, turn the toaster upside down over a bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened soft cloth and then dry it with a soft dry cloth to dry completely.

NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

STORAGE

Switch toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster.

WARNING

Do not use the toaster without the crumb tray in position. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.