



Popcorn Maker

Instruction Manual





CONTENTS

INTRODUCTION

Introduction	2
Popcorn Maker Parts	3
Before using your Popcorn Maker	4
Operating your Popcorn Maker	5
Cleaning your Popcorn Maker	6
Topping Suggestions	7
Important Safety Instructions	8
Product Guarantee	9

Volts: 230V
Hertz: 50Hz
Watts: 1200W

Congratulations on the purchase of your Retro Diner Popcorn Maker; from Gourmet Gadgetry.

The ideal centrepiece at a party, a gathering with friends and family or as an accompaniment to a movie night at home!

Before using your Retro Diner Popcorn Maker please read this user guide carefully, and retain for future reference.

Before using your Popcorn Maker for the first time make sure that it is thoroughly clean and dry. Please follow the cleaning instructions on page 6 of this user guide.

Parts included in the box:

- Measuring scoop/butter melter
 - Top cover
 - Base unit with popcorn chamber
- 

The measuring scoop doubles as a butter melter! Use it to scoop popcorn kernels into the popcorn chamber, and then once you have replaced the top cover turn the measuring scoop upside down. It sits in the grooves over the top cover, and butter can be easily melted in it from the heat generated from the popcorn chamber popping your popcorn!

Please refer to page 5 for instructions on operating your Retro Diner Popcorn Maker.

Before using your Popcorn Maker for the first time make sure that you:

- Remove the Popcorn Maker from its packaging.
- Completely unwind the mains cable.
- Place the Popcorn Maker on a dry, level heat-resistant surface away from any other appliances or objects.

Your Popcorn Maker is now ready to use.



OPERATING YOUR POPCORN MAKER

1. Make sure that your Popcorn Maker is clean and dry.
2. Position your Popcorn Maker on a flat surface or table close to a plug socket.
3. Take the top cover and measuring scoop off of the Popcorn Maker's base unit.
4. Using your measuring scoop add dry popcorn kernels to the popcorn chamber, do not add any more kernels than the scoop can hold. Do not add any oil or fat to the popcorn chamber.
5. Place the top cover back on the Popcorn Maker base unit, and then the measuring scoop on top. If you would like to melt butter for the fresh popcorn then turn the measuring scoop upside down and place it securely over the top cover. Add a small knob of butter to the dish, the heat from the popcorn chamber will melt the butter whilst the popcorn is popping.
6. Place a large heat resistant bowl beneath the chute on the top cover to catch the popped popcorn.
7. Insert the mains adaptor to a suitable plug socket and switch the machine on.
8. The popcorn chamber will heat and rotate your popcorn kernels and after a minute or two fresh warm popcorn will begin to pop out of the chamber and into your bowl.
9. Always turn the machine off after its popped one batch of popcorn, remove any un-popped kernels from the chamber and then allow it to cool for five minutes before using again.
10. Once popped and in the bowl you can add your favourite flavourings, or melted butter to the warm fresh popcorn. We have included some suggestions on page 7 of this manual.

PLEASE NOTE:

NEVER add any oil or fat to the popcorn chamber. Only ever put dry popcorn kernels in the chamber or you will damage the machine!

CLEANING YOUR POPCORN MAKER

Follow these simple steps to clean and maintain your Popcorn Maker after every use:

1. Turn your Popcorn Maker OFF and then un-plug it from the mains.
2. Allow the machine to completely cool down.
3. Remove the top cover and measuring scoop and clean these using a soft damp sponge.
4. Empty any un-popped kernels from the popcorn chamber.
5. You should not need to clean out the chamber, never put any wet or damp sponges into the popcorn chamber. You can however wipe the outside of the base unit with a damp sponge.
6. Once your Popcorn Maker is clean and dry it is ready to be packed back in its box ready for the next use.

NEVER immerse the Popcorn Maker in water, other liquids, or use in a dishwasher. There is danger to life due to a risk of electric shock.

NEVER use abrasive cleaning agents or sharp objects (e.g. scrubbing brush or a knife) for cleaning.

TOPPING SUGGESTIONS

Once you have made your bowl of fresh warm popcorn you can add your favourite toppings and seasonings. Keep it traditional by simply adding sugar or salt, or why not try a mixture of some of our suggestions to create new and innovative flavours..... the options are endless!



Check out www.gourmetgadgetry.com for more, tips and advice on being creative with your popcorn!

IMPORTANT SAFETY INFORMATION

When using your Popcorn Maker, standard safety precautions should be followed, including the following:

1. Please read all instructions carefully before using the appliance and retain this user guide for future reference.
2. This Popcorn Maker is for household use only.
3. Do not operate this appliance if the machine, cable or mains adaptor are showing any sign of damage.
4. This appliance should not be assembled or operated by children.
5. Do not put your fingers inside the popcorn chamber as it can become very hot after use.
6. Never leave this appliance unattended whilst in use.
7. Do not let the cord hang over the edge of a table, or come into contact with a hot surface.
8. Do not immerse the Popcorn Maker in water or other liquid, doing so may cause injury due to electric shock, and will also damage the machine.
9. Before cleaning always turn off the power, and then disconnect the mains adaptor from the plug socket and appliance.
10. Never use harsh or abrasive cleaning fluids on this appliance, please follow the cleaning instructions on page 6.
11. Always store your Popcorn Maker in its box and in a dry location.

PRODUCT GUARANTEE

The top quality Retro Diner Popcorn Maker has been designed to be durable for recreational home use. It is guaranteed for 1 year from the original date of your purchase.

This appliance is guaranteed against electrical defects as well as parts as long as it has been used purely for your own domestic use and you have carefully followed our instructions in this user guide.

Register Your Product

To register your product guarantee with us please fill out an online registration form at:

<https://www.gourmetgadgetry.com/productregistration.html>

This will cover you for the product's guarantee period of one year from the date of purchase.

The guarantee in no way affects your rights under statutory law. Please be aware that if there is a problem with your product within the guarantee period then proof of purchase will be required.

Problems with your Popcorn Maker

If your Popcorn Maker is damaged when you first take it out of the box please return it immediately to the place that you purchased it, along with the original receipt.

If your product breaks down, or has a fault we will repair or replace the unit if we feel that there is a part or manufacturing defect.

Returning your Popcorn Maker

If your Popcorn Maker is an unwanted purchase from; www.gourmetgadgetry.com we can offer you a full refund if you have the original documentation. We will only accept returns within 14 days.

Please return the receipt and item to us, only if it is completely new, unused and in the original packaging.

If your Popcorn Maker was purchased from another retailer please check with their returns policy, and follow their instructions.

Customer Service:

Gourmet Gadgetry, G&P Trading LTD
S22, The Nucleus, Brunel Way
Dartford, Kent
DA1 5GA

+44 (0)1322 90 10 25 | sales@gourmetgadgetry.com | www.gourmetgadgetry.com



Gourmet Gadgetry, G&P Trading LTD
S22, The Nucleus, Brunel Way
Dartford, Kent
DA1 5GA

+44 (0)1322 90 10 25 | sales@gourmetgadgetry.com | www.gourmetgadgetry.com