 
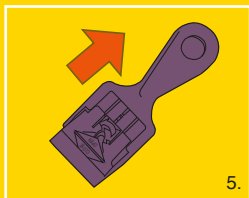 
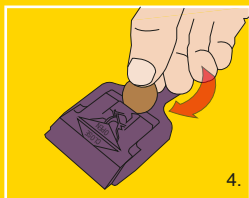 
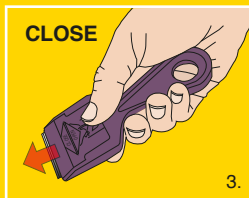 
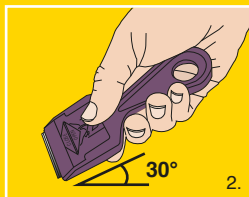 


Includes a scraper and pack of three replacement blades.

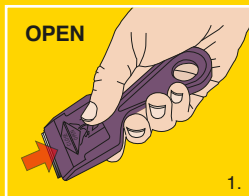

The Hob Scraper has been designed specifically for removing stubborn burnt on deposits from ceramic hobs.

Before using the scraper turn the hob off and allow to cool.

1. To expose the blade slide the cover part of the scraper towards you.
2. Apply the scraper at an angle of approximately 30° to the surface of the hob, and scrape over the burnt on food deposits to loosen.
3. When you have finished with the scraper be sure to cover the blade by sliding the cover forward to the close position.


After loosening the deposits clean the hob in the normal way using Hob Heaven.

Replacing the blade

4. Place the scraper on a flat surface. Hold the Hob Heaven Scraper firmly. Insert a coin in the gap between the cover and holder. Gently use the coin to lever the safety catch up and away from you to allow the cover to release.
5. Remove the old blade with care, insert a new blade locating over the lugs. Place the cover over the top of the blade and slide backwards to the open position to lock in place. Then Slide the cover forward to close the cover over the blade.

CAUTION:

THE HOB SCRAPER BLADE IS RAZOR SHARP.
KEEP IT OUT OF THE REACH OF CHILDREN.

 Under the Offensive Weapons Act 1996, these items must not be sold to anyone under the age of 18.