

LAKELAND

INSTRUCTION BOOKLET

LAKELAND LUXURY FLEECE HEATED MATTRESS PROTECTOR



Model: 24187/24188/24189

LAKELAND LUXURY FLEECE HEATED MATTRESS PROTECTOR

Thank you for choosing the Lakeland Luxury Fleece Heated Mattress Protector.

Please take a little time to read this booklet before you use your blanket and keep it in a safe place for future reference.

Your Heated Mattress Protector is made from soft, thick fleece, and fits over your mattress for ultimate comfort and all night warmth. It heats up your bed in just 10 minutes, and you can select your perfect temperature from 6 heat settings. More heat is provided at the bottom of the bed to keep your toes warm, and the auto shut off function switches off the blanket after 9 hours.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features.....	3
Important instructions and safety notes.....	4-7
Fitting your blanket.....	8
Instructions for use.....	9
Frequently asked questions.....	10
Care and cleaning.....	11
Technical data.....	12
Electrical connections.....	13
Recycling your electricals.....	13

PRODUCT FEATURES

1. Blanket
2. Connector
3. Fast Heat Button
4. Temperature Button
5. Temperature Display
6. Plug
7. Control Unit
8. Connector Plug

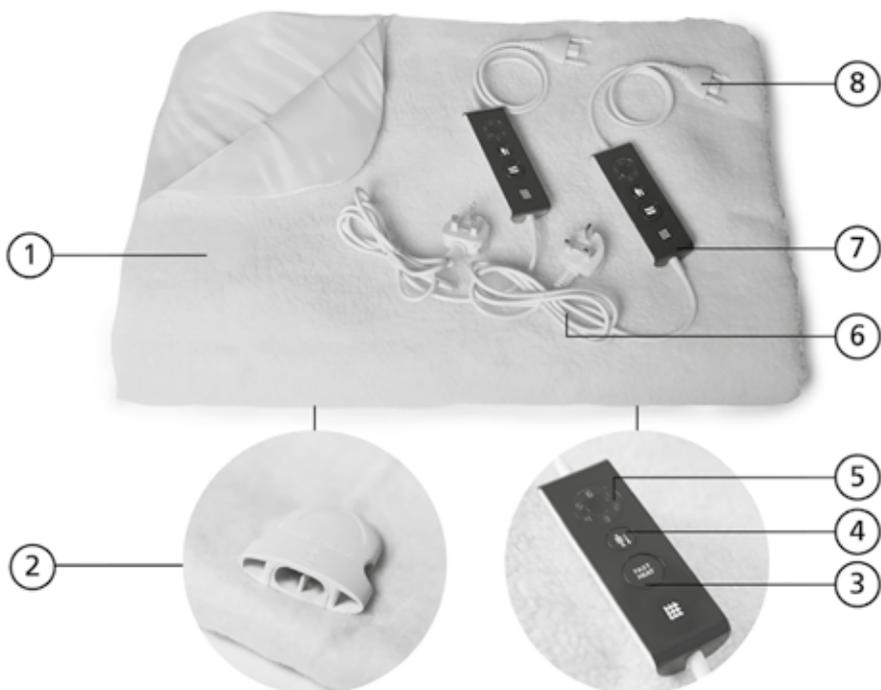

IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.

WARNING! Instructions and warnings for safe use.

SAFETY NOTES



- Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.
- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage due to transportation. If in any doubt, do not use the appliance and contact an authorised service centre.



- **WARNING!** Risk of suffocation.
- Children shall not play with the packaging. Keep the plastic bag out of the reach of children.
- This appliance must be used only for the purpose for which it was designed, namely as an underblanket for home use. Any other use is considered not compliant with the intended use and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit, if any (see illustrative guide).
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.



- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- This appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.



- **DO NOT** use the appliance with wet hands or damp feet.



- **DO NOT** pull the supply cord or the appliance itself to remove the plug from the socket.



- **DO NOT** pull or lift the appliance by the supply cord.
- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that electric cords shall be arranged in a safe way.



- **DO NOT** expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.

- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, contact an authorised technical service centre before switching it on again.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, so as to prevent all risks.



- **DO NOT** use this appliance to warm animals.



- **DO NOT** place the control unit under the pillow or between the sheets or blankets.

- If the appliance is used on an adjustable bed, check that the blanket and cord do not become trapped or rucked, for example in hinges.



- **DO NOT** tuck in.

- This appliance is not intended for medical use in hospitals.



- **DO NOT** use if wet.



- **DO NOT** use folded or creased.



- **DO NOT** insert pins or needles.

- See the external packaging for the characteristics of the appliance.

FITTING YOUR BLANKET

- This mattress protector fits mattresses up to 30cm thick. It can be used with memory foam toppers and mattresses.
- Unpack the mattress protector, remove all the packaging materials.
- Insert the connector plug on the control unit into the connector on the blanket.
- Ensure the connector plug is fully pushed in until the catch engages.
- Repeat for double and kingsize blankets with dual controls.



With the control unit positioned at the top of the bed, put the fitted blanket on top of your mattress.

Pull the skirt down over the mattress edge and tuck it underneath, with the control unit lead running from underneath the mattress.

The mattress protector is now ready to use.



INSTRUCTIONS FOR USE

- Plug in the control unit/s and switch on at the socket.
- To turn on your blanket, click the switch on the back of the control unit to 'ON'.



- Press the fast heat button until number 6 illuminates on the temperature display. This will heat up your bed quickly to the maximum temperature.
- For continuous use, set only temperature levels from 1 to 5.
- For all night use in bed, press the fast heat button again and the temperature display will illuminate '1'. Pressing the temperature button to select the temperature you require from 1-5.
- To switch off your blanket, click the switch on the back of the control unit to 'OFF'. Switch off unplug at the socket.
- Repeat for double and kingsize blankets with dual controls.

AUTO SHUT-OFF

Your blanket will automatically switch off after 9 hours.

The temperature display will flash, indicating that your blanket has gone into standby mode.

FREQUENTLY ASKED QUESTIONS

Question: Why is the control unit not illuminating?

Answer: Check that the appliance is plugged in and switched on at the socket, and the switch on the back of the control unit is turned 'ON'.

Check that the control unit is properly attached to the blanket.

Question: Why is the light on the control unit flashing?

Answer: Check that the connector plug is fully pushed into the connector.

The blanket automatically switches off after 9 hours and may have gone into Standby mode, see 'Instruction for use'.

The blanket may be faulty or damaged. If so, contact the Lakeland customer care team on 015394 88100.

Question: Why is there heat discolouration on the fabric?

Answer: There may be a fault with the appliance, discontinue use and contact the Lakeland customer care team on 015394 88100.

CARE AND CLEANING

- Unplug the mattress protector and let it cool completely before cleaning.
- Check parts for wear and damage after every few uses.
- Never immerse the control unit/s in water or any other liquid.

WASHING INSTRUCTIONS

- Machine washable at 40°C on a wool programme.
- Do not iron. Tumble dry on a low setting. Do not dry clean or bleach.
- Disconnect the control unit from connector on the blanket.
- Before washing, measure the blanket so it can be stretched to its original size during drying.
- To hand wash, use a mild washing powder or detergent and soak your blanket in lukewarm water for 15 minutes. After soaking, gently wash the blanket and rinse thoroughly with clean, lukewarm water.
- Allow the excess water to drain from the blanket. It may be gently squeezed, but do not wring the blanket.

DRYING YOUR BLANKET

- Your blanket will need to be stretched back to its original size whilst damp. Working from side to side, stretch a strip at a time. This procedure may need to be repeated a few times until fully dry.
- Air dry on a clothes line, avoid use of clothes pegs as they will damage the blanket.
- Do not use your blanket until it is completely dry.
- Do not wring the blanket.
- Hold the blanket up to the light and inspect it to ensure that none of the wires have formed into loops, or become twisted. Contact the Lakeland customer care team on 015394 88100, if any of the wires have moved.


STORING YOUR BLANKET

- When storing the blanket, allow it to cool down before folding.
- Avoid creasing the blanket.
- Do not place heavy items on the blanket when in storage, as deep creases or folds may damage the wiring.
- Do not use any moth-proofing chemicals.

TECHNICAL DATA

LAKELAND	UNDERBLANKET							
24187	220-240V 50Hz 100W							
								
								

LAKELAND	UNDERBLANKET							
24188	220-240V 50Hz 2x85W							
								
								

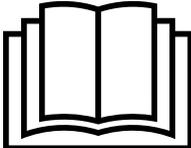LAKELAND	UNDERBLANKET							
24189	220-240V 50Hz 2x85W							
								
								

ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electrical products to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.



Lakeland

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 www.lakeland.co.uk