



Instructions

Using Tool



Apply cleaning or polishing solution of your choice to area being cleaned/polished.



Press & hold button on handle for short bursts of scrubbing. For continuous scrubbing action, slide button forward to ON position. Move

SonicScrubbers tool slowly in and around area being cleaned. Your SonicScrubbers tool is water-resistant and can be used in wet environments. Rinse after use. Not for aquarium use. May scratch some surfaces. Test in inconspicuous area before using. Do not use on loose or weak grout or caulking. MagicScrubbers™ not recommended for tinted windows, vehicle paint, stainless steel, copper and wood. Do not use MagicScrubbers™ with bleach.

Changing Brushes



Interchangeable brush heads are available for all your different cleaning tasks. To change brushes, grip lower half of handle with one hand, and brush head with other hand. Turn brush counter-clockwise and pull up. To attach a new brush, hold tool with on/off button toward you & brush head down (SonicScrubbers logo up). Position replacement brush head on handle, push down and turn clockwise. (See Illustration).

Attaching Cord



Thread short looped end of cord through hole at base of battery cap. Insert opposite end of cord through loop and pull through until plastic toggle passes through short looped end and cord is snug against battery cap. The large loop is now available to hang on a peg or over a showerhead or faucet. Your SonicScrubbers tool can also stand on its base for easy, upright storage.

Changing Batteries



Use four (4) AA standard batteries. Battery life will vary depending on the type of battery used. To change, squeeze raised dots located on front and back of base of handle and pull off cap. Remove existing batteries and insert new ones as shown in the diagram. Line up dots on cap and base, then push cap on until it snaps shut. Do not install batteries backwards, recharge, put in fire, or mix with other battery types. They may explode or leak, causing injury. Replace all batteries at the same time. Failure to do so could cause the batteries to leak. **Please dispose of used batteries responsibly.**

Clean and sanitize the brushes in the dishwasher!

Rechargeable AA Batteries Not Recommended

CAUTION: KEEP OUT OF REACH OF CHILDREN & PETS. Follow use instructions and cautions as they appear on cleaning solutions used with the tool. Do not use with flammable or combustible materials. Not for oral or personal hygiene or for use on skin. Use caution with firm bristle brushes & extra heavy duty scrubbing pads.

Made in China. Covered by Patent Nos. US 7,614,107, US 0513881, CN ZL200530016112.8, EC 333513-0001 and -0002, JP 1254275 and KR 390640. Other U.S. & foreign patents pending.
© 2010 SonicScrubbers, Inc. All rights reserved.