

**DRY:SOON™**

**3-TIER HEATED AIRER  
MINI**

INSTRUCTION BOOKLET



Model: 25904

**LAKELAND** innovation

# **DRY:SOON MINI 3-TIER HEATED AIRER**

Thank you for choosing the Dry:Soon Mini 3-Tier Heated Airer.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

You can dry your washing quickly and easily no matter what the weather with our lightweight Mini 3-Tier Heated Airer. Perfect for smaller spaces, it costs just pennies to run and is kinder to clothes than tumble drying.

The open shelves are really easy to fill and so versatile, just position them to suit your needs: as well as drying t-shirts, socks and smalls over the rungs, you can lay delicate items flat to avoid stretching.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

 
Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

## **CONTENTS**

Product features.....	3
Safety cautions.....	4-5
Setting up the airer and using for the first time .....	6
Instructions for use .....	7
Storing your airer .....	8
Frequently asked questions.....	8
Technical information.....	9
Electrical connections.....	9
Recycling your electricals.....	9

# PRODUCT FEATURES


- 1. Supports
- 2. Clips
- 3. Heated bars
- 4. Power button
- 5. Cord and plug

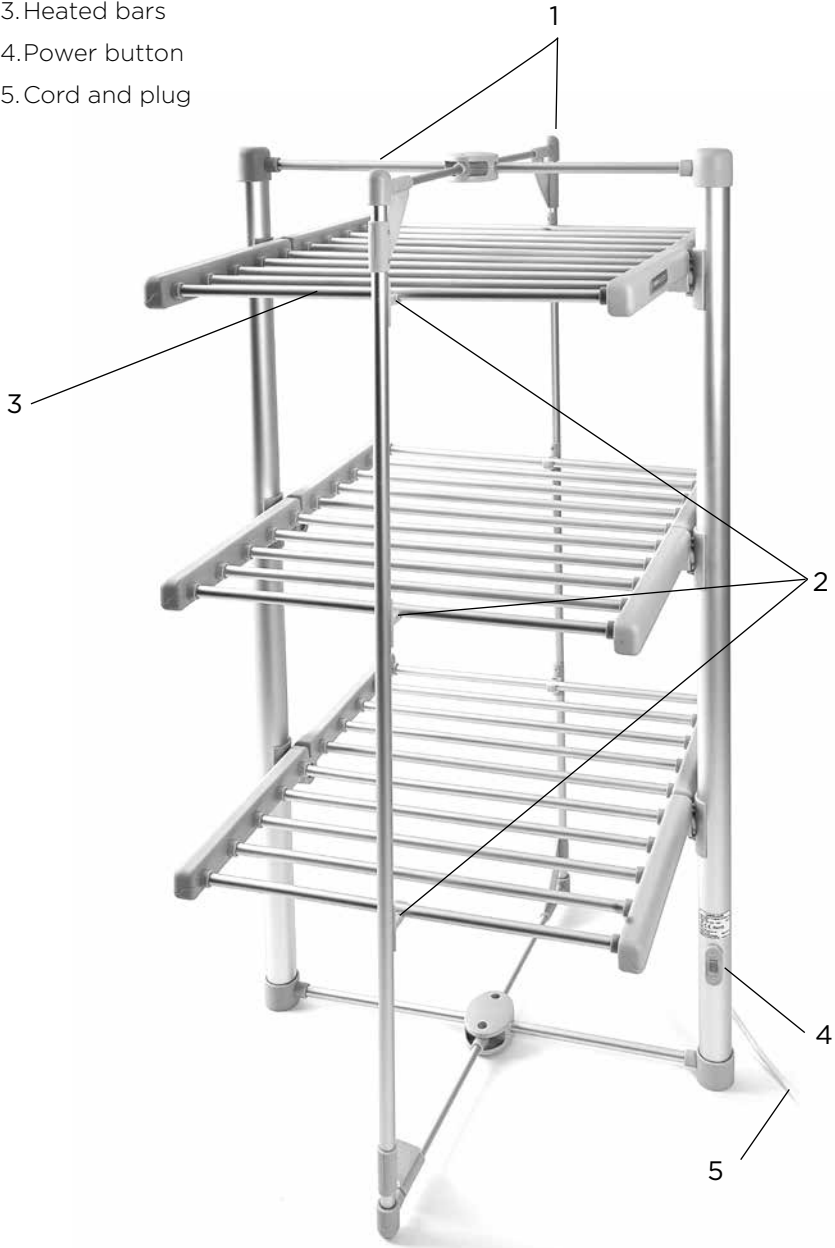

## SAFETY CAUTIONS

 
Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level surface.
- Unplug from the mains when not in use. To disconnect, turn the socket to “off” and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or lid in water or other liquids.
- Avoid contact between the lead and hot surfaces. Keep the ailer plug and lead away from ovens, electric and gas burners, flames and water sources.
- For indoor use only.
- For domestic use only.
- This appliance should be used for airing clothes as described within the instructions for use that accompany it.

- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead or carry the ailer by its lead.
- Do not allow the lead to be compressed or curled, or touch sharp edges.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low voltage Directive).
- **WARNING:** A cut off plug inserted into a socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
- **CAUTION:** The plastic bags used to wrap this appliance or the packaging  may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Always switch off and unplug the Mini 3-Tier Heated Ailer after use, leaving it to cool down completely before closing it to store. Do not wind the power cord around the ailer.
- Ensure the ailer is folded out securely before loading it with laundry and switching it on.
- When opening and closing the ailer, never use force. The mechanisms should move freely and easily.
- Keep fingers away from the folding parts.
- Load evenly across the surface to avoid the ailer tipping over.
- Do not overload the ailer, the maximum load of the ailer is 15kg. Load evenly across the surface to avoid the ailer tipping over.
- Do not allow children to play with the ailer.

## SETTING UP THE AIRER AND USING FOR THE FIRST TIME

1. Carefully unpack the airer and remove all the packaging materials.
2. The airer needs to be set up on a dry level surface near a socket, with plenty of space around it.
3. Stand the airer upright.
4. Open out the supports to a 90° angle.

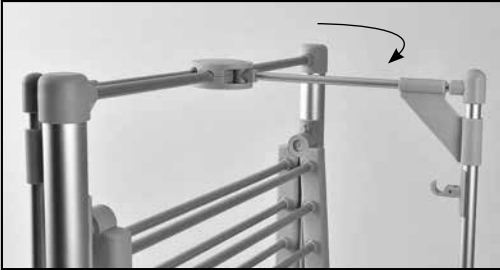


5. Raise the heated bars and lower them to sit securely inside the clips.



### WARNING

 Do not force the shelf beyond the level indicated by this dotted line, approximately 2.5cm (1") above the clip. When opening and closing the airer, never use force. The mechanism should move freely and easily. Keep fingers away from folding parts.

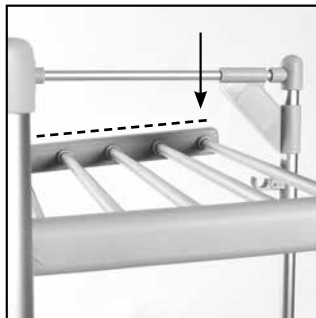


6. Repeat on the other side of the airer.

# INSTRUCTIONS FOR USE
 
## WARNING

Ensure the airer is folded out securely before loading it with laundry and switching it on.

Do not overload the airer, the maximum load of the airer is 15kg. Load evenly across the surface to avoid the airer tipping over.

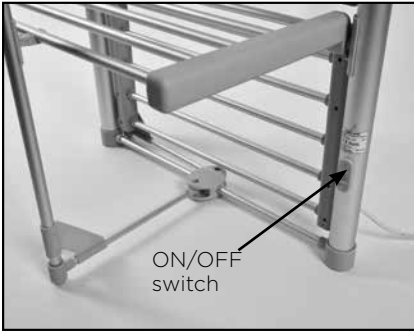

1. Plug the airer into the socket.
2. Switch on your airer. The ON/OFF switch is on the leg of your airer close to the cord.
3. When you have finished using your airer switch off at the socket and unplug.
4. The Dry:Soon heated airer is not designed to be kept switched on indefinitely. Please switch off after 24 hours and allow to cool down before switching on again (approximately 2 hours).



**For smaller loads and confined spaces, you can open and use one side of the airer.**

The folding shelves can be positioned to suit whatever you're drying.

Fully open to lay delicate items flat to avoid stretching or dry t-shirts, smalls and socks - or just open the top tier shelves to take care of longer items like towels, trousers and hanging sheets without them touching the floor.

**FOR OPTIMUM RESULTS, LAY LAUNDRY FLAT FOR FASTER DRYING.**

## STORING YOUR AIRER

1. Leave the airer to cool down completely before closing it to store.
2. Close the airer by folding down the heated bars on each side, top and bottom. Then fold in the supports.
3. Do not wind the power cord around the airer.
4. Check the parts for wear or damage after every few uses.

## FREQUENTLY ASKED QUESTIONS

**Question:** Why is my Mini 3-Tier Heated Airer not heating up?

**Answer:** It may not be switched on. Check the airer is plugged in, switched on at the socket and the on/off switch is pressed and illuminated.



## TECHNICAL INFORMATION

- Power: 198W.
- Voltage: 230V.
- Frequency: 50Hz.

### Approximate size:

- Open: 60 x 63 x 113.5cm H. (23½" x 25" x 44½").
- Closed: 60 x 8 x 113.5cm H. (23½" x 3" x 44½").
  
- Weight of product: 4.3kg.

## ELECTRICAL CONNECTIONS

### THIS APPLIANCE MUST BE EARTHED

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

### CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

**Note:** After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).



## RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electrical products to recycling points set up around the country.

Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) to find your nearest recycling point.







**Lakeland**

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ  
Tel: +44(O)15394 88100 [www.lakeland.co.uk](http://www.lakeland.co.uk)