

*Hostess*TM

Wine Cabinet

INSTRUCTION MANUAL

Model Numbers: HW07MA
HW19MA
HW40RMA
HW46MA

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

DISPOSAL OF OLD APPLIANCES

Before disposing of an old appliance remove any plugs and power leads to ensure that the appliance is inoperative. Remove the door, but leave the shelves in place to prevent children climbing inside.



This symbol on the product indicates that it must not be discarded as general household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

By disposing of this product correctly you will help prevent potential negative consequences for the environment and human health, which would otherwise be caused by inappropriate waste handling of this product.

Warning: When disposing of an old appliance make sure that the pipe work does not become damaged.

BEFORE INSTALLING AND USING YOUR NEW APPLIANCE

Warning: Before powering up the appliance, please open the door for 5 minutes to ventilate the cabinet. Read through the instructions supplied with the appliance – failure to install or use this appliance in accordance with the instruction book may invalidate any warranty.

The manufacturer does not accept any liability for damage caused through improper use, or incorrect installation. Do not install this appliance if it has been damaged during transportation. This includes the plug and supply cord. Please keep these instructions in a safe place for future reference.

Note: This appliance is intended to be used exclusively for the storage of wine.

IMPORTANT SAFETY INSTRUCTIONS

- To prevent damage to the door and door gasket, make sure the door is fully opened before pulling out any shelves.
- Do not move the Wine Cabinet when it is loaded with wine, you might distort the appliance.
- If the power lead becomes damaged it should only be replaced by the manufacturer or a suitably qualified person.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids.
- Do not store or use gasoline or any other flammable vapours and liquids in the vicinity of this or any other appliance. This can create a fire hazard or explosion.
- **Warning:** Do not allow the refrigerant circuit to become damaged while using or installing the appliance. Should it become damaged, do not use the appliance until you are instructed to do so by a service engineer. Refrigerant can ignite or cause damage to the eye when leaking.
- Always remember to unplug the appliance before cleaning. When disconnecting from the electricity supply, pull the plug, not the power cord.
- Do not use anything electrical inside the Wine Cabinet.
- All electrical repairs must be carried out by a qualified service engineer. Inadequate repairs may result in a major source of danger for the user and invalidate any warranty.
- Never store anything dangerous inside the appliance, such as combustibles, explosives, strong acid or alkali etc.
- Always keep any ventilation openings clear of obstruction. Should they become blocked, clear them straight away.
- Make sure that the plug is in an accessible place when installation is complete.
- Only use this appliance for domestic purposes in accordance with these instructions.
- The Wine Cabinet is suitable for storing wine (or other bottled beverages). It is not suitable for storing fresh or frozen foods.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


ELECTRICAL REQUIREMENTS

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. The manufacturer declines any liability should these safety measures not be observed.


Warning: This appliance must be earthed.

- Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.
- The plug must still be accessible after the appliance has been installed.
- The appliance should not be connected to the electrical supply by means of an extension cable.

The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1362) fuse must be used. Should the plug need to be replaced for any reason. The wires in the mains lead are coloured in accordance with the following code:

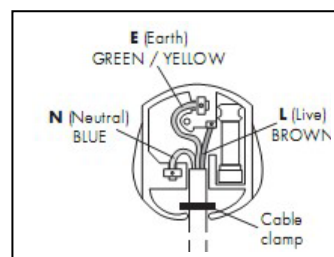

Green and Yellow: Earth
Blue: Neutral
Brown: Live

The wire coloured green and yellow must be connected to the terminal marked with the letter “E” or by the earth symbol  or coloured green and yellow. The wire coloured blue must be connected to the terminal “N”. The wire coloured brown must be connected to the terminal marked “L”.

INSTALLATION OF YOUR WINE CABINET

- Remove the exterior and interior packing.
- **Note:** Before connecting the Wine Cabinet to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install the handle on the left side of the door.
- Place your Wine Cabinet on a floor that is strong enough to support it when it is fully loaded. To level your Wine Cabinet, adjust the front levelling foot at the bottom of the Wine Cabinet.
- Locate the Wine Cabinet away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- The Wine Cabinet should be positioned where the ambient temperature is between 5°C and 35°C. If the ambient temperature is above or below this range, the performance of the unit may be affected. Placing the appliance in extreme cold or hot conditions may cause the interior temperatures to fluctuate. The range of setting temperatures may not be reached.
- Plug the Wine Cabinet into an appropriate socket. Should the plug require changing, use the instructions as given in the Electrical Requirements section.

HW07MA

This model is designed for built-in installation only. Cooling air is taken in through the vents in the front plinth. This area must be kept clear when the appliance is installed. Appliance dimensions are 870 x 147 x 475mm (H x W x D). The minimum cabinet opening dimensions required are 878 x 162 x 525mm.

HW19MA

This model is designed for built-in or free-standing installation. The warm air is expelled through the vents in the front plinth. This area must be kept clear when the appliance is installed.

Appliance dimensions are 870 x 295 x 575mm (H x W x D). The feet are adjustable so the cabinet height can be increased up to 890mm. The minimum cabinet opening dimensions required are 878 x 310 x 625mm.

HW40RMA

This model is designed for free-standing installation only. The top of the cabinet must not be covered and it will get warm during normal operation. It is recommended that a minimum clearance of 100mm is left at the sides and rear of the appliance to allow air to circulate. Appliance dimensions are 845 x 495 x 585mm (H x W x D).

HW46MA

This model is designed for built-in or free-standing installation. The warm air is expelled through the vents in the front plinth. This area must be kept clear when the appliance is installed.

Appliance dimensions are 870 x 595 x 575mm (H x W x D). The feet are adjustable so the cabinet height can be increased up to 890mm. The minimum cabinet opening dimensions required are 878 x 610 x 625mm.

Reversing the Door

Note: The door on the HW40RMA model is not reversible.


HW07MA, HW19MA, HW46MA

These models are supplied with the door opening from the left hand side. To reverse the opening direction, please follow the instructions given below:

- Remove the 2 screws underneath the right lower hinge.
- Gently pull the bottom of the door forward and remove the lower door pin.
- Lower the door away from the right top hinge and carefully place aside.
- Remove both the right upper hinge and the right lower hinge.
- Remove the black plastic pegs from the cabinet on the left hand side and insert them into the holes on the right hand side.
- Secure the left top hinge and left bottom hinge (supplied) to the cabinet.
- Locate the door onto the left top hinge and hold the lower door pin in place.
- Align the door with the cabinet and secure the 2 screws through the left lower hinge into the lower door pin.
- Check that the door opens freely and that the seal is made all round.

OPERATING YOUR WINE CABINET

HW07MA

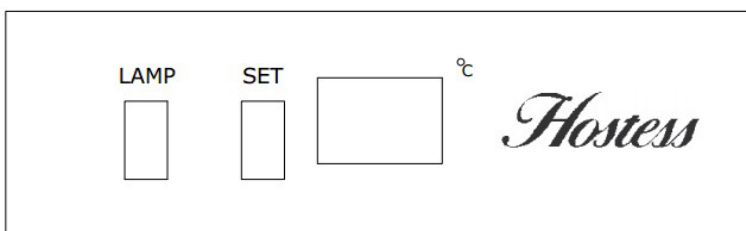

- **LAMP Button**

Used to turn the interior light on/off.

In order to reduce energy consumption, this wine cabinet will automatically switch off the LED lights after 10 minutes. If you want the LED light to remain on continuously, this is possible. Please press and hold the "LAMP" button for 5 seconds, the display will show "LP". After 4 seconds the display will revert back to normal and the light will remain on until manually switched off.

If you want to revert back and conserve energy (recommended), please press and hold the "LAMP" button for 5 seconds, the display will show "LF". After 4 seconds the display will revert back to normal and the light will automatically switch off after 10 minutes.


- **SET Button**

Used to select the required temperature.

Setting the Temperature Control

- Set the required temperature by pressing the SET button. The display will scroll through the available temperature settings in decrements of 1°C. When the button is pushed for the first time, the display will show the default temperature (12°C). The temperature can be set between 5 - 18°C.
- The selected temperature will flash in the display for approximately 5 seconds. The display will then revert back to showing the current interior temperature of the cabinet.

HW19MA

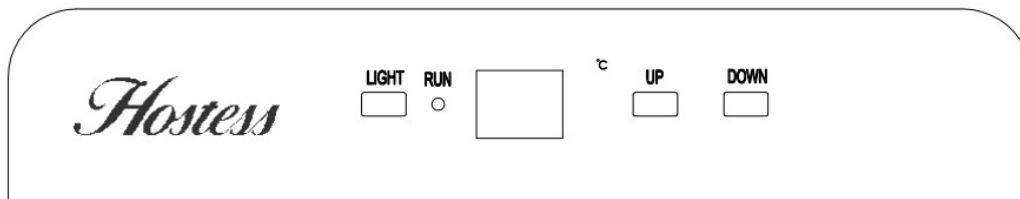

- **LIGHT Switch**

Press to turn the interior light on/off.

In order to reduce energy consumption, this wine cabinet will automatically switch off the LED lights after 10 minutes. If you want the LED light to remain on continuously, this is possible. Please press and hold the "LIGHT" button for 5 seconds, the display will show "LP". After 4 seconds the display will revert back to normal and the light will remain on until manually switched off.

If you want to revert back and conserve energy (recommended), please press and hold the "LIGHT" button for 5 seconds, the display will show "LF". After 4 seconds the display will revert back to normal and the light will automatically switch off after 10 minutes.

- **RUN Indicator**

The light illuminates to indicate that the cooling mode is currently in operation.

- **UP Button**

Press to increase the set temperature in 1°C increments.

- **DOWN Button**

Press to decrease the set temperature in 1°C decrements.

Setting the Temperature Control


- Set the required temperature by pressing the UP or DOWN buttons. When either of the two buttons is pushed for the first time, the display will show the default temperature (12°C).
- To view the "set" temperature at any time press and release the UP or DOWN button. The "set" temperature will temporarily "flash" on the display for 5 seconds. The display will then revert back to showing the current interior temperature of the cabinet.

HW40RMA

Recommended Temperatures for Storing Wine.

Red Wines:	15 – 18°C (58 - 65°F)
Dry/White Wines	9 – 14°C (48 - 57°F)
Sparkling Wines	5 – 8°C (40 - 47°F)

 Hostess




- **°C/°F Switch**
Press to select whether the temperature is displayed in degrees Celsius or Fahrenheit.
- **LIGHT Switch**
Press to turn the interior light on/off.
In order to reduce energy consumption, this wine cabinet will automatically switch off the LED lights after 10 minutes. If you want the LED light to remain on continuously, this is possible. Please press and hold the "LIGHT" button for 5 seconds, the display will show "LP". After 4 seconds the display will revert back to normal and the light will remain on until manually switched off.
If you want to revert back and conserve energy (recommended), please press and hold the "LIGHT" button for 5 seconds, the display will show "LF". After 4 seconds the display will revert back to normal and the light will automatically switch off after 10 minutes.
- **UP Button**
Press to increase the set temperature in 1°C increments.
- **DOWN Button**
Press to decrease the set temperature in 1°C decrements.

Setting the Temperature Control

- Set the required temperature by pushing the UP or DOWN button. When either of the two buttons is pushed for the first time, the display will show the default temperature (12°C).
- If storing mostly red wines, it is recommended that the temperature is set between 15 and 18°C (58 - 65° F). The "RED" indicator will illuminate red to show that this temperature range has been selected.
- If storing mostly white wines, it is recommended that the temperature is set between 9 and 14°C (48 - 57° F). The "WHITE" indicator will illuminate green to show that this temperature range has been selected.
- If storing mostly sparkling wines, it is recommended that the temperature is set between 5 and 8°C (40 - 47° F). The "SPARKLING" indicator will illuminate amber to show that this temperature range has been selected.
- After a few seconds the current interior temperature will be shown on the display.

HW46MA

 Hostess



- **RUN Indicator**
The light illuminates to indicate that the cooling mode is currently in operation.
- **LIGHT Switch**
Press to turn the interior light on/off.
In order to reduce energy consumption, this wine cabinet will automatically switch off the LED lights after 10 minutes. If you want the LED light to remain on continuously, this is possible. Please press and hold the "LIGHT" button for 5 seconds, the display will show "LP". After 4 seconds the display will revert back to normal and the light will remain on until manually switched off.
If you want to revert back and conserve energy (recommended), please press and hold the "LIGHT" button for 5 seconds, the display will show "LF". After 4 seconds the display will revert back to normal and the light will automatically switch off after 10 minutes.

- **POWER Switch**
Press to turn the appliance on/off. (Press and hold the button for approximately 2 seconds)
- **“Set Upper” Button**
Press to set the temperature of the upper compartment. Each depression of the button will scroll through the available temperature settings in decrements of 1°C.
- **“Set Lower” Button**
Press to set the temperature of the lower compartment. Each depression of the button will scroll through the available temperature settings in decrements of 1°C.
- **“Upper Chamber” Display**
Indicates the temperature of the upper compartment.
- **“Lower Chamber” Display**
Indicates the temperature of the lower compartment.

Setting the Temperature Control

- The upper and lower compartments of the wine cabinet are independently controlled. The temperature setting of the upper compartment can be set between 5 - 10°C. The temperature setting of the lower compartment can be set between 10 - 18°C.
- On power up the temperature settings of each compartment will show the default settings of 6°C for the upper compartment and 12°C for the lower compartment.
- Each depression of the Set Upper or Set Lower button will decrement the selected temperature by 1°C. The temperature selected will flash on the corresponding display for approximately 5 seconds and then the display will revert back to showing the current internal temperature.
- To view the “set” temperature at anytime press and hold the corresponding button for approximately 5 seconds, the “set” temperature will temporarily “flash” in the display for 5 seconds.

NOTE:

- If the unit is unplugged, power lost, or turned off; please wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the Wine Cabinet will not start.
- When the Wine Cabinet is powered for the first time or restarted after being turned off for a long time, there could be a few degrees variance between the temperature selected and the temperature indicated on the display. This is normal and is due to the length of the activation time. Once the Wine Cabinet has been running for a few hours the temperatures will stabilise.

LOADING THE WINE BOTTLES


The bottle capacity of the Wine Cabinets is based on a standard 750ml Bordeaux style bottle. If larger wine bottles, such as Champagne bottles, are to be stored it may be necessary to remove some of the shelves so that the bottles can be stacked on top of each other.

Your Wine Cabinet may have been supplied with a **Water Tray**. This can be used to maintain the humidity inside the cabinet, to prevent the corks from drying out. The water tray should be filled with water and placed on the top shelf. If the water tray is used the bottle capacity will be reduced.

HWO7MA

The wine bottles should be located on the wire racks with the neck of the bottles facing the door.

HW19MA

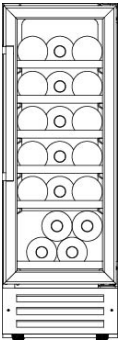


The bottles on the top five shelves should be positioned into the slots in the shelves so that the necks of the bottles are adjacent to each other.

On the bottom shelf two bottles can be laid side by side in the slots in the shelf and then two bottles laid on top.

The shelves can be removed if larger bottles are to be stored.

HW40RMA

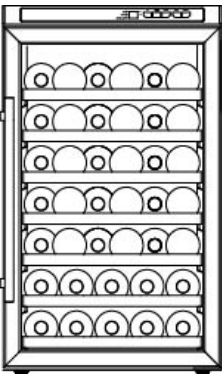


The bottles on the top five shelves should be positioned into the slots in the shelves so that the necks of the bottles are adjacent to each other.

The bottles on the bottom two shelves can be laid side by side in the slots in the shelves.

The shelves can be removed if larger bottles are to be stored.

HW46MA

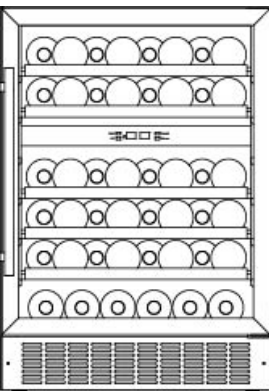

In the upper compartment the bottles on the two shelves should be positioned into the slots in the shelves so that the necks of the bottles are adjacent to each other.

In the lower compartment the bottles on the top three shelves should be positioned into the slots in the shelves so that the necks of the bottles are adjacent to each other.

The bottles on the bottom shelf can be laid side by side in the slots in the shelf.


The shelves can be removed if larger bottles are to be stored.

CARE AND MAINTENANCE

How to remove a shelf

HW19MA, HW40RMA, HW46MA

- To prevent damaging the door seal, ensure that the door is fully opened before pulling the shelves out.
- For easy access to the wine bottles, the shelves can be pulled partway out.
- Before removing a shelf please remove all items first. Pull the shelf forward until the notches in the sides of the shelf align with the pegs in the sides of the cabinet. Lift the shelf up over the pegs and remove it.

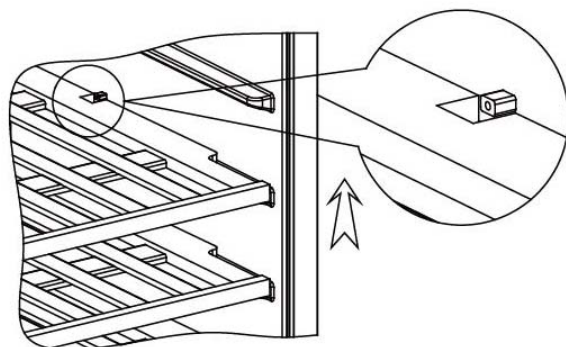

Cleaning Your Wine Cabinet

- Turn off the power, unplug the appliance and remove all items including the shelves.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a litre (2 pints) of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside of the cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

Power Failure

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimise the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take appropriate steps to protect the contents.

Vacation Time

- Short vacations: Leave the Wine Cabinet operating during vacations of less than three weeks.
- Long vacations: If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odour and mould growth, leave the door open slightly: blocking it open if necessary.

Moving Your Wine Cabinet

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable feet up to the base to avoid damage.
- Tape the door shut.
- Ensure the appliance stays secure in the upright position during transportation. Also protect the outside of appliance with a blanket, or similar item.

Energy Saving Tips

- The Wine Cooler should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.

PROBLEMS WITH YOUR WINE CABINET?

If you have a problem with your Wine Cabinet please consult the troubleshooting guide below for a possible solution to the problem before you call a Service Engineer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine Cabinet does not operate.	Appliance not plugged in or power not switched on. The appliance is turned off. The circuit breaker has tripped or a fuse has blown.
Wine Cabinet is not cold enough.	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently.	The room temperature is hotter than normal. A large number of bottles have been added to the Wine Cabinet. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work.	Appliance not plugged in or power not switched on. The appliance is turned off. The light has failed. The light button is "OFF".
Vibrations.	Check to assure that the Wine Cabinet is level.
The Wine Cabinet seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Wine Cabinet. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cabinet is not level.
The door will not close properly.	The Wine Cabinet is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

CUSTOMER SERVICE

If you have a problem with your appliance please check the troubleshooting guide above, before calling for a Service Engineer.

If problems continue you should contact our Service Agent. Please ensure that you have the model number and your serial number to hand when you make the call.

For UK and Southern Ireland call:

Either **0800 988 1323** or **03448 797422**
(Calls are FREE from landlines, however calls from mobiles may be charged at your network provider's rates) (Calls charged at basic rate)

For Northern Ireland call:

028 90365222 (Service Network 2000)
(Daytime calls cost up to 17p plus 10p per minute from BT lines Monday-Friday.
Mobile and other providers' charges may vary).

Please note: If the fault is caused by customer misuse or is due to faulty installation, you will be charged for the call-out.

Crosslee plc, Halifax, HX3 8DE, UK