



POPCORN MAKER

INSTRUCTION MANUAL

THE GOURMET POPCORN MAKER



We are Joe & Seph's, famous for our award-winning gourmet popcorn range of over 50 delicious flavours. Launched by myself (Joe), my wife and sons in 2010, we love all things popcorn!

After over 10 years of searching, I'm delighted to present the Joe & Seph's Popcorn Maker - tried, tested and officially approved by me.


Now you too can perfectly air-pop your own best-tasting, gourmet popcorn at home in just 2 1/2 minutes! Designed for taste adventurers and snack pioneers, use this Popcorn Maker to create your dream gourmet popcorn flavours, from classic Sea Salt to marvellous Salted Caramel.

Looking for a little flavour inspiration? Discover some of my favourite gourmet popcorn recipes at joeandsephs.co.uk/recipes and share your own creations @joeandseph    

To get the most out of your Popcorn Maker, before getting started please take a few minutes to read this manual and keep it in a safe place for future reference.

Joe

KNOW YOUR POPCORN MAKER

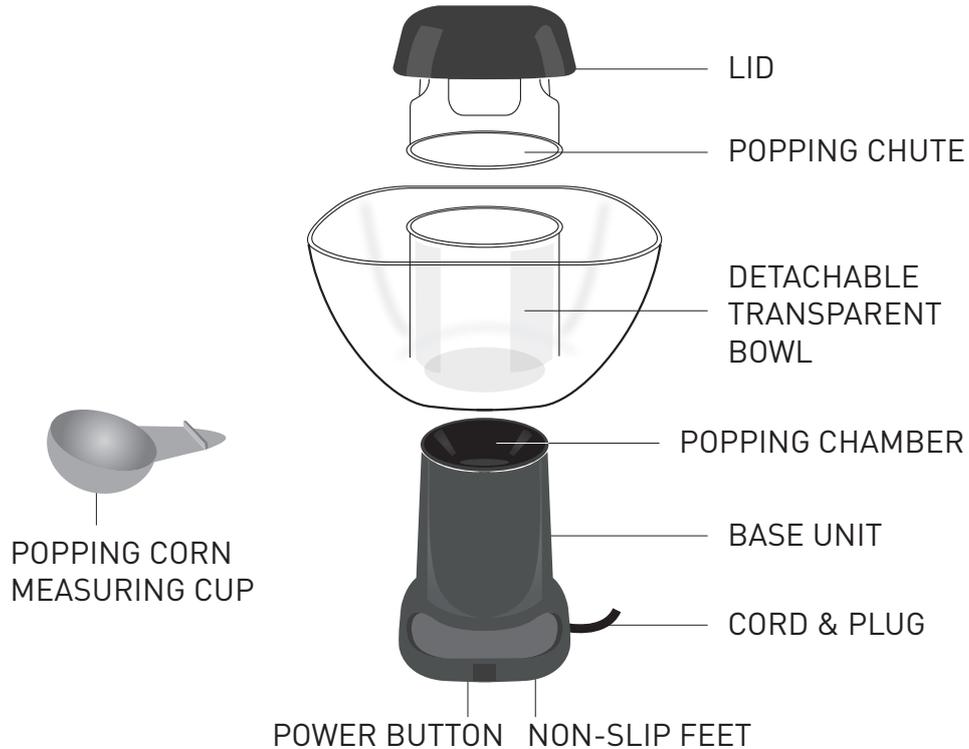

IMPORTANT SAFETY PRECAUTIONS



Carefully read all the instructions before using the appliance and keep in a safe place for future reference.
Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.


- ◇ This appliance should not be used by older children aged from 8-14 years old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are under adult supervision. Cleaning and user maintenance should not be done by 8-14 year old children unless they are supervised.
- ◇ Make sure your electricity supply matches the voltage shown on the appliance.
- ◇ Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- ◇ Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Joe & Seph's customer team on 020 3697 0203.
- ◇ Do not use this appliance if the lead is damaged. Contact Joe & Seph's on 020 3697 0203.
- ◇ Always use the appliance on a dry, level, heat resistant surface.
- ◇ Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- ◇ Do not use any accessories or attachments with this appliance other than those recommended by Joe & Seph's.
- ◇ To protect against fire, electric shock or personal injury, do not immerse cord, plug or base in water or other liquids.
- ◇ Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- ◇ For indoor use only.
- ◇ For domestic use only.
- ◇ This appliance should be used for preparation of food as described within the instructions for use that accompany it.
- ◇ Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- ◇ To avoid injury or possible fire, do not cover the appliance when in use.
- ◇ Do not connect this appliance to an external timer or remote control system.
- ◇ An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- ◇ This appliance complies with the essential requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).

IMPORTANT SAFETY PRECAUTIONS CONT...



- ◇ **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- ◇ **DO NOT** operate the Popcorn Maker empty.
- ◇ **DO NOT** use oil in the popping chamber.
- ◇ **DO NOT** put more than 80g of Popping Corn into the popping chamber and do not let the appliance work continuously for more than 3 minutes.
- ◇ **NEVER** remove the lid when the appliance is in operation.
- ◇ **PLEASE NOTE:** Unpopped Popping Corn may remain, please be careful when eating. This can be a choking hazard.
- ◇ **WARNING:** The Popcorn Maker may stop working if it becomes too hot and the temperature cut-out switch operates. If this happens, please leave the Popcorn Maker for 20 minutes to cool down before trying to use again.
- ◇ **WARNING:** If the fan in the Popcorn Maker stops working, switch off the Popcorn Maker and contact Joe & Seph's customer team on 020 3697 0203.
- ◇ **WARNING:** The Popcorn Maker is not a toy and should not be used by young or very young children.
- ◇ **WARNING:** The base unit and popping chamber of the Popcorn Maker can reach high temperatures. Allow the Popcorn Maker to cool down for 20 minutes after use before moving. Also, please take great care when removing unpopped Popping Corn.
- ◇ **WARNING:** Do not operate the Popcorn Maker without the lid fitted.

GETTING STARTED – YOUR FIRST ASSEMBLY

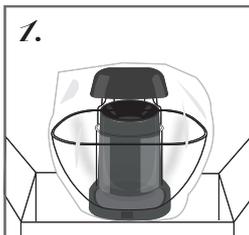

Before first use, unpack the Popcorn Maker and remove all packaging.




Wipe the base with a clean damp cloth and dry thoroughly. **WARNING: DO NOT** allow any water into the popping chamber, as this will damage the appliance.




Wash the lid and bowl in warm soapy water. Rinse and then dry thoroughly.




IMPORTANT! Make sure all parts are dry before continuing assembly. Place the base unit on a level, dry surfaces near a socket, with the power switch on the right.

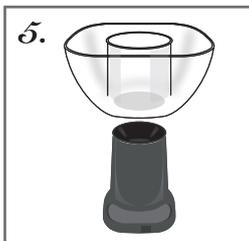

Place the bowl on top of the base unit lining up the indent with the groove.

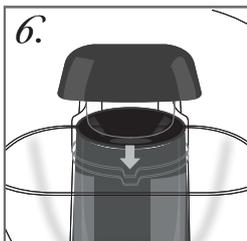


Put the lid on top of the popping chamber, lining up the indent with the groove.

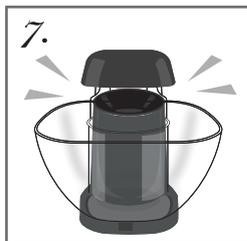

Your Popcorn Maker is now ready to use!

IMPORTANT! Do not insert the plug into the socket or turn on the Popcorn Maker before you have fully assembled it.


YOUR FIRST BATCH OF GOURMET POPCORN

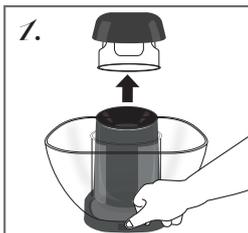


1. Check the power button is switched off and remove the lid of the Popcorn Maker.




2. Fill the measuring scoop with fresh Popping Corn and pour into the Popping Chamber.
IMPORTANT! Do not exceed 80g of Popping Corn.

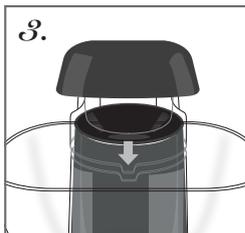

3. Put the lid on the top of the popping chamber, lining up the indent with the groove.

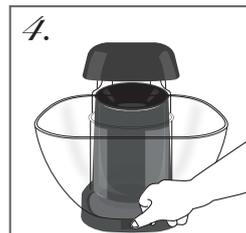

4. Plug in and switch on at the socket, then turn the power button on. The Popcorn Maker will start popping. **NEVER** lift the lid while the Popcorn Maker is popping.

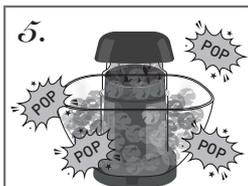


5. After approx. 2 ½ minutes the popping corn will have finished popping. Turn the Popcorn Maker off and unplug it.

DO NOT allow the Popcorn Maker to run continuously for more than 3 minutes.



6. Remove the lid and lift off the transparent bowl.
Add seasoning if you wish and enjoy your gourmet popcorn straight from the bowl!

For recipe inspiration visit joeandsephs.co.uk/recipes

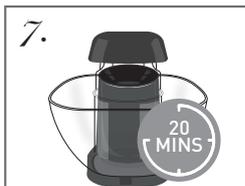

7. **BEFORE USING AGAIN**, allow the Popcorn Maker to cool for 20 minutes and then remove any unpopped corn kernels from the popping chamber.

Unpopped corn kernels may remain. This is a choking hazard, so please be careful when eating.

JOE'S TOP TIPS

Register your 12 month warranty and discover how to get the most out of your Popcorn Maker at joeandsephs.co.uk/popcornmakerFAQ or simply scan below



CLEANING AND CARE


Clean thoroughly after every use. Any other servicing should be performed by authorised service representative.

1.  UNPLUG WHEN NOT IN USE

Unplug the Popcorn Maker before cleaning and allow to cool down for 20 minutes.

2. 

Wipe the base with a clean damp cloth and dry thoroughly before storing. **DO NOT** allow any water into the popping chamber, as this will damage the appliance.

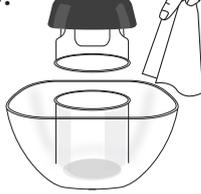3. 

Wash the lid and bowl in warm soapy water. Rinse and then dry thoroughly before storing.

4. 

Store the Popcorn Maker with the power cable loosely coiled. Never wrap it tightly around the product.

5. 

NEVER immerse the base in water or any other liquid.

6. 

DO NOT use abrasive cleaners or steel wool.

7. 

Check the parts for wear or damage after every few uses.

FREQUENTLY ASKED QUESTIONS

Question: The Popcorn Maker is fully assembled, why is nothing happening when I press the power on/off switch.

Answer: Check the appliance is plugged in and switched on at the socket. If the Popcorn Maker is plugged in and still won't turn on, it may be because the appliance is too hot. If this happens, please leave the Popcorn Maker for 20 minutes to cool down before trying to use it again. If the issue still hasn't resolved itself after 20 minutes, switch off and unplug the Popcorn Maker and contact Joe & Seph's customer service team on 020 3697 0203.

Question: Why haven't all my Popping Corn kernels popped?

Answer: Some Popping Corn may not pop because the inside of the kernel is too dry. The pop is caused by moisture inside the corn kernel heating up and creating steam. The pressure causes the shell to explode, therefore resulting in fresh Gourmet Popcorn. Therefore, when there's not enough moisture, the Popping Corn won't pop.

ELECTRICAL INFORMATION

THIS APPLIANCE MUST BE EARTHED

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

REPLACING THE 7 AMP FUSE

The unit requires a 7 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If the unit has failed the fuse should not be replaced. Please contact Joe & Seph's customer team on 020 3697 0203 for it to be replaced or repaired.

Never use the plug without the fuse cover fitted. If lost, replacement fuse covers can be obtained from an electrical shop.

This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

TECHNICAL INFORMATION

Power: 1200W.

Voltage: 220-240V~

Frequency: 50-60Hz.

RECYCLING YOUR ELECTRICALS

Please visit www.recycle-more.co.uk to find your nearest recycling point.






LET'S GET



POPPING!

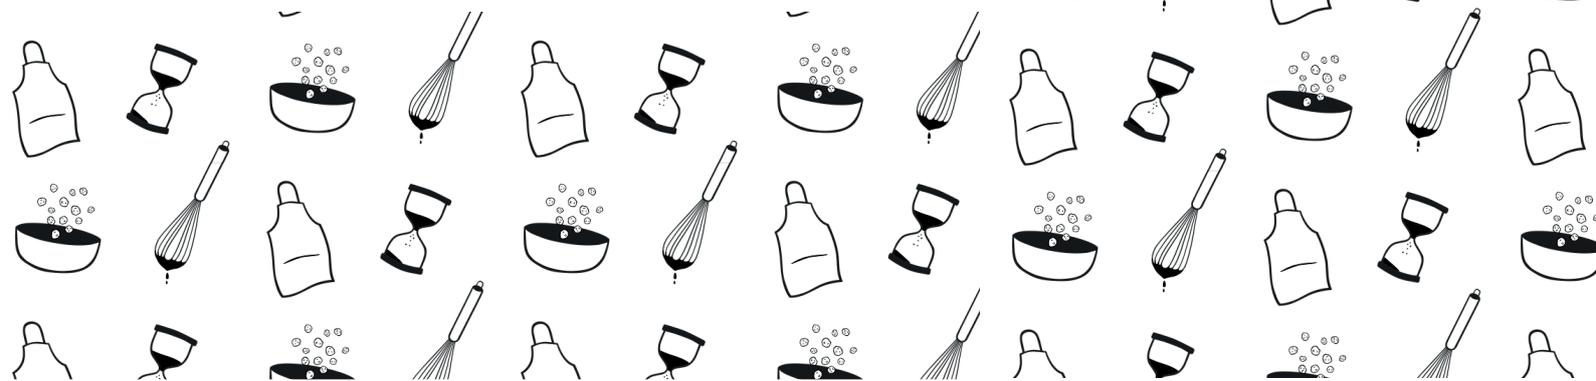



JOE & SEPH'S

Joe's Gourmet Foods Ltd, 3 Willen Field Road, London, NW10 7BQ, UK
Joe's Gourmet Foods Ltd, 71 Lower Baggot Street, Dublin, D02 P593, IE

Drop us a line at **+44 (0)20 3697 0203** or joe@joeandsephs.com

Share your creations and follow the journey of our
family-run business [@joeandseph](https://www.instagram.com/joeandseph)    

Explore our "Make Your Own" collection at [joeandsephs.co.uk](https://www.joeandsephs.co.uk)