

# LAKELAND

## DIGITAL ICE CREAM MAKER

### INSTRUCTION BOOKLET



Model: 33037

# LAKELAND STAINLESS STEEL DIGITAL ICE CREAM MAKER

Thank you for choosing the Lakeland Digital Ice Cream Maker.

Please take a little time to read this booklet before you use your ice cream maker and keep it in a safe place for future reference.

The Lakeland Digital Ice Cream Maker creates your favourite flavours of home-made ice cream, sorbet and frozen yoghurt quickly and easily from fresh ingredients. The digital timer counts down until your frozen treats are ready. It's very easy to use... pre-freeze the bowl, add the lid, set the timer according to your recipe and pour your mixture through the opening. The Digital Ice Cream Maker will churn and stir to a creamy, smooth consistency.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

 
Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

## CONTENTS

Product features .....	3
Safety cautions .....	4-5
Using your Digital Ice Cream Maker for the first time .....	6-8
Instructions for use .....	9-10
Hints and tips .....	10
Recipes .....	11-17
Care and cleaning .....	18
Technical information .....	19
Electrical connections .....	19
Recycling your electricals .....	19

# PRODUCT FEATURES


- 1. Power unit and timer
- 2. Lid with opening
- 3. Spindle
- 4. Paddle
- 5. 1.8 litre freezer bowl
- 6. Freezer bowl hoop
- 7. Outer container

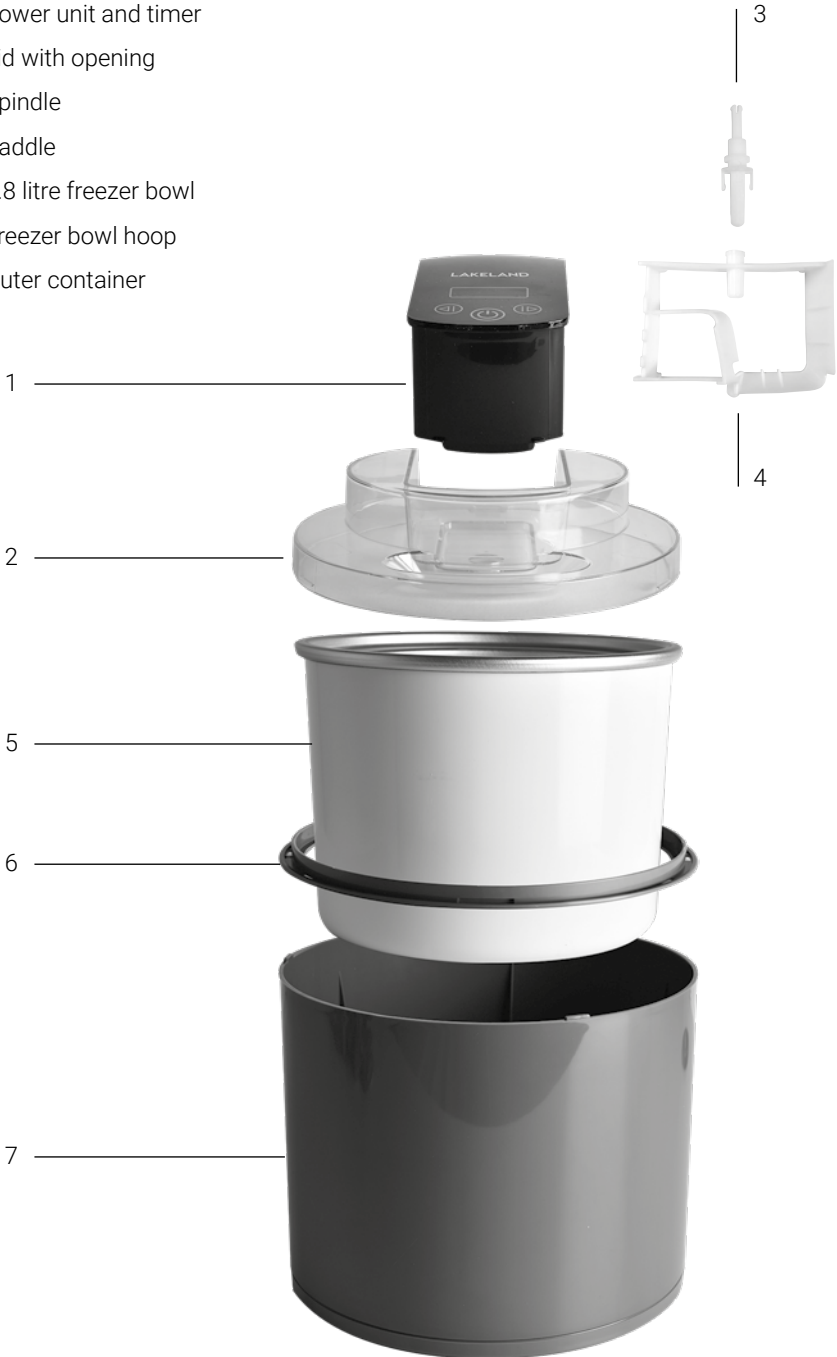

## **SAFETY CAUTIONS**

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. Allow to return to room temperature before cleaning the appliance. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or unit in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- For indoor use only.
- For domestic use only. It is not suitable for commercial use, or for use outdoors.
- This appliance should be used for preparation of food as described within the instructions for use that accompany it.

- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An earthed extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EC (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Keep the Digital Ice Cream Maker, plug and lead away from hot ovens, electric and gas burners, flames and hot surfaces.
- Never use the Digital Ice Cream Maker in areas where certain vapours may be present (paint thinner, flammable material, oil based paint and varnish, flammable liquids and gases) for a risk of possible explosion.
- To prevent freezer burn, protect your hands when handling the freezer bowl, especially when first removing it from the freezer. Never touch with wet hands.
- When the Digital Ice Cream Maker is churning, please do not attempt to move it, and never put your hands or any other utensils inside.
- Never attempt to take the freezer bowl apart, or to separate the timer from the power unit. If the bowl becomes damaged discontinue use.
- Ice cream or sorbet containing raw ingredients should be consumed within one week. Ice cream tastes best when fresh.
- Ice cream or sorbet which contains raw eggs should not be given to children, pregnant women or the elderly.
- Never freeze ice cream that has been fully or partially defrosted.

## USING YOUR DIGITAL ICE CREAM MAKER FOR THE FIRST TIME


1. Unpack the Digital Ice Cream Maker, remove all the packaging materials.
2. Clean all the parts, following the instructions in 'Care and Cleaning'.
3. Make sure that all parts are clean and dry before assembling the product.

**WARNING:** Do not insert the plug into the electrical socket or turn on the appliance before you have assembled the ice cream maker.


1. Place the lid on a flat surface, for example, a kitchen table. Press the power unit and timer into the lid. You will hear a click when it is connected correctly.



 2. Attach the spindle to the paddle by inserting the thickest end into the paddle.

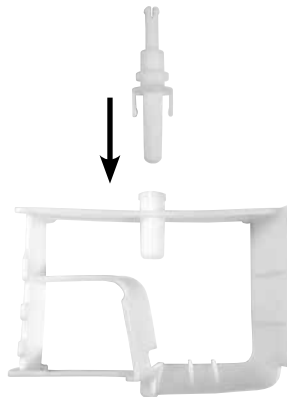

 3. Insert the spindle and paddle assembly into the lid.

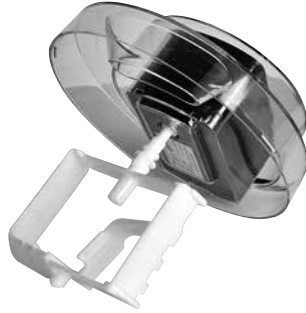

4. Insert the freezer bowl into the freezer bowl hoop, then place into outer container. Lining up the slots on the freezer bowl hoop with the tabs on the outer container.



5. Place the lid with the power unit, timer and the paddle on top of the freezer bowl, lining up the catch on the back of the power unit with the arrow and locator on the freezer hoop. Press down gently so that the assembled lid clicks into place.




6. The Digital Ice Cream Maker is now ready for use.

### **REMOVAL OF THE ASSEMBLED LID**

 1. To remove the assembled lid, place the lid on a flat surface, and place your hand on top of the power unit and timer, press the top of the release catch with the raised area to release from the freezer hoop.

### **REMOVAL OF THE POWER UNIT AND TIMER FROM THE LID**

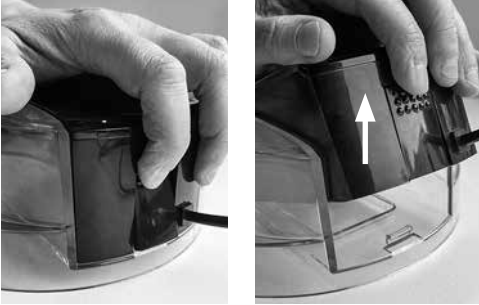

1. To remove the power unit and timer from the lid, place the lid on a flat surface, and place your hand on top of the power unit and timer, press the top of the release catch with the raised area to release the power unit and timer from the lid.
2. Lift your hand up holding on to the power unit and it will release.



# INSTRUCTIONS FOR USE

## BEFORE USE:

- **The beauty of home-made ices is that you can tailor the ingredients to your tastes and dietary requirements, and use seasonal fruits to flavour. For some simple ideas to get you started, see 'Recipes'.**
- **Place the freezer bowl in an upright position, in the freezer for at least 12 hours before use.**

1. Choose a recipe and prepare your mixture and let it cool.  
**Note:** Chill the ingredients in the fridge before use. Warm ingredients or ingredients at room temperature will prolong the preparation time.
2. Take the freezer bowl from the freezer and insert into the freezer bowl hoop, then holding the edge of the hoop place inside the outer container. Attach the lid with the power unit, timer and paddle.  
**WARNING: Use a dry towel to hold the freezer bowl. Direct contact with the frozen bowl may make your hands stick to the freezer bowl. If this happens, hold your hands under warm running water for a few moments.**
3. Insert the plug into the socket and switch it on. The screen will light up and show 88:88 briefly on the control panel and then go off.



4. Press the POWER button and select the duration for which you wish the ice cream maker to run. The default running time is 40 minutes. Set the selected preparation time (05:00 - 45:00 minutes) which can be changed by pressing the "arrow" buttons. Each time you press the arrow buttons, it will change in 5 minutes increments. Your ice cream maker will start automatically after 3 seconds. The remaining time left will then count down on the LED display screen.
5. Pour your mixture into the ice cream maker through the chute opening.

**Note: The ice cream maker must be switched on with the paddle turning before you pour your mixture into the freezer bowl. This stops the mixture immediately freezing against the inside wall of the container.**

**DO NOT pour too much mixture into the bowl. Leave at least 4cm from the top of the bowl, so that the mixture can expand in volume during preparation.**

- **Do not turn off the appliance before the ice cream is ready. If it is switched off too early, the ingredients may freeze against the inside wall of the freezer bowl.**
- **The time needed to reach the consistency you require may be shorter or longer than the time in the recipe due to the temperature of the ingredients or the room temperature. If you need less time; switch off the appliance and take out the paddle. You can set the Digital Ice Cream Maker for a longer time if you need a thicker consistency.**
- **To avoid overheating the motor, the direction of rotation will change if the mixture becomes too thick. If the direction of rotation continues to change, stop the machine when the mixture is ready.**
- **In the unlikely event of the motor overheating, a safety cut out will operate causing the motor to stop. If this happens, switch off, unplug the machine and allow the power unit to cool.**
- **Use a plastic or wooden spoon or spatula to scrape the ice cream from the ice container. Metal spoons or spatulas can cause damage to the freezer bowl.**

6. Let the ice cream maker run until the ice cream has reached the correct consistency. The ice cream maker will only stop turning when the timer has finished, but your ice cream may be ready sooner. The preparation time depends on the recipe and the temperature of the ingredients and the room.
7. When you've finished, turn off the ice cream maker by pressing the power switch and unplug the appliance from the socket. The ice cream produced should be a soft spoonable type, serve the ice cream or transfer to a separate container and store in your freezer or if you wish to firm the ice cream before eating.

## HINTS AND TIPS

- Always remember to put the freezer bowl in an upright position in your freezer 12 hours in advance.
- Chill the ingredients in the fridge before use.
- The times indicated in these recipes are guidelines. The actual preparation time depends on the ingredients used, the temperature of the ingredients and the room temperature. Monitor the mixture through the transparent lid and adjust the timer if necessary.
- Make sure all the ingredients are thoroughly mixed, the sugar has completely dissolved and the mixture has cooled before pouring your mixture into the ice cream maker.
- For the fullest flavour, choose ripe fruits. Wash carefully, remove all seeds, skin and core, and chop into small pieces.
- Metal spoons or scoops will scratch the freezer bowl. Use plastic or wooden utensils.

## RECIPES

Please note that all spoon measurements are standard metric, so 1 tsp is 5ml and 1 tbsp is 15ml. We recommend using a set of measuring spoons for accurate results.

### **VANILLA ICE CREAM – Makes 500ml**

Ingredients	Quantity
Whipping cream	180ml
Whole milk	180ml
Vanilla pods	1½
Egg yolks	4
Caster sugar	65g

### **WHAT YOU DO**

Place in a saucepan with the milk.

Lay the vanilla pod on a board and slice lengthways through the middle with a sharp knife to split it in two. Use the tip of the knife to scrape out all the tiny seeds and place into the milk. Drop the vanilla pod in as well.

Gently bring to the boil, then take off the heat and allow to cool.

In a bowl whip the cream until thick peaks form.

In a separate bowl, beat together the egg yolks and sugar.

Once cool, sieve the milk mixture into the whipped cream, discard the vanilla pods left in the sieve. Add in the egg mixture and mix until they are thoroughly combined.

Make sure the mixture is cool, chill if necessary.

As a guide set the timer on your ice cream machine for 25 minutes\*.

Pour the mixture into the pre-chilled freezer bowl with the paddle running and leave to freeze-churn.

If you prefer a firmer consistency, place the bowl of ice cream in your freezer for a further 30 minutes or so.

\* Churning times are dependent on the ingredients being well chilled before use.

## **STRAWBERRY ICE CREAM – Makes 500ml**

<b>Ingredients</b>	<b>Quantity</b>
Fresh strawberries	200g
Lemon juice	¾ tbsps
Whole milk	220ml
Egg yolk	1
Caster sugar	90g
Whipping cream	100ml

### **WHAT YOU DO**

Wash and hull the strawberries. Purée them with the lemon juice and milk, using a hand blender.

In a bowl, beat together the egg yolk and sugar.

Whip the cream. Mix the cream, the egg mixture and the strawberry mixture until they are thoroughly combined.

As a guide set the timer on your Digital Ice Cream Maker for 25 minutes\*.

Pour the mixture into the pre-chilled freezer bowl with the paddle running and leave to freeze-churn.

If you prefer a firmer consistency, place the bowl of ice cream in your freezer for a further 30 minutes or so.

\* Churning times are dependent on the ingredients being well chilled before use.

## LEMON SORBET – Makes 500ml

Ingredients	Quantity
Lemons	6
Caster sugar	290g
Hot water	435ml

### WHAT YOU DO

Wash the lemons. Zest 5 of them, and squeeze the juice from all 6.

Put the sugar and hot water into a bowl. Stir until dissolved, then add the lemon zest. Leave to soak for 10 minutes.

Add the lemon juice and leave to cool completely.

As a guide set the timer on your Digital Ice Cream Maker for 25 minutes\*.

Pour the mixture into the pre-chilled freezer bowl with the paddle running and leave to freeze-churn.

Place the bowl of sorbet in your freezer for a further 30 minutes or so, to achieve a firm texture.

\* Churning times are dependent on the ingredients being well chilled before use.

**SERVING TIP:** Scoop into champagne saucers and garnish with fresh mint.

## **PISTACHIO ICE CREAM – Makes 500ml**

<b>Ingredients</b>	<b>Quantity</b>
Unsalted pistachio nuts	125g (shelled weight)
Caster sugar	65g
Whipping cream	180ml
Whole milk	180ml
Egg yolks	4

### **WHAT YOU DO**

In a food processor, chop half the pistachios with half the sugar until finely ground.

Whip the cream and place in a saucepan with the milk and the ground nut mixture. Gently bring to the boil, then take off the heat and allow to cool.

In a bowl, beat together the egg yolks and the remaining sugar.

Return the saucepan to the heat and gently bring back to the boil. Pour in the egg mixture and beat together. Take off the heat and allow to cool.

Meanwhile, roughly chop the remaining pistachios with a sharp knife. Add to the ice cream mixture.

As a guide set the timer on your Digital Ice Cream Maker for 25 minutes\*.

Pour the mixture into the pre-chilled freezer bowl with the paddle running and leave to freeze-churn.

If you prefer a firmer consistency, place the bowl of ice cream in your freezer for a further 30 minutes or so.

\* Churning times are dependent on the ingredients being well chilled before use.

## MINT CHOC CHIP ICE CREAM – Makes 500ml

Ingredients	Quantity
Single cream	375ml
Egg yolks	3, beaten
Caster sugar	75g
Crème de Menthe (or peppermint extract)	2 tbsp (1 to 2 tsp)
Dark or milk chocolate chips (or squares, roughly chopped)	25g

### WHAT YOU DO

Pour the cream, egg yolks and sugar into a saucepan and place over a medium heat, stirring frequently to prevent the mixture burning. Gently bring to the boil, then take off the heat and allow to cool.

Stir the Crème de Menthe (or peppermint extract) and the chocolate pieces into the mixture.

As a guide set the timer on your Digital Ice Cream Maker for 25 minutes\*.

Pour the mixture into the pre-chilled freezer bowl with the paddle running and leave to freeze-churn.

If you prefer a firmer consistency, place the bowl of ice cream in your freezer for a further 30 minutes or so.

\* Churning times are dependent on the ingredients being well chilled before use.

**Note:** If substituting Crème de Menthe with peppermint extract, use only 1 to 2 tsp, to taste.

## MIXED BERRY SORBET – Makes 500ml

Ingredients	Quantity
Mixed blackberries, redcurrants raspberries and strawberries	500g
Caster sugar	250g
Juice of a small lemon	½
Water	Splash

### WHAT YOU DO

Place all the ingredients in a thick-bottomed saucepan. Bring to simmering point, then remove from the heat and allow to cool.

Blend the fruit mixture using a hand blender, then press it through a sieve to create a smooth purée.

As a guide set the timer on your Digital Ice Cream Maker for 25 minutes\*.

Pour the mixture into the pre-chilled freezer bowl with the paddle running and leave to freeze-churn.

To achieve a firm-textured sorbet, place the bowl of sorbet in your freezer for a further 30 minutes or so.

\* Churning times are dependent on the ingredients being well chilled before use.



## **DARK CHOCOLATE ORANGE FROZEN YOGHURT – Makes 500ml**

<b>Ingredients</b>	<b>Quantity</b>
Natural yoghurt	450g
Whole milk	250ml
Caster sugar	100g
Double cream	125ml
Cocoa powder (unsweetened)	25g
Dark chocolate (cut into chips)	75g
Orange	1, juice and rind finely grated
Cointreau (optional)	Dash

### **WHAT YOU DO**

Sieve cocoa, then combine with sugar, using a splash of milk to form a paste.

Warm the remaining milk until just below boiling, add to the mixture and stir until dissolved.

When completely cool, add the orange juice, rind and Cointreau.

Fold in the yoghurt and cream, transfer to your Digital Ice Cream Maker and churn until it reaches the desired consistency.

Stir in the chocolate chips and serve.

## CARE AND CLEANING

- Always switch off and unplug the Digital Ice Cream Maker from the wall socket before cleaning.
- Let the freezer bowl come back up to room temperature before cleaning.
- Wash the inside and outside of the freezer bowl by hand with a soft cloth and warm soapy water. Rinse with a damp, clean cloth, then dry thoroughly.
- Wash the lid, spindle and paddle in warm soapy water. Rinse well, then dry.
- Wipe the power unit with timer with a damp cloth, then dry.
- **CAUTION: Never immerse the power unit with timer or power cord in water or any other liquids.**
- Do not use abrasive cleaners, bleaching agents or metal scourers on any parts. This will damage the Digital Ice Cream Maker.
- Do not place any parts in the dishwasher.
- Make sure that the ice cream maker and attachments are completely clean and dry before you store them.

## TECHNICAL INFORMATION

- Power: 12W.
- Voltage: 220-240V.
- Frequency: 50Hz.
- Flex length approx. 120cm (47¼").

## ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

### CHANGING THE FUSE

Use either a 1 amp or maximum 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

**Note:** After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).



## RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.



**Lakeland**  
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ  
Tel: +44(0)15394 88100 **lakeland.co.uk**