

# LAKELAND

## GLASS SCALE

### INSTRUCTION BOOKLET



Model: 33268

## **LAKELAND GLASS SCALE**

Thank you for choosing the Lakeland Glass Scale.

Please take a few moments to read these instructions before using the scale for the first time, and keep them in a safe place for future reference.

This Glass Scale has a large easy read LCD display, touch sensitive buttons, with a wipe clean, stain resistant surface. The tare function allows you to add-and-weigh multiple ingredients.

An award winning family-owned business, here at Lakeland we still have the same values of excellent quality, value for money and exceptional customer care as we did when we first set up the company in the 1960s.


Our products are carefully selected and rigorously tested to meet our high standards, so you can be assured that any product you purchase will be easy-to-use and highly durable.

# CONTENTS

Product features .....	4
Safety cautions .....	5
Using your Glass Scale for the first time .....	6
Using the scale.....	6
Add-and-weigh tare function.....	6
Troubleshooting.....	7
Care and cleaning.....	7
Battery changing instructions.....	7
Battery safety .....	8
Recycling your product.....	9

# PRODUCT FEATURES

- 1. Tempered glass weighing platform
- 2. LCD display
- 3. Unit button
- 4. On/off and tare function button
- 5. Battery compartment

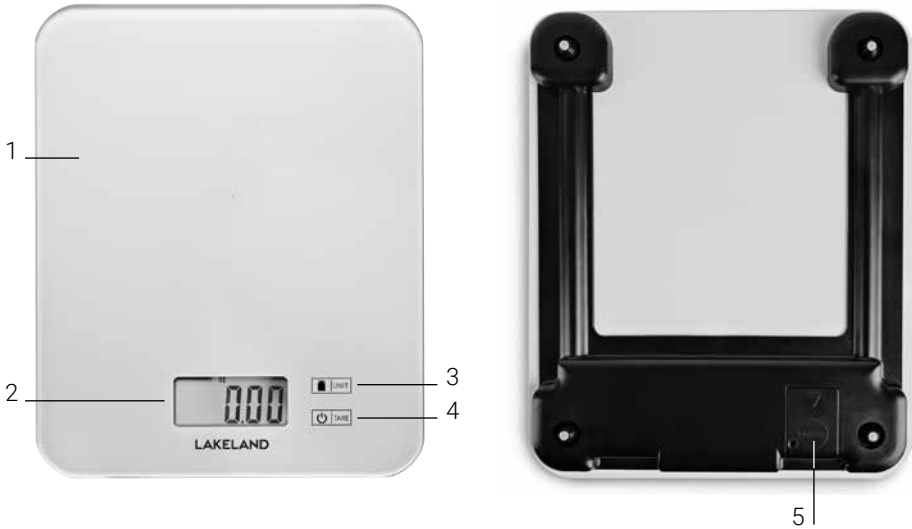

# SPECIFICATIONS

Capacity:	8kg/282oz/800ml
Weight graduation:	1g/0.05oz/1ml
Battery type:	1 x CR2032/3V battery (included)

## **SAFETY CAUTIONS**

Carefully read all the instructions before using the scale and keep in a safe place for future reference. Always follow these safety cautions when using the scales to avoid personal injury or damage to the appliance. These scales should be used only as described in this instruction book.

- This scale is for household use only. It is not suitable for commercial or professional use. The scale must only be used for its intended purpose of weighing ingredients.
- Place the scale on a solid, level surface.
- Treat the scale with care; it is a precision instrument. Do not drop it.
- Take care not to spill water or any liquid on the scale as this may damage the electronics.
- Never immerse the scale in water.
- Do not use scourers or chemical/abrasive cleaners.
- Never attempt to take the scale apart or open it up, other than when replacing the battery.
- If the scale shows any sign of damage or is working incorrectly, call the helpline on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk) to arrange a repair by an authorised repairer, or a replacement. Never try to repair the scale yourself.

## USING YOUR GLASS SCALE FOR THE FIRST TIME

1. Carefully unpack the scale and remove any packaging. Wipe the scale with a slightly damp cloth, then dry.
2. Open the battery compartment on the underneath of the scale, the protective strip in the battery compartment must be removed.

## USING YOUR SCALE

1. Begin by placing the scale on a hard, level surface to ensure accurate weighing.
2. Gently press the 'ON/OFF TARE' button to turn the scale on, the display will show '0.000' and then show the units of the last setting used.
3. To switch between units of g/oz/ml (grams, ounces, millilitres), touch the 'UNIT' button until you have reached the correct setting.
4. Place the ingredients to be weighed on the scale, the weight will appear on display.
5. To save battery power, the scale will automatically switch off after approximately 60 seconds if left unused.

## ADD-AND-WEIGH TARE FUNCTION

1. The scale has a helpful add-and-weigh function, so that several ingredients can be weighed in the same bowl, saving time and washing-up. The weight displayed can be reset to zero after each ingredient is weighed.
2. Place a bowl on the scale. The display will show the weight of the bowl.
3. Touch the 'TARE' button, gently once, to clear the weight of the bowl and reset to '0', TARE will appear on the bottom left of the display.
4. Place the next ingredient into the bowl, the display will show the weight only of the next ingredient added. Repeat this function to weigh other ingredients in the same bowl.
5. When the bowl is removed from the scale, the display will show a negative value.
6. Touch the 'TARE' button again and after 2 seconds the display will show a zero value.

## TROUBLESHOOTING

- If the display shows 'L0' then replace the battery.
- If the display shows 'EEEE' – the scale is overloaded. Remove food or bowl immediately to avoid permanent damage. The maximum capacity is 8kg/282oz/8000ml.

## CARE AND CLEANING

- To clean the scale, wipe it with a slightly damp cloth, then dry with a soft, dry cloth.
- Never immerse the scale in water or liquid.
- Do not use chemical/abrasive cleaners or scourers as they will damage the glass finish.

**Caution:** Never attempt to take the scale apart or open it up, except when replacing the battery.


## BATTERY CHANGING INSTRUCTIONS

- If the product stops working or the LCD display shows 'L0' the battery may need replacing. When replacing the battery ensure the product is switched off. To switch off press the 'TARE' button for 2 seconds.
- On the underneath of the scale, unscrew to open the battery compartment and slide open.
- Replace the CR2032/3V battery with correct polarity (+/-).
- Replace compartment cover and secure by tightening the screw.
- Safely dispose of used battery immediately, in a suitable recycling facility.

# BATTERY SAFETY

**Battery Warning:** KEEP OUT OF REACH OF CHILDREN.

- Keep new and used batteries away from children.
- If the battery compartment (if applicable) does not close securely, stop using the product and keep it away from children.
- Batteries are to be inserted with the correct polarity (+/-).
- Batteries should be replaced by an adult.
- Never dispose of batteries in fire as this may cause them to explode or attempt to disassemble the batteries.
- Do not mix old and new batteries (replace all batteries at the same time).
- Do not mix Alkaline, standard Carbon Zinc or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not charge non-rechargeable batteries.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product, if not going to be used for a long time.
- Ensure the battery compartment is secure.
- Batteries are harmful if swallowed.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Symptoms of battery ingestion are difficult to diagnose. Examples include: Cough, gag or drool a lot, appear to have an upset stomach, be sick, point to their throat or tummy, have a pain in their tummy, chest or throat, be tired or lethargic, be quieter or more clingy than usual, lose their appetite, not want to eat solid food or unable to eat solid food.
- Symptoms can vary and also may fluctuate i.e., pain increasing then subsiding.
- One thing specific to button battery ingestion is vomiting fresh (bright red) blood. If this is the case, then seek immediate medical help.

 **BATTERY WARNING**

**KEEP OUT OF REACH OF CHILDREN.**  
Swallowing can lead to chemical burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.







## RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.







**Lakeland**  
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ  
Tel: +44(0)15394 88100 [lakeland.co.uk](http://lakeland.co.uk)