

LAKELAND

INSTRUCTION BOOKLET

TURBO BATHROOM SCRUBBER



Model: 46429

LAKELAND TURBO BATHROOM SCRUBBER

Thank you for choosing the Lakeland Turbo Bathroom Scrubber.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Turbo Bathroom Scrubber is highly efficient and makes easy work of those bathroom jobs, from scrubbing gaps and corners to stubborn stains, from low down to up high. The scrubber is extendable, using the extension rod. With a uniform speed to avoid secondary soiling. Fantastic for all sorts of things: cleaning the bathroom, kitchen, tiles, slots, floors etc., suitable for many different cleaning purposes. The scrubber is rechargeable and has a dispenser tank for your cleaning fluids.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	3
Safety cautions	4-5
Before using for the first time	6
Assembly of the Turbo Bathroom Scrubber	7
Functions of the different heads	7
Instructions for use	8
Frequently asked questions	8
Care and cleaning	9
Technical information	9
Recycling your electricals	9

PRODUCT FEATURES


1. Handle
2. Extension rod
3. Dispenser tank
4. Main unit
5. Adaptor
6. Micro USB cable
7. Power button
8. Spray button
9. Charging point
10. Hanging hook
11. Flat brush
12. Side brush
13. Small dome brush
14. Big dome brush

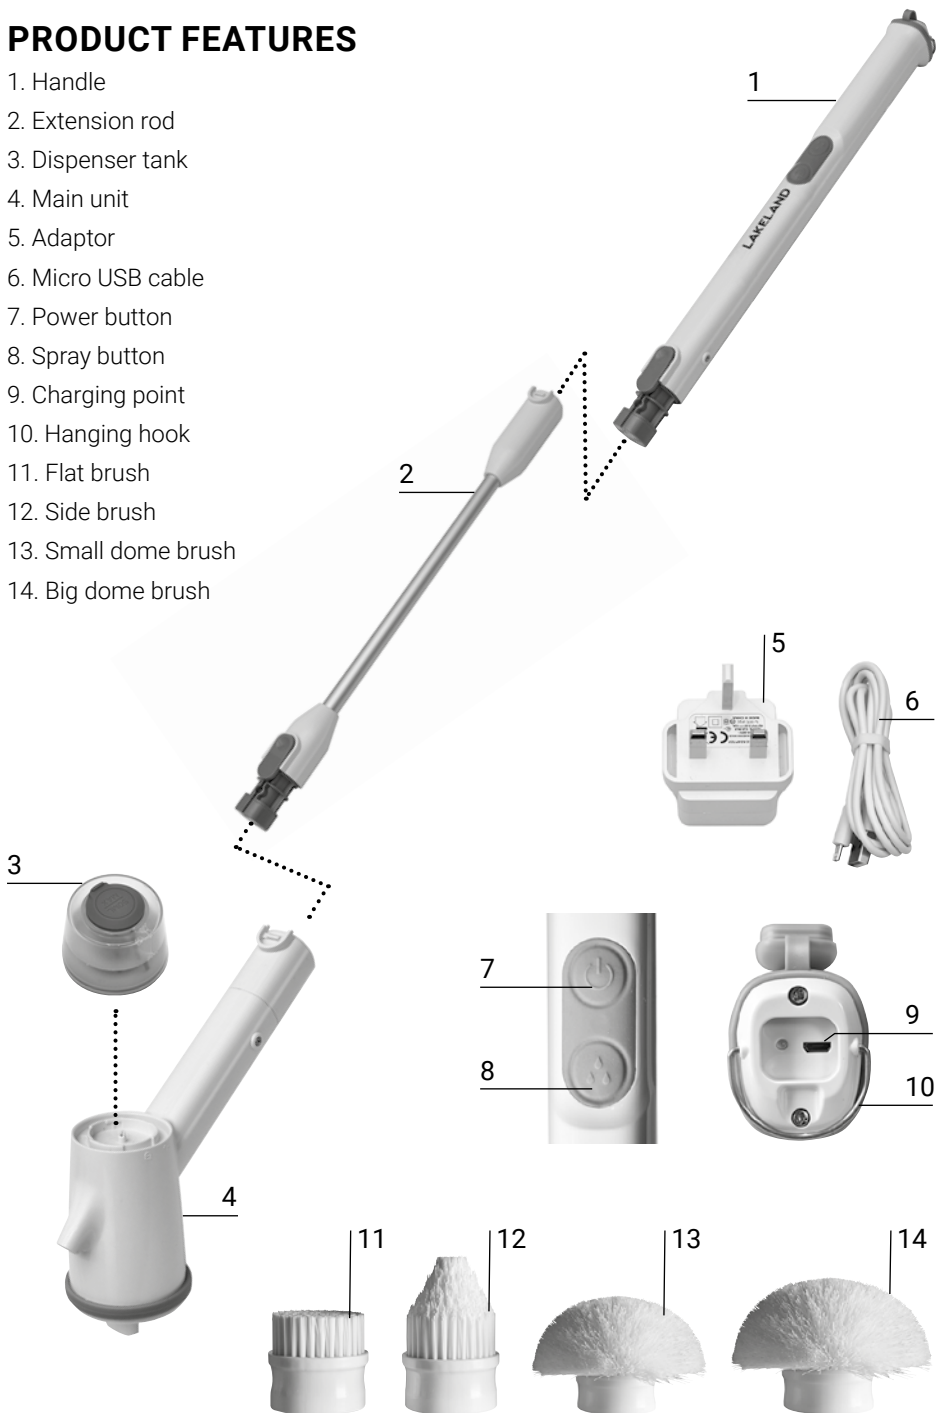

SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the adaptor.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. Contact the Lakeland customer care team on 015394 88100.
- Always use away from any heat sources.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse the micro USB cable in any liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for cleaning as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.

- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- When the micro USB cable is damaged, do not touch the AC power cable with your hands to avoid danger.
- **Do not** allow your children to use the scrubber as a toy.
- Before use, please check if the brush head is fixed well.
- **Do not** use it pointing at people since the brushes are sharp.
- Please wear protective eye coverings and protective gloves when you use this product with some formula substances.
- Please keep hair, loose clothes and your body far away from the appliance when it is working.
- **Do not** insert any other accessories into the appliance when it is working.
- **Do not** poured water on this appliance or put this appliance into water.
- **Do not** make the appliance wet, except the brushes.

BEFORE USING FOR THE FIRST TIME

- Unpack the Turbo Bathroom Scrubber, remove all of the packaging materials.
- Before first use, wipe the outside of the main unit, handle and extension rod with a clean, damp cloth and dry thoroughly.
- Hand wash the dispenser tank and brushes, in warm soapy water, rinse and dry thoroughly.


CHARGING THE TURBO BATHROOM SCRUBBER

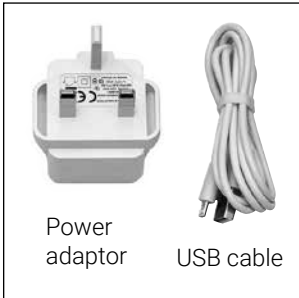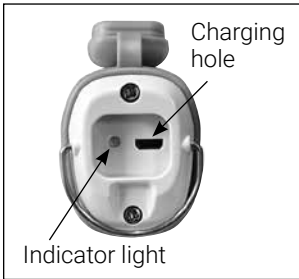

- Insert the micro USB plug to the charging hole at the end of the handle.
- Recharge using the micro USB cable provided via the power adaptor or a suitable 5V USB recharging point 100-240VAC, 50-60Hz. The power adaptor, if used, can be plugged into the electrical power socket to start charging the product.
- Please power off the appliance before recharging.
- Do not immerse the handle in water during recharging.
- The indicator light illuminates red when it is charging.
- It takes 4 hours to fully charge the battery, when fully charged the indicator light illuminates green.
- When fully charged the scrubber will work for approximately 1 hour depending on how much you use the spray function.
- Fully charge the Turbo Bathroom Scrubber before use.

ASSEMBLY OF THE TURBO BATHROOM SCRUBBER


1. Choose the appropriate cleaning brush head for your cleaning requirements and push firmly in place on to the locator spinal at the end of the main unit.
2. For a more thorough clean, fill the dispenser tank with a maximum 50ml of cleaning formula.
3. Attached the dispenser tank to the top of the main unit, lining up the grooves to locate. Turn the dispenser tank clockwise to lock in place.
4. Then attach the extension rod, if using the scrubber at its full extended length, by locating it into the end of the main unit, until it clicks into place.
5. Attach the handle in the same way into the end of the extension rod or main unit.
6. The Turbo Bathroom Scrubber is now ready to use.

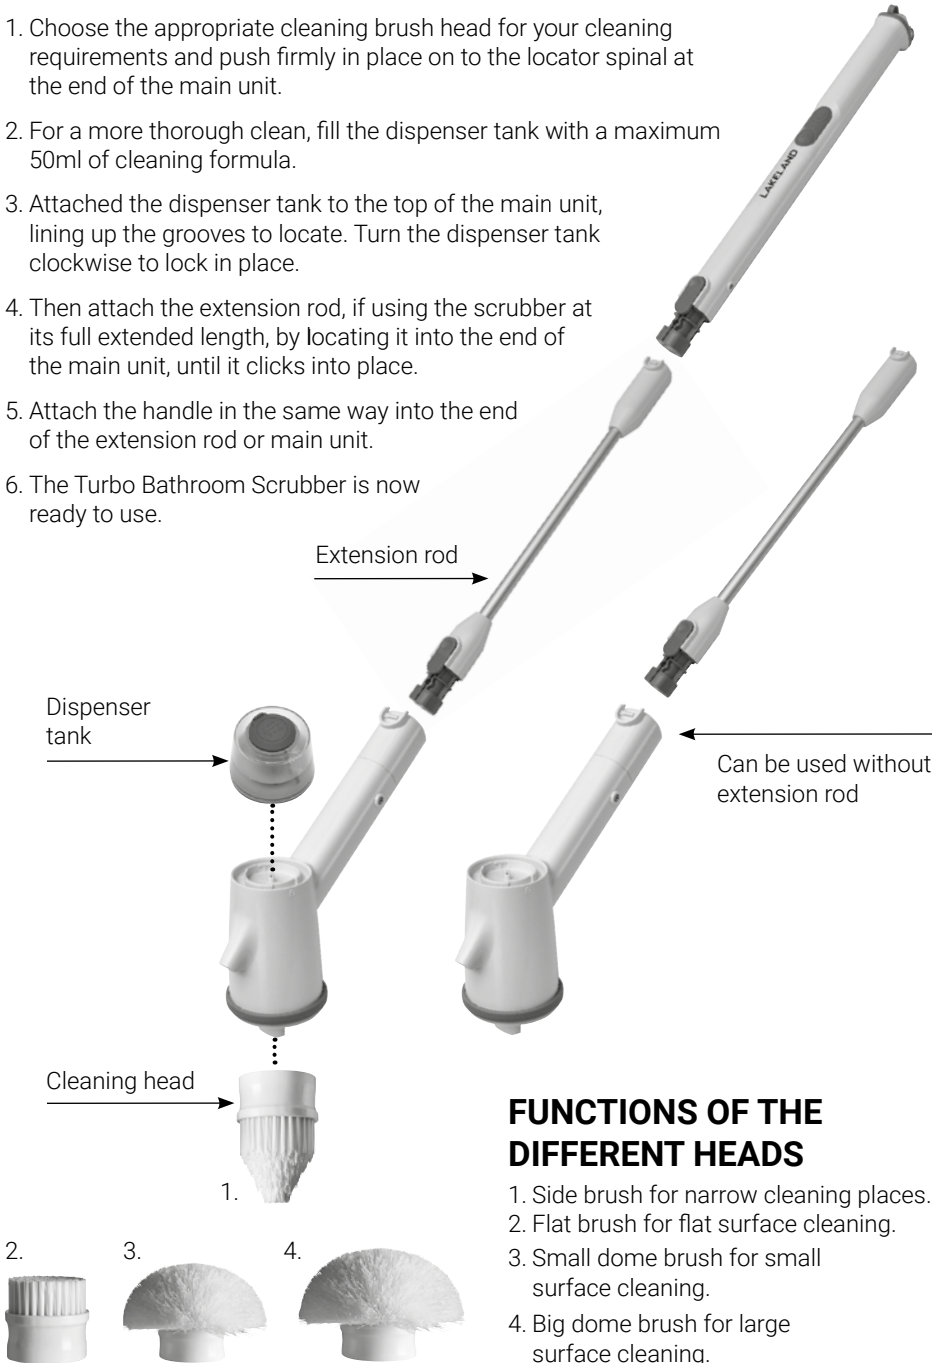

FUNCTIONS OF THE DIFFERENT HEADS

1. Side brush for narrow cleaning places.
2. Flat brush for flat surface cleaning.
3. Small dome brush for small surface cleaning.
4. Big dome brush for large surface cleaning.

INSTRUCTIONS FOR USE

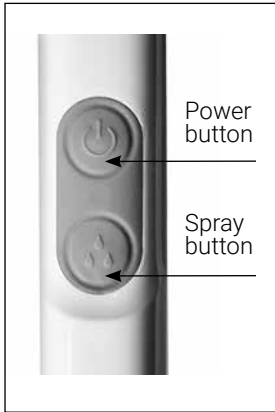

- To turn on the Turbo Bathroom Scrubber press the power button and hold for 2 seconds, the brush head will start rotating and continue until you press the power button again for 2 seconds to turn it off.
 - Press the spray button and hold to spray the cleaning formula, at the same time the brush head will rotate in the opposite direction.
Note: The amount of foam created when you spray, is dependent on the type of formula you use. When using the spray function of the scrubber, this will decrease your cleaning time.
 - Release the spray button to stop spraying the cleaning fluid and the brush head will spin in its initial direction.
- It is not necessary to press hard on the brush whilst in use, as the battery powered scrubbing action is enough to remove even the most stubborn grime. Some splaying of the bristles is to be expected over time.
 - To power off the Turbo Bathroom Scrubber press the power button and hold for 2 seconds.
 - When you have finished using the scrubber, clean the appliance.
 - If you are not using the scrubber for a while empty and wash out the dispensing tank. To remove the dispensing tank turn it anti-clockwise to unlock.
 - To remove either the main unit, extension rod or handle, press the joining latch and separate.
 - Remember to put the handle on charge, ready for next time.

FREQUENTLY ASKED QUESTIONS

Question: Why is the scrubber not working when pressing the power button?

Answer: Check that the Turbo Bathroom Scrubber is fully charged and that all the parts are firmly joined together.

CARE AND CLEANING

- Switch off and let the Turbo Bathroom Scrubber cool completely before cleaning.
- Clean thoroughly before using for the first time and after every use.
- Check the parts for wear or damage after every few uses.
- Never immerse the main unit, handle or extension rod into water or liquid.
- Wipe the outside of the main unit, handle and extension rod with a clean, damp cloth and dry thoroughly.
- Hand wash the dispenser tank and brushes, in warm soapy water, rinse and dry thoroughly.
- Do not use abrasive cleaners, scourers or steel wool when cleaning.
- When not in use, store in a clean and dry place.
- Store the Turbo Bathroom Scrubber in a clean dry place indoors, with the power cord loosely coiled. Never wrap it tightly around the appliance.

TECHNICAL INFORMATION

- Input DC: 5V – 0.2A – 1000mAh.
- Output DC: 5V – 1A – 1000mAh.
- Power: 9W.

AC Adaptor

- AC Voltage input: 100-240V.~
- Frequency: 50/60Hz.

This product contains a Lithium battery.



RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electrical products to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.



Li-Ion

Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 lakeland.co.uk