

LAKELAND

CARPET SPOT CLEANER INSTRUCTION BOOKLET



Model: 46635

LAKELAND CARPET SPOT CLEANER

Thank you for choosing the Lakeland Carpet Spot Cleaner.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

Tackle everyday spots, spills and stains with this Carpet Spot Cleaner. Suitable for use on many surfaces around the home, like carpets, upholstery, stairs, car interiors and sealed hard floors. An effective spot cleaner with steam function, compact with a small footprint to fit on a step or in a cupboard. Lightweight and portable with a hidden handle to carry and wheels underneath.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	4-5
Safety precautions	6-7
Setting up and using your Carpet Spot Cleaner	8-12
Cleaning and maintenance	13-14
Frequently asked questions	15
Technical information	16
Recycling your electricals	17


PRODUCT FEATURES

1. Main unit
2. Control panel
3. Steam brush head
4. Main power switch
5. Handle
6. Waste water tank
7. Clean water tank
8. Hose
9. Brush fastener
10. On/off button
11. Water spray/steam button
12. Auto cord winding lever
13. Power cord and plug

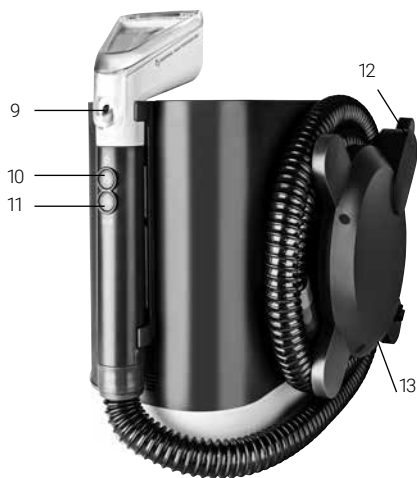

CONTROL PANEL

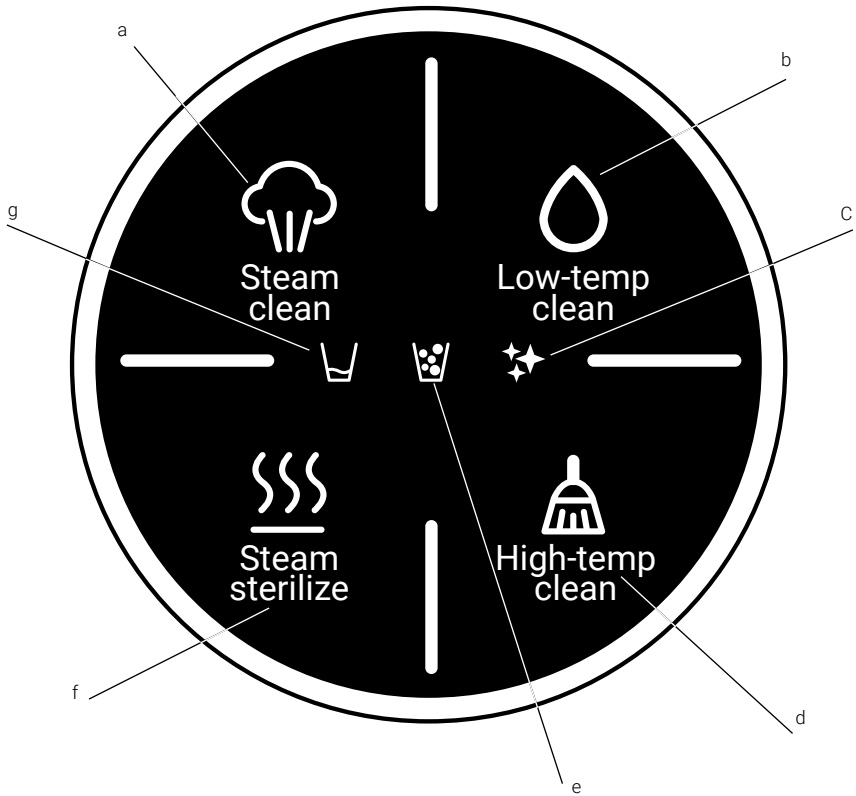 

- a. Steam clean mode
- b. Low-temp clean mode
- c. Descale indicator
- d. High-temp clean mode
- e. Waste water full indicator
- f. Steam sterilize mode
- g. Clean water refill indicator





SAFETY PRECAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety precautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland Customer Services team on 015394 88100 or info@lakeland.co.uk
- Do not use this appliance if the lead is damaged. Contact the Lakeland Customer Service team on 015394 88100 or info@lakeland.co.uk
- Always use the appliance on a heat resistant surface. Do not allow the power cord to touch hot surfaces. Allow the appliance to cool completely before storing.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or appliance in water or other liquids.
- Do not leave the lead hanging over the edge of kitchen table or worktop, where it may be pulled by children, or tripped over. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for steaming described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.

- To avoid injury or possible fire, do not cover the appliance when in use.
- Not recommended to be used with a plug-in timer switch.
- An earthed extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
-  **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- **DO NOT** leave the Carpet Spot Cleaner unattended when in use.
- **DO NOT** turn on the power supply until the clean water tank is full of water.
- Unplug the Carpet Spot Cleaner before filling or emptying the water tank, before cleaning and maintenance and immediately after use.
- Only use water and carpet cleaner solution in the water tank.
- **DO NOT** direct the steam towards persons or animals.
- The steam must not be directed towards equipment containing electrical components.

 **WARNING – HOT SURFACES** 

- **DO NOT TOUCH** the surfaces shown with this symbol , they will be very hot during and just after use.
- Hot surfaces can burn and hot steam can scald, possible injury could occur.
- Allow the appliance to cool completely before touching, handling, moving or storing.



SETTING UP AND USING YOUR CARPET SPOT CLEANER

- The appliance should only be used if it has been completely and correctly assembled.
- When you switch on the appliance for the first time you may notice a slight burning smell, this is normal for a new appliance and will stop after a few uses.


INTENDED USE

DO NOT use the appliance on the following:

- Glowing ash, cigarette ends, matches and the like.
- Inflammable or explosive substances.
- Very fine dust (e.g. concrete dust), ash, or toner.
- Pointed, hard objects such as large pieces of broken glass.

SETTING UP

- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.

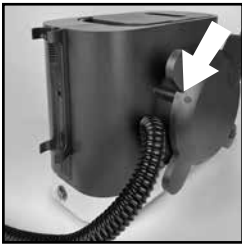

- Before use, place the appliance on an even surface and unwind the hose from the cord winding rack.



- Attach the steam brush head (with the brush head cover attached) onto the hose.



- Pull the power cord from the auto cord winding rack



- Remove the clean water tank from the appliance then open the water tank silicone plug.
- Next fill the clean water tank with clean water not exceeding the maximum water level, the best way to fill the clean water tank is to lie is on a flat surface and add the water with a jug.




- Finally, close the silicone plug and install the clean water tank back in to the appliance.
- If required, use a carpet cleaner solution to remove stubborn stains. Fill the water tank with clean water to the maximum water level through the water inlet, adding in the carpet cleaner solution.






- Insert the plug into the socket and turn on the appliance using the main power switch.

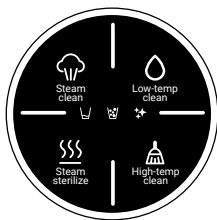INSTRUCTIONS FOR USE





- Touch the corresponding icon to select the desired working mode, which include Steam clean, Low-temperature clean, Steam sterilize and High-temperature clean modes.



- Press the  on/off button on the handle of brush, the button illuminates solidly and the appliance starts to work according to the selected working mode. Press the  on/off button again, the appliance enters a delay shut-off status and the  on/off button flashes, the appliance will then turn off after 6 seconds.




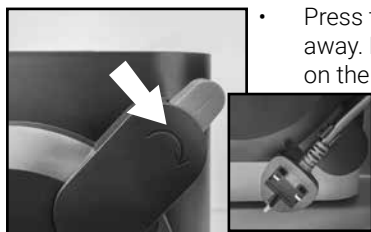
- During operation, hold and press the  water spray/steam button on the handle of brush and the appliance will generate water/steam. Press the  water spray/steam button again to stop the water/steam production.

NOTE: It is normal that there is little water spray before releasing steam. It is normal that when you stop the water spray/steam production there is a slight delay.

NOTE: Keep the brush head moving during operation to ensure safe operation.




- When finished, press the  on/off button on the handle of brush to start delay shut-off status and enter standby mode. Press the main power switch to turn off the appliance.



- Press the auto cord winding lever to put the power cord away. Fix the plug on the fastener, and then wind the hose on the cord winding rack neatly.

- Drain the water in the clean water tank and empty the waste water tank. Clean the tanks thoroughly after each use.

REFILLING THE CLEAN WATER TANK

- During operation when the clean water tank is empty the appliance will stop producing steam and the  light will flash on the control panel. Refill the clean water tank to continue operation.



- Remove the clean water tank from the appliance.
- Open the silicone plug of clean water tank and fill the clean water tank with water through the water inlet until it is filled with water to the "MAX" level indicator. The best way to fill the clean water tank is to lie is on a flat surface and add the water with a jug.




- Replace the silicone plug.



- Install the clean water tank onto the appliance well and then press the main power button to switch on the appliance.
- Press the on/off button on the steam brush head handle. Then press the water spray/steam button to spray water or release steam according to your selected mode.

EMPTYING THE WASTE WATER TANK

- When the waste water tank becomes full the appliance will stop and the  light will flash on the control panel. The waste water tank needs to be emptied.


NOTE: The appliance will stop working if the waste water tank is full.




- Remove the waste water tank from the appliance.




- Place the waste water tank over the sink, unscrew the large knob at the bottom of the waste water tank.
- Once the waste water tank is empty, rinse with clean water and empty.
- After the waste water tank is cleaned, close the knob and install the waste water tank back into the appliance.

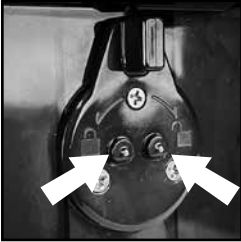

- If the appliance stops working during operation and the  light is flashing but the waste water tank is not full remove the waste water tank and wipe clean the the metal mesh filter and small metal post at the side of the waste water tank.



- Wipe clean the corresponding metal plate on the main unit. After cleaning, reinstall the waste water tank into the appliance.
- After the metal post and metal plate are cleaned, if the  light is flashing, please clean the waste water tank completely again and then install it back into position.

CLEANING AND MAINTENANCE

- Switch off and unplug the appliance and let it cool completely before cleaning or performing any maintenance.
- Clean thoroughly before using for the first time and after every use.
- The main body can be cleaned with a damp soft cloth.
- The clean water tank and waste water tank can be cleaned in water.
- Never immerse the main unit in water or any other liquid.
- Check the parts for wear or damage after every few uses.
- Empty the water tanks each time after you have used the appliance.
- Do not use any sharp or abrasive cleaning agents or cleaning pads to clean the appliance. These can damage the surface.
- Store the appliance in a dry, cool place.



- Regularly open the dust cover at the bottom of the main unit and remove the cotton block for cleaning.

Remove the cotton block and wipe the housing and wipe with a damp cloth.


Clean the cotton block with water, using a non-irritating detergent if necessary. Dry thoroughly before assembling back together.

DESCALING



- When the appliance provides descaling prompt ✨, please remove the handle of brush and then detach the brush head.

NOTE: If the descaling operation is not carried out, the user can continue to select the desired function to operate. However, if the descaling operation is not carried out after a period of use, the appliance will stop the use of other functions. Normal use can only be recovered after a descaling is performed.

- Place the open end of the hose where the water can be drained easily over a sink, ensuring you hold the hose in position.
- Mix white vinegar with water at a ratio of approximately 1:2, then pour the mixed solution into the clean water tank and install into main appliance.
- Press the  on/off button to start descaling.
- After the descaling is completed, clean the clean water tank and then attach the brush head and the handle to the hose, then the appliance can be operated normally again.


REMOVAL AND CLEANING FOR BRUSH HEAD



- Before cleaning, make sure the appliance is powered off and cooled down completely.
- Press the brush fastener and then remove the brush head, together with the brush head cover.
- Remove the brush head cover from the brush head.
- Wipe the brush head with a damp soft cloth and mild detergent.



- Remove the small filter located in in the handle and rinse it with clean water.
- Once clean Reinstall the filter, brush head and brush head cover.

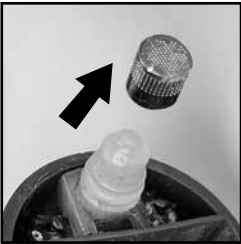

- After reinstalling the brush handle, if the the brush head can not spray water or there is irregular water-spraying pattern when using, please clean the small jet holes located underneath the bristles with the tool supplied.



FREQUENTLY ASKED QUESTIONS

Question: Why is the Carpet Spot Cleaner not working?

Answer: Check that it is plugged in correctly and is switched on at the mains wall socket.

Question: Why is the clean water indicator flashing?

Answer: The clean water tank needs filling. Remove the clean water tank from the appliance and fill it with clean water.

Question: Why is the waste water tank indicator flashing?

Answer: The waste water tank needs emptying, remove the tank from the appliance and empty and clean over a sink.

Question: Why is there no steam coming out?

Answer: When you press the water spray steam button it takes a while for this to action and come through the hose and brush head.

TECHNICAL INFORMATION

- Power: 1600W.
- Voltage: 220-240V.~
- Frequency: 50-60Hz.
- Flex length approx. 4m. (13').
- Weight of product: 6.78kg.

ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 10 AMP FUSE

Use a 10 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop.

**UK
CA** **CE** **RoHS**

RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.



Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 lakeland.co.uk