

**LAKELAND**  
**SMALL**  
**DEHUMIDIFIER**  
**INSTRUCTION BOOKLET**



Model: 46705



# LAKELAND SMALL DEHUMIDIFIER

Thank you for choosing the Lakeland Small Dehumidifier.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Small Dehumidifier removes moisture from the air to help prevent condensation and damp issues in small spaces. It is small, portable and lightweight, ideal for use in many spaces e.g. cabinet, bookcase, shoebox, wardrobe, cupboard, car etc. This dehumidifier removes up to 150ml of water from the air per cycle. It also has a wet/dry indicator window to show when it needs drying out so it can be reused.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

# CONTENTS

Product features.....	5
Safety precautions.....	6-11
Using your Small Dehumidifier for the first time.....	12-14
Instructions for use.....	15
Frequently asked questions.....	16-17
Cleaning and maintenance.....	18
Technical information.....	19
Electrical connections.....	20
Recycling your electrical.....	21

# PRODUCT FEATURES

1. Main unit
2. Wet/dry indicator window
3. Power light
4. Power port
5. Power cable and plug

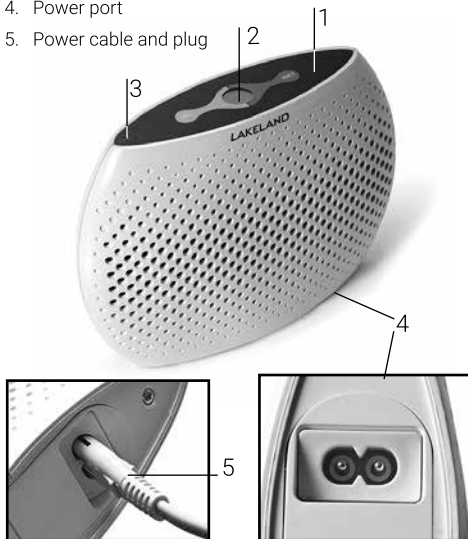

# SAFETY PRECAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety precautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way



and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk)
- Do not use this appliance if the lead is damaged. Contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk)
- Always use the appliance on a dry, level, heat resistant surface. Do not allow the power cord to touch hot surfaces.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.



- To protect against fire, electric shock or personal injury, do not immerse cord, plug or appliance in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop, where it may be pulled by children, or tripped over. Avoid contact between the lead and hot surfaces.
- For indoor use only and not in bathrooms.
- For domestic use only.
- This appliance should be used for dehumidifying as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.

- Not recommended to be used with a plug-in timer switch.
- An earthed extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
-  **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- **DO NOT** leave the Small Dehumidifier unattended or touching fabrics or very flammable surfaces when charging up.

- Avoid placing or exposing the appliance to rain or heat sources e.g. electric stoves, LPG stoves, heat pipes or blazing sunlight.
- **DO NOT** put the appliance with any medical products.


# USING YOUR SMALL DEHUMIDIFIER FOR THE FIRST TIME

1. Unpack the Small Dehumidifier, remove all the packaging materials.
2. If the silica gel beads through the indicator window are green, they are wet and the dehumidifier need drying out before use.

## CHARGING YOUR DEHUMIDIFIER



1. Using the power cable provided, plug the cable into the base of the main unit.

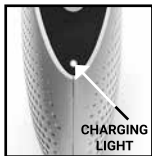

2. Plug-in and switch on at the wall, the red power light will turn on.

3. Place the appliance on a heat resistant surface or tray, some moisture/condensation may appear where it is in contact with the surface.

The appliance can be plugged in either on its side or upside down.


4. Dry the appliance for 15-20 hours or until the silica gel beads through the indicator window have turned orange. The length of time required may vary depending on the environment and humidity conditions around the appliance.



**WARNING:**

The appliance will be hot to touch when plugged in. This allows the silica gel beads to dry out. Keep at least 10cm away from plastic and other flammable items.

**NOTE:** You may see steam coming from the appliance or condensation inside the indicator window, this is normal.

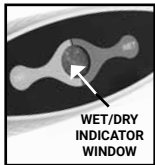

5. When the silica gel beads turn orange in the indicator window, unplug the appliance. The power light will turn off when unplugged.

6. The Small Dehumidifier is now ready to use.

# INSTRUCTIONS FOR USE

1. Make sure the silica gel beads through the indicator window are orange, meaning they are dry and ready to use.
2. The moisture absorbing speed will vary depending on the environment, humidity and temperature.
3. Unplug the dehumidifier and place the main unit in the desired area.
4. When the Small Dehumidifier has absorbed moisture and needs drying out to reuse, the silica gel beads in the indicator window will turn green.
5. Dry the dehumidifier crystals as per the instructions on page 6 to reuse the appliance.

# FREQUENTLY ASKED QUESTIONS

**Question:** Why is the Small Dehumidifier not working?

**Answer:** Check that the silica gel beads have turned orange through the indicator window. Drying takes approximately 15-20 hours.

To dry out the crystals for reuse, check the power cable is plugged in correctly, plugged in at the socket and turned on. There could be a problem with the socket, try a different socket. If the Small Dehumidifier is still not working, contact Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk)



**Question:** Why is the Small Dehumidifier hot while plugged in?

**Answer:** This is normal and allows the silica gel beads to dry out. Keep at least 10cm away from plastic and other flammable items.

**Question:** Why is there steam coming from the Small Dehumidifier.

**Answer:** You may see steam coming from the appliance or condensation inside the indicator window, this is normal and part of the drying process.

# CLEANING AND MAINTENANCE

- Switch off and unplug the appliance and remove the power cable before cleaning.
- The outside of the appliance can be wiped with a clean damp cloth, dry thoroughly before storing.
- **DO NOT** use abrasive cleaners, scouring pads or wire wool to clean the appliance.
- Never immerse in water or any other liquid.
- Check the parts for wear or damage after every few uses.
- Store the dehumidifier standing upright in a safe, dry place with the power cable stored away. Never wrap it tightly around the product.

# TECHNICAL INFORMATION

- Power: 25W.
- Voltage: 220-240V.~
- Frequency: 50/60Hz.
- Power cord length: 70cm

# ELECTRICAL CONNECTIONS

## THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

## CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

**Note:** After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover.

If lost, replacement fuse covers can be obtained from an electrical shop.



## RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.







**Lakeland**  
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ  
Tel: +44(0)15394 88100 **lakeland.co.uk**