

LAKELAND

HANDHELD TURBO SCRUB

INSTRUCTION BOOKLET



Model: 46738

LAKELAND HANDHELD TURBO SCRUB

Thank you for choosing the Lakeland Handheld Turbo Scrub.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Handheld Turbo Scrub is cordless, waterproof and highly efficient, making easy work of those kitchen jobs, from scrubbing dirty pans to delicate dinnerware or glassware, making light work of stubborn stains. The Handheld Turbo Scrub comes with 3 different cleaning attachments, making it suitable for a variety of different cleaning purposes. The scrub is rechargeable, no need to replace batteries.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.




Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	4
Cleaning head attachments uses	5
Safety precautions.....	6-9
Before using for the first time	9
Charging the Handheld Turbo Scrub.....	10
Instructions for use.....	11
Replacing the cleaning head attachments	12
Frequently asked question	12
Care and cleaning.....	13
Technical information.....	14
Recycling your electricals.....	15

PRODUCT FEATURES

1. Flat brush attachment
2. Main unit
3. Power/speed button
4. Indicator light
5. Charger compartment
6. Hanging loop
7. USB-C cable
8. Hook and loop head
9. Scouring attachment
10. Sponge attachment

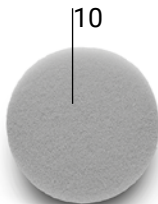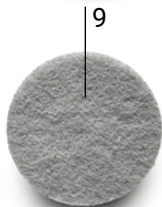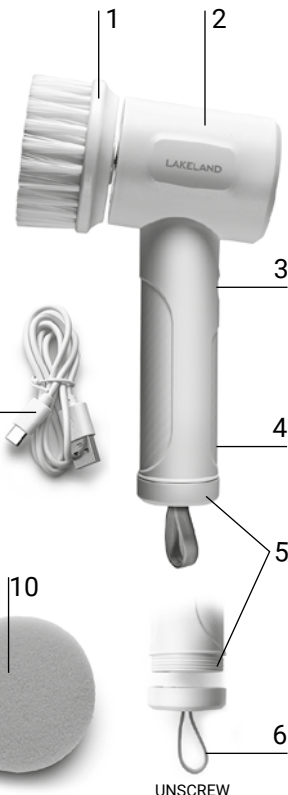

UNSCREW

CLEANING HEAD ATTACHMENTS USES



Flat Brush

For large surface area cleaning, such as tiles, small areas of floors, sinks, ovens etc.



 
Hook and Loop Head

For use with both the scouring and sponge cleaning attachments.



Scourer

Suitable for a large areas of stubborn dirt, stains and grease around the kitchen.

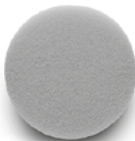

Sponge



Suitable for more delicate cleaning jobs such as dinnerware and glassware.

SAFETY PRECAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety precautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

- Make sure your electricity supply matches the voltage shown on the adaptor.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland Customer Services Team on 015394 88100 or info@lakeland.co.uk
- Do not use this appliance if the lead is damaged. Contact the Lakeland Customer Services Team on 015394 88100 or info@lakeland.co.uk
- Always use away from any heat sources.
- Unplug from the mains after charging and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse the USB-C cable in any liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for cleaning as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.


- To avoid injury or possible fire, do not cover the appliance when in use.
- Not recommended for use with a plug-in timer switch.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
-  **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- When the USB-C cable is damaged, do not touch the AC power cable with your hands to avoid danger.
- **DO NOT** allow your children to use the scrub as a toy.
- Before use, please check the attachment is fixed well.
- **DO NOT** use it pointing at people since the brushes are sharp.
- Please wear protective eye coverings and protective gloves when you use this product with some formula substances.
- Please keep hair, loose clothes and your body far away from the appliance when it is working.
- **DO NOT** insert any other accessories into the appliance when it is working.

- **DO NOT** pour water on this appliance or submerge this appliance into water.
- **DO NOT** wet the appliance, except the cleaning attachments.

BEFORE USING FOR THE FIRST TIME

- Unpack the Handheld Turbo Scrub, remove all of the packaging materials.
- Before first use, wipe the outside of the main unit with a clean, damp cloth and dry thoroughly.
- Hand wash cleaning head attachments, in warm soapy water, rinse and dry thoroughly.

CHARGING THE HANDHELD TURBO SCRUB

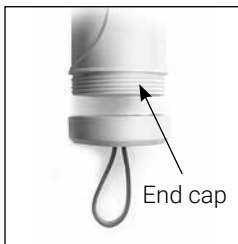


- Turn the end cap counterclockwise, to access the charging port.
- Insert the charging head of the cable into the charging port.
- The indicator light will flash red, indicating that it is charging. Once fully charged the indicator light illuminate blue.



- Running time with a full charge is approximately 1½ hours.
- To charge fully from empty will take approximately 2½ hours.



INSTRUCTIONS FOR USE

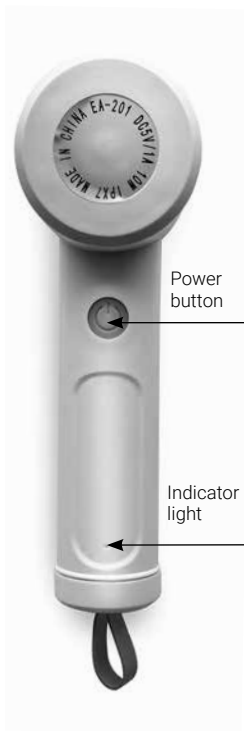

- Briefly press the power/speed button to start the appliance.
- After starting the Turbo Scrub, the default speed is low, the indicator light will illuminate blue.
- Press the power/speed button again to select a higher speed, the indicator light will illuminate pink.
- To turn off, press the power/speed button again.
- During use, if the indicator starts flashing red, this means that the battery is low and the unit needs recharging.
- During charging, the Turbo Scrub cannot be used.

REPLACING THE CLEANING HEAD ATTACHMENTS

To replace the cleaning head attachments, pull them outwards to remove. Attach the flat brush or hook and loop head on to the spindle by aligning the tabs on the main unit with the grooves on the attachment and press firmly into place. You can attach the sponge or scouring attachment onto the hook and loop head by pressing it into place.

NOTE: DO NOT use the hook and loop head for cleaning without either the sponge or scouring attachments in place.

FREQUENTLY ASKED QUESTIONS

Question: Why is the Handheld Turbo Scrub not working when pressing the power button?

Answer: Check that the Handheld Turbo Scrub is fully charged, the USB-C cable is removed and that all the parts are firmly joined together.

CARE AND CLEANING

- Switch off and let the Handheld Turbo Scrub cool completely before cleaning.
- Clean thoroughly before using for the first time and after every use.
- Check the parts for wear or damage after every few uses.
- Never immerse the main unit into water or liquid.
- Wipe the outside of the main unit with a clean, damp cloth and dry thoroughly.
- Hand wash the cleaning head attachments, in warm soapy water, rinse and dry thoroughly.
- Do not use abrasive cleaners, scourers or steel wool when cleaning.
- Store the Handheld Turbo Scrub in a clean dry place indoors, with the USB-C cable loosely coiled. Never wrap it tightly around the appliance.

TECHNICAL INFORMATION

Input DC: 5VDV, 1A

Output DC: 3.7V, 1500mAh.

Power: 10W.

IPX7 Waterproof

This product contains a Lithium Battery.



IPX7



Li-Ion

UK
CA



RoHS




RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.

The  symbol indicates that this product is covered by legislation for waste electrical and electronic products.

When the product has reached the end of its usable life, it and the Li-Ion battery it contains should be disposed of properly at a recognised recycling facility.

Lakeland

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ

Tel: +44(0)15394 88100 lakeland.co.uk