

LAKELAND

MINI COUNTERTOP VACUUM

INSTRUCTION BOOKLET



Model: 46829

SAFETY PRECAUTIONS

- Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety precautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction

LAKELAND MINI COUNTERTOP VACUUM

Thank you for choosing the Lakeland Mini Countertop Vacuum.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Mini Countertop Vacuum effortlessly picks up crumbs from countertops, a slow movement is all that is required.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.

PRODUCT FEATURES

1. Power button
2. Main body
3. USB charging point
4. Blades
5. Filter
6. Bottom cover
7. Brushes
8. Cleaning brush
9. Micro USB charging cable

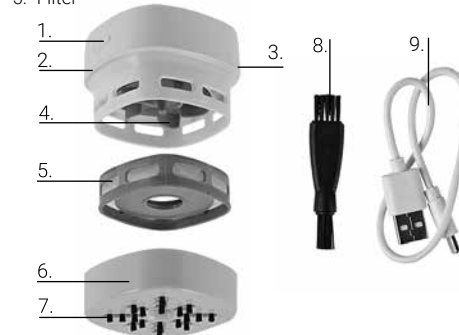

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland Customer Services team on 015394 88100 or info@lakeland.co.uk
- Do not use this appliance if the lead is damaged. Contact the Lakeland Customer Services team on 015394 88100 or info@lakeland.co.uk
- Unplug from the mains when fully charged and not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those supplied with the appliance by Lakeland.

Lakeland, Alexandra Buildings, Windermere,
Cumbria, UK, LA23 1BQ
Tel: +44(0)15394 88100 lakeland.co.uk

- To protect against fire, electric shock or personal injury, do not immerse cord, or main unit in water or any other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Not recommended to be used with a plug-in timer switch.

- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.



WARNING

- A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.



CAUTION

- The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- When the power cord is damaged, do not touch the power cord with your hands to avoid danger.

BEFORE USING FOR THE FIRST TIME

- Unpack the Mini Countertop Vacuum, remove all of the packaging materials.
- Before first use, wipe the outside of the Mini Countertop Vacuum with a clean, damp cloth and dry thoroughly.



WARNING

- **DO NOT** use on to clean large items or liquids. This is designed for small crumbs or dust only.
- **DO NOT** place fingers into the spinning blades while switched on.

CHARGING THE MINI COUNTERTOP VACUUM

- Insert the USB-C plug in to the charging port of the Mini Countertop Vacuum.
- Charge using the USB-C cable provided via a suitable USB power adaptor or USB recharging point - 100V-240VAC 50/60Hz.
- Plug the adaptor into an electrical socket to start the charging.

- It takes approximately 2 hours to fully charge the battery.



WARNING

- The Mini Countertop Vacuum will stop working when it needs charging.
- Charge the Mini Countertop Vacuum before use.

INSTRUCTIONS FOR USE

1. Ensure the countertop is dry.
2. Press the On/Off button to turn on.



WARNING

3. **DO NOT** press hard onto work surface. The brushes on the product and slow movements are all that is required to vacuum crumbs.
4. **DO NOT** use to clean large items or liquids. This is designed for small crumbs or dust only.
5. When finished, press the On/Off button to turn off. The Mini Countertop Vacuum has an auto shut-off timer of 10 minutes.
6. **DO NOT** use the Mini Countertop Vacuum with the bottom cover or filter removed.
7. The Mini Countertop Vacuum will run for approximately 30 minutes on a full charge.

EMPTYING THE MINI COUNTERTOP VACUUM



1. Remove the bottom cover.

NOTE: Avoid pressing the On/Off button as you hold the main body.



2. Empty contents into the bin.



3. Remove the filter and use the small cleaning brush provided to clean the filter. **DO NOT** use water to clean the filter.

4. Reassemble in the reverse order.

CARE AND CLEANING


- Do not submerge the Mini Countertop Vacuum into water or liquid.
- Clean the Mini Countertop Vacuum after each use.
- When not in use, store in a clean and dry place.
- Wipe over the body using a soft damp cloth. Do not clean with water.
- Do not use hard abrasives or cleaners.
- Clean the blades and waste bin with the cleaning brush.


RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.

The  symbol indicates that this product is covered by legislation for waste electrical and electronic products. When the product has reached the end of its usable life, it and the Li-Ion battery it contains should be disposed of properly at a recognised recycling facility.

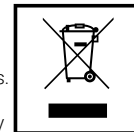

Li-Ion



RoHS

TECHNICAL INFORMATION

Input: 5VDC, 1A .

Output: 5VDC, 3W

Battery Capacity: 3.7V. 600mAh.

This product contains a Li-Ion Battery.