

DRY:SOON™

TOWEL HEATED AIRER

INSTRUCTION BOOKLET



Model: 53487

LAKELAND innovation

DRY:SOON TOWEL HEATED AIRER

Thank you for choosing the Lakeland Dry:Soon Towel Heated Airer. With its quick heat up time, your towels will be warm and dry ready for the next use.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Towel Heated Airer is perfect for toasty towels in the morning and warm pyjamas at bedtime, it's also good for when you have guests to stay and need some extra airing space. The Towel Heated Airer can be set at a constant temperature around 50°C and can be continuously on, or on a timer for 2 hours or 4 hours with auto shut-off.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.



Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	3
Safety precautions	4-5
Setting up the Towel Heated Airer for the first time	6
Instructions for use	6-7
Frequently asked questions.....	7
Technical information.....	8
Electrical connections.....	8
Recycling your electricals.....	8

PRODUCT FEATURES

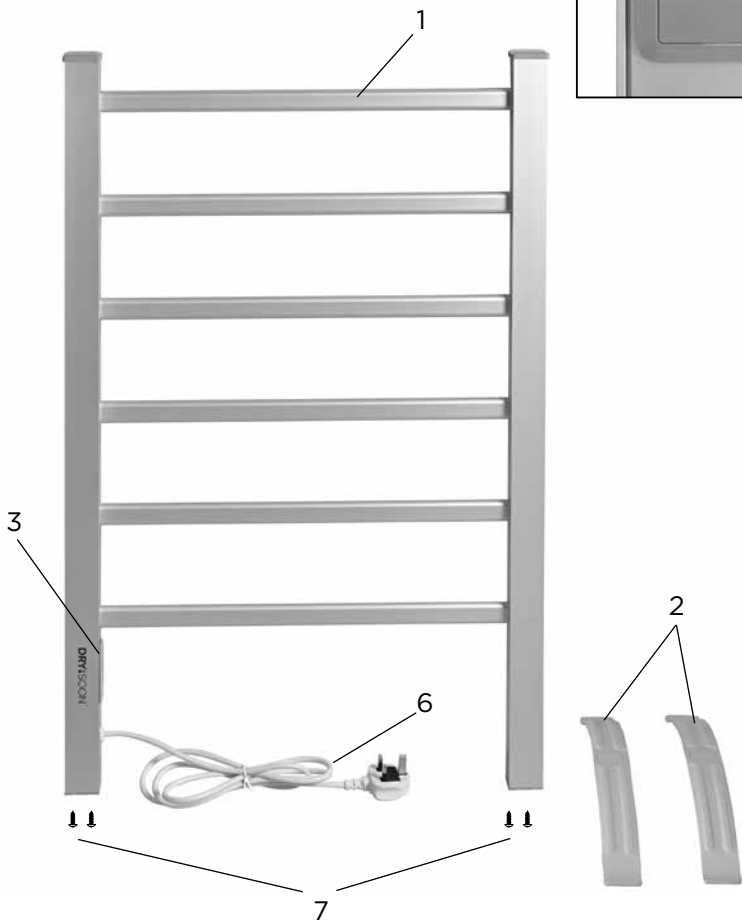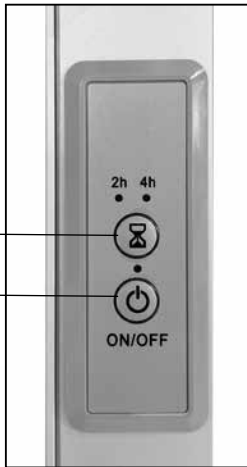

- 1. Heated rails
- 2. Feet
- 3. Control panel
- 4. On/off button
- 5. Timer button
- 6. Cord and plug
- 7. Screws



SAFETY PRECAUTIONS



Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety precautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland Customer Services team on 015394 88100 or info@lakeland.co.uk
- Do not use this appliance if the lead is damaged, contact Lakeland Customer Services team on 015394 88100 or info@lakeland.co.uk
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use. To disconnect, turn the socket to “off” and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or appliance in water or other liquids.
- Avoid contact between the lead and hot surfaces. Keep the ailer plug and lead away from ovens, electric and gas burners, flames and water sources.
- For indoor use only.
- For domestic use only.
- This appliance should be used for warming towels and airing clothes as described within the instructions for use that accompany it.

- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead or carry the ailer by its lead.
- Do not allow the lead to be compressed or curled, or touch sharp edges.
- Not recommended to be used with a plug-in timer switch.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance.
-  **WARNING:** A cut off plug inserted into a socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Always switch off and unplug the Towel Heated Ailer after use, leaving it to cool down completely before storing it away. Do not wind the power cord around the Towel Heated Ailer.
- Do not run cord under carpeting. Do not cover cord with throw rugs, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- Do not use it in areas where paints or flammable liquids are used or stored.
- Do not overload the Towel Heated Ailer, the maximum load of the ailer is 6kg. Load evenly across the rails to avoid the Towel Heated Ailer tipping over.
- The appliance must be placed on a level, dry surface at least 60cm away from heat or water sources.
- Do not allow children to play with the ailer.
- The Towel Heated Ailer should be installed so that the switches and other controls cannot be touched by a person in the bath or shower.
- Always use the appliance in an upright position.

SETTING UP THE TOWEL HEATED AIRER FOR THE FIRST TIME

Turn the Towel Heated Airer upside down and place the feet onto the bottom of the heated piece. Locate the screws one at a time into the holes through the bottom of the feet and screw them into the heated airer. Tighten to secure the feet in place. Turn the Towel Heated Airer the right way up and place on a level, dry surface ready for use.

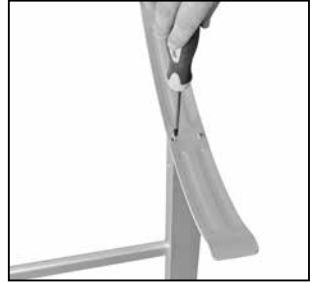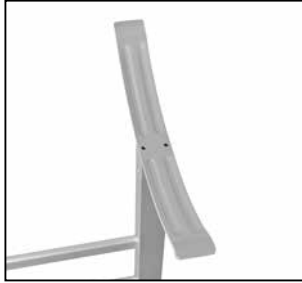

INSTRUCTIONS FOR USE



1. Plug the Towel Heated Airer in and switch on using the on/off button, a red indicator light will show the airer is now on and will run continuously.

CAUTION: Items should be placed on the horizontal heated rails only.

2. When you have finished using the Towel Heated Airer and not in use, switch off and unplug from the wall socket.



3. To use the timer function press the timer button once, the indicator light next to the 2H symbol will illuminate blue indicating that the timer is set for 2 hours.



4. Press the timer button again and the indicator light next to the 4H symbol will illuminate blue, indicating that the timer is set for 4 hours.



5. When the heated airer has been on for the required length of time, of 2 or 4 hours, it will automatically switch off and nothing will be illuminated.

FREQUENTLY ASKED QUESTIONS

Question: Why is my Towel Heated Airer not heating up?

Answer: It may not be switched on. Check the Towel Heated Airer is plugged in and the on/off button is illuminated.

TECHNICAL INFORMATION

- Power: 100W.
- Voltage: 220-240V.-
- Frequency: 50Hz.

Approximate size:

- Open: 53 x 35.5 x 90cm H. (21" x 14" x 35½").
- Weight of product: 1.8kg.

ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop.



RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.



Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 www.lakeland.co.uk