

LAKELAND

INSTRUCTION BOOKLET

PLATE WARMER



Model: 62386

LAKELAND PLATE WARMER

Thank you for choosing the Lakeland Plate Warmer.

Please take a little time to read this booklet before you use your appliance and keep it in a safe place for future reference.

Your Plate Warmer is ideal for when you've prepared a delicious feast for friends and family and want to serve everything on pre-warmed plates or bowls so your food makes it to the table at just the right temperature.

With precision temperature control to 60°C it heats up to ten plates and bowls in just 10 minutes and the auto shut off function switches off the Plate Warmer after 5 hours.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features.....	3
Important instructions and safety notes	4-7
Using your Plate Warmer for the first time	8
Instructions for use	9-10
Frequently asked questions.....	11
Care and cleaning	12
Electrical connections.....	13
Recycling your electricals	13

PRODUCT FEATURES

1. Plate warmer
2. Detachable control lead
3. Control unit with LED indicator
4. On/off switch
5. Inside of plate warmer
6. Connection plug
7. Connector
8. Outside of plate warmer

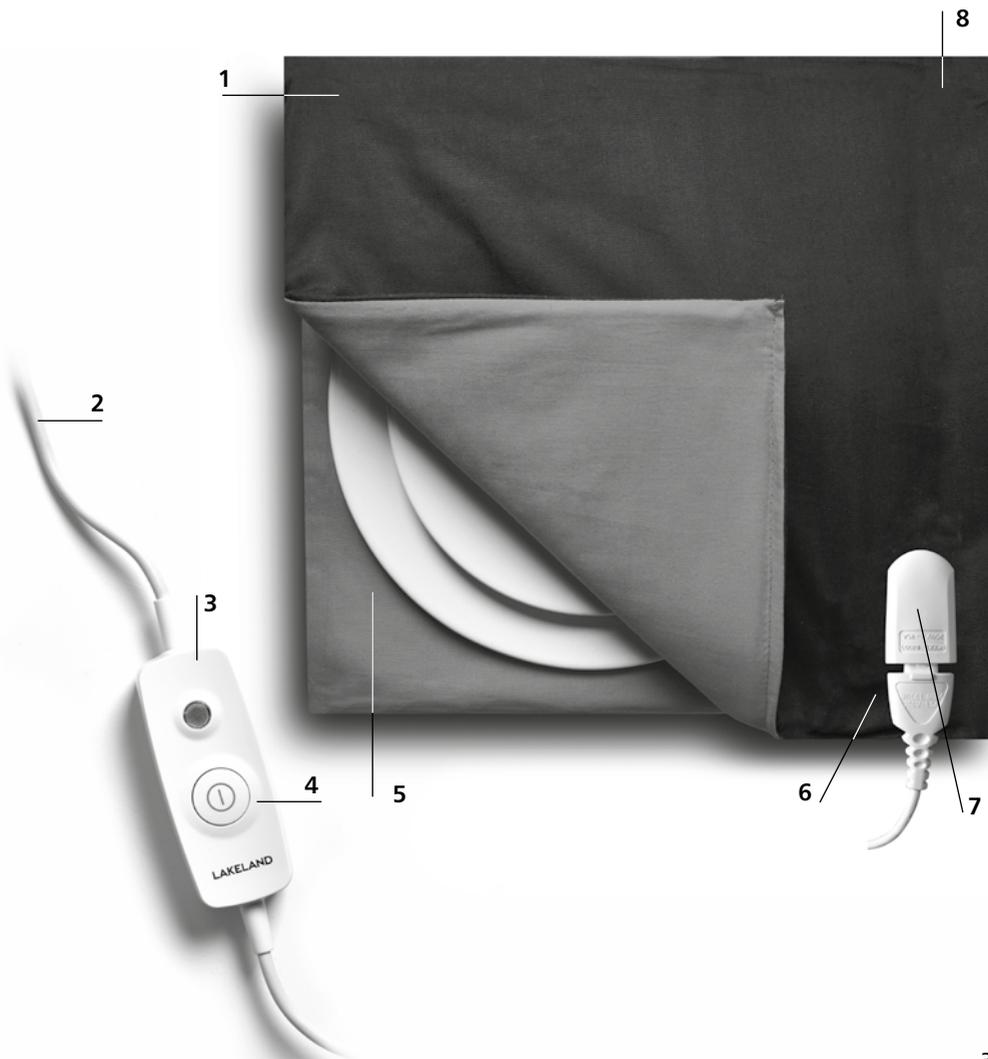

IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.



WARNING! Instructions and warnings for safe use.

SAFETY NOTES



- Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with.
- Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.
- **NOTE:** Should any part of this manual be difficult to understand or any doubt arise, contact Lakeland at the address indicated on the last page before using the appliance.
- **NOTE:** Persons with impaired vision may consult these instructions for use in digital format on our website www.lakeland.co.uk
- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage. If in any doubt, do not use the appliance and contact an authorised service centre.
- **WARNING!** Risk of suffocation.
- Children shall not play with the packaging. Keep the plastic bag out of the reach of children.
- This appliance must be used only for the purpose for which it was designed, namely as a plate warmer for home use.

Any other use is considered not compliant with the intended use and therefore dangerous.

- This plate warmer is designed to heat up to 10 plates. Do not use empty.
- Use this appliance on a flat and stable surface. Fold only in the specified points.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit.
- This appliance can work automatically at a frequency of 50 Hz or 60 Hz.
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



- **DO NOT** use the appliance with wet hands or damp feet.



- **DO NOT** pull the supply cord or the appliance itself to remove the plug from the socket.



- **DO NOT** pull or lift the appliance by the supply cord.

- Prevent the power cord from coming into contact with sharp edges or heat sources. Do not bend or crush the power cord.



- **DO NOT** expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.

- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, contact an authorised technical service centre before switching it on again.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, so as to prevent all risks.



- **DO NOT** use this appliance to warm animals.



- **DO NOT** use if wet.



- **DO NOT USE FOLDED OR CREASED.**



- **DO NOT INSERT PINS OR NEEDLES.**

- When storing the appliance, allow it to cool down before folding.



- **WARNING! DO NOT** crease the appliance by placing items on top of it during storage.

- Follow indications in the relevant chapters of this manual on how to use, clean, maintain or store the appliance.
- **WARNING!** Always disconnect the appliance from the socket when the appliance is not in use.
- See the external packaging for the characteristics of the appliance.
- Use the appliance only with the supplied accessories that are an essential part of the appliance.



- **WARNING!** Always disconnect the appliance from the mains and disconnect the control connector from the plate warmer before cleaning or performing maintenance.



- **WARNING!** If the appliance does not resume its original size or if problems arise with the internal cables contact an authorised service centre for a safety check.




- **WARNING!** Dry the appliance flat without using pegs to avoid damaging it. Leave it to dry, laid out flat on a clothes horse, not in direct sunlight.

- When not in use, store as follows:
 - Allow it to cool before storing it.
 - Let dry thoroughly before storing it
 - Fold only in the specified points.
 - **DO NOT** place other objects on top of the appliance when you store it.

USING YOUR PLATE WARMER FOR THE FIRST TIME

- Unpack the Plate Warmer and remove all the packaging materials.

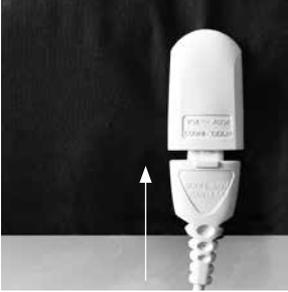

- Insert the connection plug into the connector on the Plate Warmer.



- Ensure the connection plug is fully pushed in until it engages.
- Place the Plate Warmer on a dry, sturdy, level heat resistant surface, use a protective layer if on wooden furniture.

INSTRUCTIONS FOR USE


- Place the Plate Warmer on a dry, level, sturdy and heat resistant surface.
- Ensure the Plate Warmer is switched OFF at the power switch before connecting the power cord. Then plug into the mains socket and turn on.
- When you switch on the Plate Warmer for the first time there may be a slight burning smell. This is normal for a new product and will disappear after a few uses.
- This product is for heating up to ten plates or bowls.
- Insert the plates or bowls from the middle, with a maximum two plates or bowls for each compartment.
- Switch on the Plate Warmer, heating starts immediately and the LED light will illuminate red.
- Heat up plates for approx. 30 minutes, until the plates are evenly warm.
- Switch off the Plate Warmer at the control unit, switch off the mains socket and remove the plug from the socket.
- Remove warm plates or bowls, with an oven glove.
- Arrange food on the pre-heated plates.
- Suitable for plates and bowls up to 30cm (12") Dia.
- Allow the appliance to cool down before storing it away.

AUTO SHUT-OFF

- Your Plate Warmer will automatically switch off after 5 hours.


CONTROL UNIT LED SIGNALS

BLUE LIGHT CONSTANT BLUE ILLUMINATED

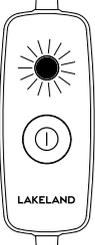


- The detachable control lead may not be connected correctly.
- The Plate Warmer may have gone into 'Auto Shut-off' as it has been on for 5 hours.
- Switch off the Plate Warmer and allow to cool down.

BLUE LIGHT – FLASHING IN TWOS

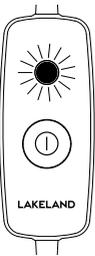


- The detachable control lead may not be connected correctly.
- Switch off and disconnect.
- Check the plug connection.
- Reconnect and switch on at the socket and then the control unit.

BLUE LIGHT – FLASHING IN THREES

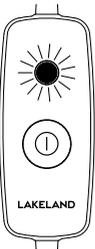

- The Plate Warmer may have overheated or is damaged.
- Switch off and disconnect.
- Allow to cool.
- Reconnect and switch on at the socket and then the control unit.

RED LIGHT

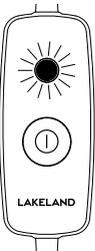

- The appliance has heated up and is ready to use.

FREQUENTLY ASKED QUESTIONS

Question: Why is the control unit not illuminating?

Answer: Check that the detachable control lead is properly attached to the Plate Warmer. The appliance may not be plugged in or switched on at the socket.

Question: Why is the light on the control unit flashing?

Answer: Check that the connection plug is fully pushed into the connector.

The Plate Warmer automatically switches off after 5 hours and may have gone into Standby mode, see 'Instruction for use'.

The Plate Warmer may be faulty or damaged. If so, contact the Lakeland customer care team on 015394 88100.

Question: Why is there heat discolouration on the fabric?

Answer: There may be a fault with the appliance, discontinue use and contact the Lakeland customer care team on 015394 88100.

CARE AND CLEANING

- Before cleaning, switch off and unplug from the mains socket, let the Plate Warmer cool completely before cleaning.
- Check parts for wear and damage after every few uses.
- Never immerse the detachable control lead in water or any other liquid.
- Do not use abrasive or aggressive cleaning agents.

WASHING INSTRUCTIONS

- Disconnect the detachable control lead from the connector on the Plate Warmer.
- Machine washable at 30°C.
- Do not iron. Tumble dry on a low setting. Do not dry clean or bleach.
- To hand wash, use a mild washing powder or detergent and soak your Plate Warmer in lukewarm water for 15 minutes. After soaking, gently wash the Plate Warmer and rinse thoroughly with clean, lukewarm water.
- Allow the excess water to drain from the Plate Warmer. Do not wring the plate warmer.

DRYING YOUR PLATE WARMER

- Air dry on a clothes line, avoid use of clothes pegs as they will damage the Plate Warmer.
- Do not use your Plate Warmer until it is completely dry.
- Do not wring the Plate Warmer.

STORING YOUR PLATE WARMER

- When storing the Plate Warmer, allow it to cool down before folding.
- Avoid creasing the Plate Warmer.
- Do not place heavy items on the Plate Warmer when in storage, as deep creases or folds may damage the wiring.
- Do not use any moth-proofing chemicals.
- Store the Plate Warmer with the power cord loosely coiled. Never wrap it tightly around the Plate Warmer.

ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.



Made and imported for Lakeland by Imetec UK Ltd. CW10 0GW
Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 www.lakeland.co.uk