

# LAKELAND

INSTRUCTION BOOKLET

## **Automatic Pot Stirrer**



Model: 62575

# LAKELAND AUTOMATIC POT STIRRER

Thank you for choosing the Lakeland Automatic Pot Stirrer.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Automatic Pot Stirrer ensures you no more burning food again! With two speed options leave your pots unattended whilst multi-tasking, ideal for risottos, porridges, custard and chutneys which need stirring regularly. Compact storage when not in use, with a powerful long lasting battery.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

## CONTENTS

Product features .....	3
Safety cautions .....	4-5
Using your Automatic Pot Stirrer and using for the first time .....	6-7
Instructions for use .....	8
Hints and tips .....	9
Frequently asked questions .....	9
Care and cleaning .....	10
Electrical connections .....	11
Recycling your electricals .....	11

# PRODUCT FEATURES

- 1. Stirrer cap
- 2. On/Off button
- 3. Speed button
- 4. Main unit with battery plug
- 5. Adjustable pan arms
- 6. Stirrer spindle
- 7. Adjustable folding stirrer paddle
- 8. Rubber base
- 9. Battery charger and cable

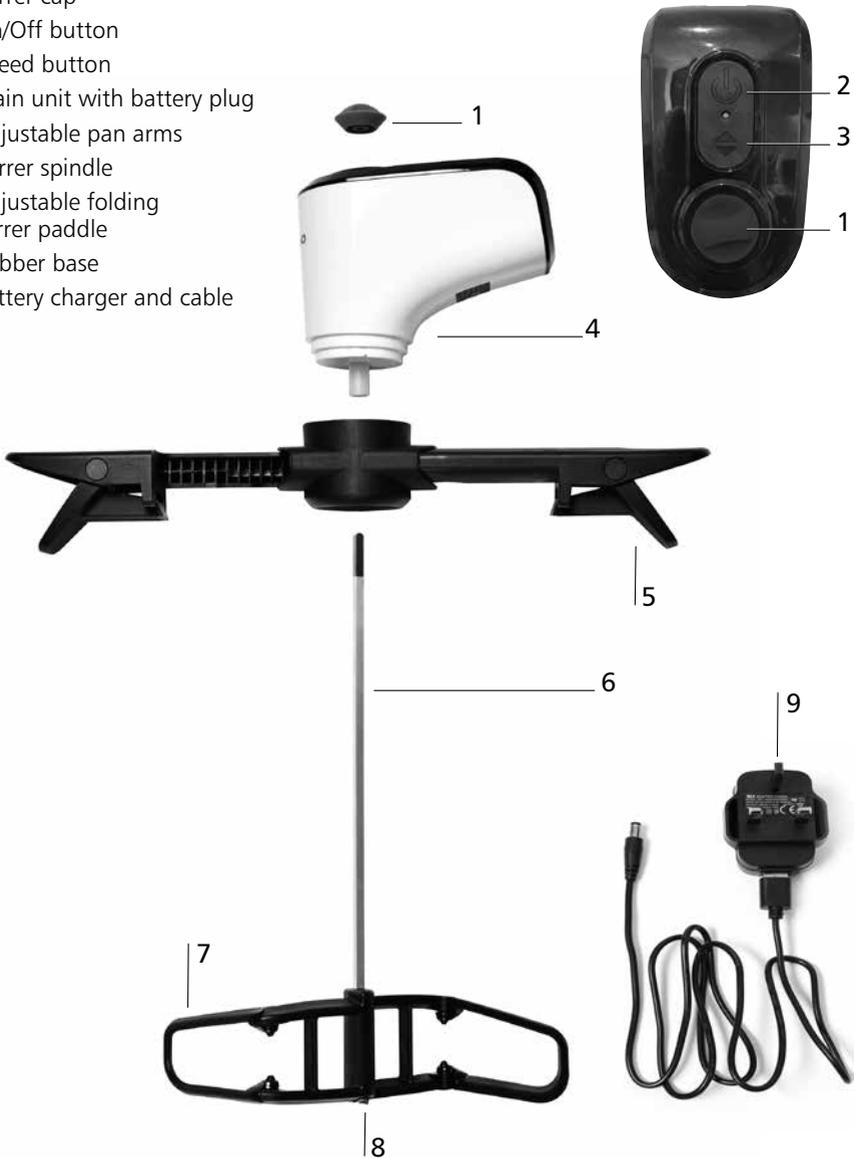

## Battery Charger

The rechargeable battery lasts up to 2 hours constant stirring. The product contains a Lithium Battery.

## **SAFETY CAUTIONS**

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. If the lead is damaged it must be replaced with a special lead. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or lid in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for preparation of food as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.

- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Always use the pan's designated handles for moving the pan. Never hold or move it using the Automatic Pot Stirrer.
- Always take the appliance apart before storing. Make sure the On/Off button isn't pressed when storing as this will drain the battery power.
- If the appliance stops at the low speed either add more fluid to the food, or simply increase to the high speed.
- All gears need some time to run themselves in. The sound from the stirrer main unit will decrease after some use.
- **DO NOT** leave the Automatic Pot Stirrer on the pan between uses as the friction rubber material may stick and deform slightly over time.
- **DO NOT** drop the appliance as this may damage the unit.
- **DO NOT** expose the adjustable pan arms to direct flames, for example using a small and very low pan on a large gas flame as this may damage the adjustable pan arms.
- **DO NOT** put the appliance in an oven.
- Always make sure there is some liquid in the pan before turning on any heat. Follow your recipe and do not use excessive heat on ingredients like milk etc.

## USING YOUR AUTOMATIC POT STIRRER FOR THE FIRST TIME


- Unpack the Automatic Pot Stirrer, remove all the packaging materials.
- Before first use, wipe the main unit with a clean damp cloth.
- Wash the adjustable pan arms, stirrer spindle and adjustable folding stirrer paddle in warm soapy water, rinse and dry thoroughly.
- Make sure that all parts are clean and dry before assembling the product.
- **Warning:** Do not turn on the appliance before you have fully assembled it.

## CHARGING THE MAIN UNIT

1. Connect the battery charger to the main unit, plug in and switch on at the socket.
2. The light by the On/Off button will illuminate red. When fully charged this will change to green.
3. To fully charge it will take about 4 hours. When fully charged the appliance will stir for about 2 hours, dependent on the viscosity of the food being stirred.
4. When the battery power is too low, the appliance will beep. To stop the beeping, press the On/Off button, insert the charging cable into the battery charger and turn on at the socket to charge.
5. If you **DO NOT** do this, the main unit will beep for several days before the unit stops. This may damage the battery permanently.



## ASSEMBLING THE AUTOMATIC POT STIRRER

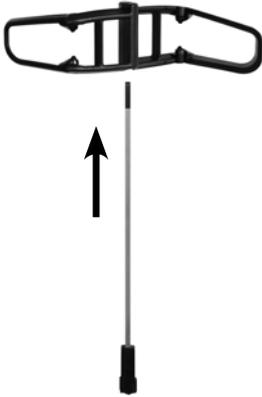

1. Place the stirrer spindle through the large hole in the adjustable folding stirrer paddle. So that it slides over the black rubber at the end of the stirrer spindle.



2. Attach the main unit onto the adjustable pan arms bracket. Hold the adjustable pan arm upright, with the large opening in the middle. Insert the end of the white turner through the hole with the main unit at a position of about 8 o'clock. Then turn anticlockwise to lock into position. The adjustable pan arms and main unit will all be in line.



3. Pass the stirring spindle through the hole in the adjustable pan arms bracket, which will then pass through the main unit and come out at the top.
4. Place the stirrer cap on top to hold in position.

## INSTRUCTIONS FOR USE

1. Remove the charging cable and battery charger.
2. The Automatic Pot Stirrer fits most pans with a pan diameter from 14cm to 24cm and a pan height of 6cm to 17cm height.
3. The stirrer spindle is adjustable so it will automatically adapt to the height of your pan.
4. Carefully lower the Automatic Pot Stirrer into your pan and adjust the arms to the size of your pan.
5. Squeeze open the clamp on both sides to place the adjustable pan arms over the rim of the pan. Make sure you press the bracket down thoroughly, so the surface of the bridge touches the pan rim.
6. Let go of the clamp and it will fasten around the rim and secure the adjustable pan arms bracket firmly.
7. You can do this either before or after adding ingredients to the pan.
8. The stirring paddle will sit slightly above the pan bottom.
9. Do not worry as this will straighten itself and align with the bottom once the paddle starts turning.
10. If you insert the Automatic Pot Stirrer after adding ingredients to the pan, twist the stirring paddle into the pan as far as possible until it reaches the bottom.
11. The stirring paddle will dig into the ingredients once the appliance starts turning.
12. To start stirring simply press the On/Off button.
13. The appliance will start at the speed it was set to last time it was in use.
14. To alternate between high or low speed simply press the speed button and it will toggle between the two speeds.
15. The light indicates if you start to run out of battery. The appliance will also make a beeping sound. To stop the beeping press the On/Off button. Remove the appliance from the pan and recharge.
16. To stop the stirrer simply press the On/Off button.
17. Using oven gloves carefully remove the appliance from the pan by squeezing the clamps on both sides and lift the appliance off the pan. Be careful as it will be hot.
18. Be careful of dripping hot food on the stirrer paddle.



## HINTS AND TIPS

- If the appliance stops at the low speed either add more fluid to the food, or simply increase to the high speed.

## FREQUENTLY ASKED QUESTIONS

**Question:** The appliance is assembled but when you press the On/Off button it does not start.

**Answer:** The battery of the appliance may have run out, remember to keep the appliance charged up.

**Question:** Why is the appliance struggling to turn?

**Answer:** The appliance may be on the low speed instead of high. Add more liquid to the pan.

## **CARE AND CLEANING**

- Switch off the Automatic Pot Stirrer and let it cool completely before cleaning. If connected to the charger, switch off and unplug.
- Clean thoroughly before using for the first time and after every use.
- Check the parts for wear or damage after every few uses.
- Do not use abrasive cleaners, or steel wool.
- Wipe the main unit with a clean damp cloth.
- Never immerse the main unit in water or any other liquid.
- Wash the adjustable pan arms, stirrer spindle and adjustable folding stirrer paddle in warm soapy water, rinse and dry thoroughly.
- Disassemble the stirrer spindle from the adjustable folding stirrer paddle before washing.
- Store the Automatic Pot Stirrer with the power cable loosely coiled. Never wrap it tightly around the product.

# ELECTRICAL CONNECTIONS

## THIS APPLIANCE MUST BE EARTHED

Battery charger has a transformer which contains a Lithium Battery.

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

## CHANGING THE 13 AMP FUSE

Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

**Note:** After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

# RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country.

Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) to find your nearest recycling point.



**Li-Ion**

This product contains a Lithium Battery.

**Lakeland**

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ

Tel: +44(0)15394 88100 [www.lakeland.co.uk](http://www.lakeland.co.uk)