

LAKELAND

INSTRUCTION BOOKLET

RETRO DRINKS MAKER



Model: 62586

LAKELAND RETRO DRINKS MAKER

Thank you for choosing the Lakeland Retro Drinks Maker.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

Enjoy thick and creamy milkshake or a refreshing cocktail in 3 minutes, with this cool retro-style Drinks Maker, which looks great on display. Fantastic for mixing smoothies or protein shakes and even eggs or batter.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	3
Safety cautions	4-5
Using your Retro Drinks Maker and using for the first time	6
Instructions for use	6-7
Adapting your own recipes	8
A guide to ingredients	8
Hints and tips	9
Frequently asked questions	10
Care and cleaning	10
Electrical connections	11
Recycling your electricals	11

PRODUCT FEATURES

- 1. Main body
- 2. Cup support
- 3. Mixing wand
- 4. Cup rest
- 5. Milkshake cup
- 6. Non-slip feet
- 7. On / off / pulse switch
- 8. Cord and plug

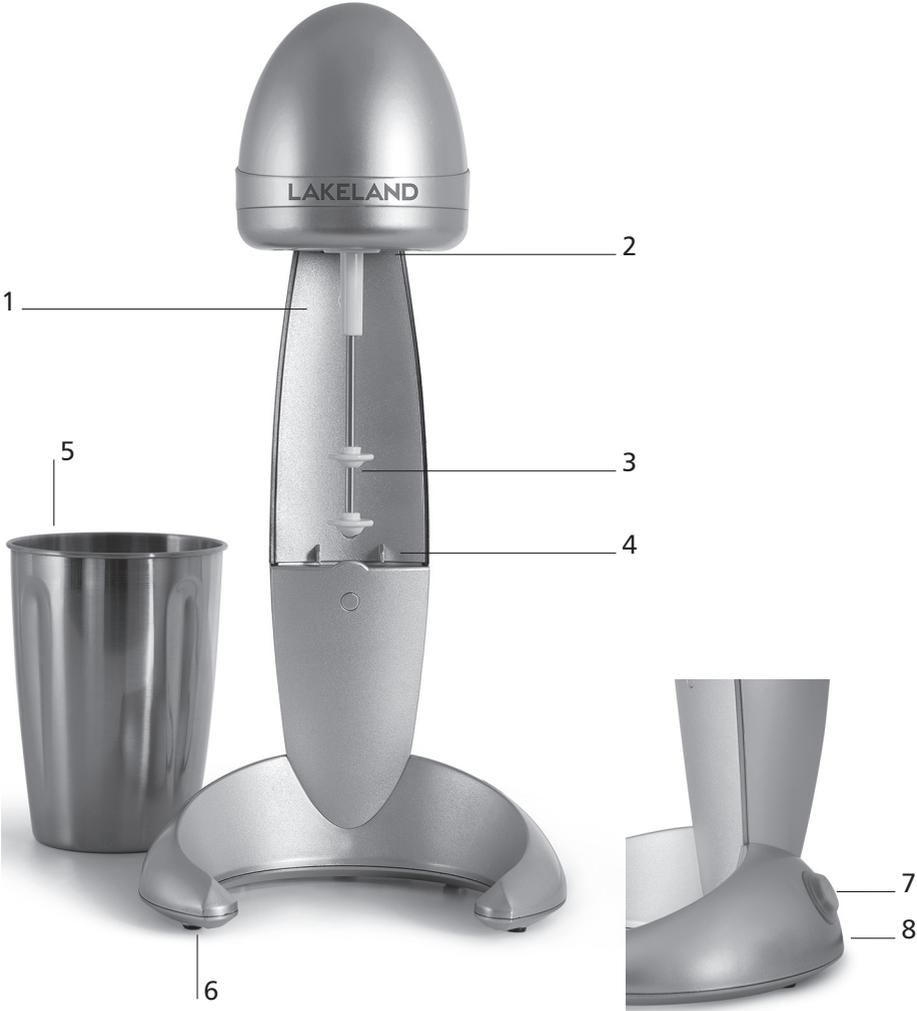

SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. If the lead is damaged it must be replaced with a special lead. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or lid in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for preparation of drinks as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.

- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- **DO NOT** touch moving parts.
- **DO NOT** operate the appliance when empty.
- Never add ingredients while the appliance is in operation.
- **DO NOT** use hot ingredients.
- Keep hands and utensils out of the milkshake cup to reduce the risk of injury to persons or damage to the Retro Drinks Mixer.
- Container must be properly in place before operating appliance.
- **DO NOT** remove the mixing wand.

USING YOUR RETRO DRINKS MAKER FOR THE FIRST TIME

1. Unpack the Retro Drinks Maker, remove all the packaging materials.
2. Before first use, wipe the main body and mixing wand with a clean damp cloth.
3. Wash the milkshake cup in warm soapy water, rinse and dry thoroughly.
4. Make sure that all parts are clean and dry before assembling the product.
5. Check that the Retro Drinks Maker has no visible damage and that no parts are missing.
6. **WARNING:** Do not insert the plug into an electrical outlet, or turn on the Retro Drinks Maker before you have fully assembled it.

INSTRUCTIONS FOR USE

1. Place the appliance on a dry, flat, heat-resistant surface, near a socket.
2. Prepare your ingredients and add them to the milkshake cup.
3. Slide the lip of the milkshake cup into the cup support. If the lip of the milkshake cup is not properly located in the cup support at the top and resting on the cup rest at the bottom, the appliance will not work. This is a built in safety feature.



4. When the milkshake cup is securely and properly placed onto the cup rest, turn the Retro Drinks Maker on to the "Pulse" setting by pressing the On/Off/Pulse Switch into the 'II' position. Hold this button down for approximately 10-15 seconds.
5. Then run the Retro Drinks Maker on the 'I' setting for approximately 30-45 seconds.
6. **DO NOT** run the Retro Drinks Maker for more than 3 minutes at a time, allow the appliance then to rest for 5 minutes between cycles to cool down.

7. When adding ingredients to the milkshake cup, take care not to exceed the 'MAX' mark.
8. Always switch off and unplug the appliance before removing the milkshake cup.
9. Once mixed, pour your milkshake or drink into a glass, top with toppings, serve and enjoy.

ADAPTING YOUR OWN RECIPES

1. Once you've tried some of the recipes in this booklet, you may wish to adapt them, using our suggestions as a guide.
2. The table below is a guide to help you create flavours of milkshakes and drinks / cocktails.
3. Remember that solid ingredients need to be blended before being added to the Retro Drinks Maker and slightly adjusting the ratio of ice cream to milk will make for a creamier or thicker milkshake. The temperature of your ice cream, or milk will produce slightly different consistencies.
4. Add your ice cream to the milkshake cup, then the milk and extra ingredients.

A GUIDE TO INGREDIENTS

MILKSHAKE

Flavour	Ice cream	Milk	Extra ingredients	Fun toppings and special instructions
Classic Vanilla	3 scoops vanilla	235ml	n/a	Whipped cream, cherries
Chocolatey Goodness	3 scoops chocolate	235ml	n/a	Whipped cream, chocolate sauce
Peanut Butter and Banana	3 scoops vanilla	235ml	1 blended banana, 2 tbsp peanut butter	Whipped cream, chocolate sprinkles
Sweet Strawberry	3 scoops vanilla	235ml	Handful of strawberries, blended	Whipped cream, mint
Peanut Butter and Jam	3 scoops vanilla	235ml	2 tbsp peanut butter, 2 tbsp jam	Whipped cream, crushed peanuts
Black and White	3 scoops vanilla	235ml	1 tbsp malt powder, hot fudge	Another scoop of ice cream. Tip: Coat your glass with hot fudge before pouring milkshake. Top milkshake with scoop of ice cream and more
S'mores	3 scoops chocolate	235ml	Handful of marshmallows, softened	Toast marshmallows until browned then add to milkshake mixture. Top with whipped cream and crumbled biscuits

COCKTAILS

Flavour	Ice cream	Milk	Extra ingredients	Fun toppings and special instructions
Boozy Banana	3 scoops vanilla	235ml	1 blended banana, 30ml rum	Whipped cream
Irish Cream Shake	3 scoops chocolate	235ml	30ml Irish cream	Whipped cream
Strawberry Daiquiri	n/a	n/a	50ml rum, 1 pureed strawberry, 40ml grenadine syrup, 20ml fresh lime juice	Pour over crushed ice and garnish with a strawberry
Pina Colada	2 scoops coconut	n/a	80ml rum, 160ml pineapple juice, 1 tsp sugar	Pour over crushed ice and garnish with pineapple

HINTS AND TIPS

1. If you wish to add fruits to your milkshake, blend the fruits before you put them into the milkshake cup. This will help achieve a creamier result.
2. The greater amount of soft wet ingredients you add, the creamier your milkshake will be and you will get better results
3. The longer you run the Retro Drinks Maker, the creamier your milkshake will be.
4. For the frothy milkshakes, use well-chilled milk.
5. Dry and frozen ingredients produce a thicker milkshake.
6. For best results, place wet ingredients in the milkshake cup before dry ingredients.
7. Only use crushed ice. Do not use whole ice cubes as they may damage the appliance.
8. Only use the milkshake cup provided with the Retro Drinks Maker.

FREQUENTLY ASKED QUESTIONS

Question: The appliance is assembled but when you press the power button it does not start.

Answer: Check that the appliance is plugged in and switched on at the socket.

The milkshake cup may not be correctly located in the cup support and on the cup rest, reposition. If the top rim is not correctly located the Retro Drinks Maker will not work, this is a safety feature.

CARE AND CLEANING

- Switch off and unplug the Retro Drinks Maker and let it cool completely before cleaning.
- Clean thoroughly before using for the first time and after every use.
- Check the parts for wear or damage after every few uses.
- **DO NOT** use abrasive cleaners, or steel wool.
- Never immerse the main body in water or any other liquid.
- To clean the outer surfaces, wipe with a clean damp cloth and dry thoroughly before storing.
- Wipe down the mixing wand with a clean damp cloth or a non-abrasive sponge.
- **CAUTION:** The mixing wand is not removable.
- Clean the milkshake cup with warm soapy water and a non-abrasive sponge and dry thoroughly.
- Store the Retro Drinks Maker with the power cable loosely coiled. Never wrap it tightly around the product.

ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.



Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 www.lakeland.co.uk