

LAKELAND

INSTRUCTION BOOKLET

TEMPERATURE CONTROL KETTLE



Model: 62805

LAKELAND TEMPERATURE CONTROL KETTLE

Thank you for choosing the Lakeland Temperature Control Kettle.

Please take a little time to read this booklet before you use your kettle, and keep it in a safe place for future reference.

This kettle allows you to choose the correct temperature for your perfect brew using the simple touchscreen control base. You can choose between 60, 80, 90 or 100°C. There is a 40 minute keep warm mode and has a 1.2 litre capacity.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS


Product features.....	3
Safety cautions.....	4-5
Using the kettle for the first time.....	6
Instructions for use	7-8
Recommended temperature for various teas.....	9
Hints and tips.....	9
Descaling	9
Frequently asked questions.....	10
Care and cleaning	10
Technical information	11
Electrical connections.....	11
Recycling your electricals	11

PRODUCT FEATURES

1. Soft-open flip-top lid
2. Spout
3. Flip-top lid release button
4. Kettle body (1.2litre capacity)
5. Minimum and maximum capacity marks
6. 360° base
7. Cool touch handle
8. Touchscreen control panel
9. Power cord
10. Cord storage



TOUCHSCREEN CONTROL PANEL

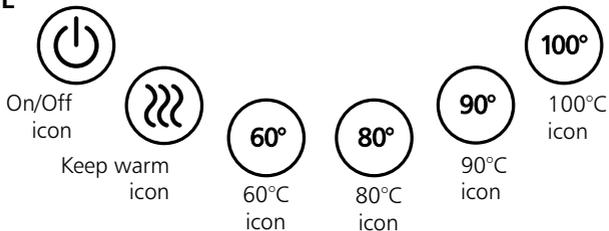

SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. If the lead is damaged it must be replaced with a special lead. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface. Do not use kettle in a bathroom, near water or outdoors. Do not place any part near a source of heat.
- Unplug from the mains when not in use and before cleaning. Allow to cool before cleaning the appliance. To disconnect, turn the socket to “off” and remove the plug from the mains socket.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or base unit in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces. Wind excess lead underneath the base.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- For indoor use only.
- For domestic use only.
- This appliance should be used for heating water as described within the instructions for use that accompany it.

- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- An earthed extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EC (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- The kettle surface may be hot when in use or just used. Use the lid switch to open the lid. Do not open the lid when water is heating, scalding may occur if the lid is lifted.
- Water will remain hot for a considerable time after boiling and is a scalding hazard.
- Ensure the lid is fully closed before switching on, otherwise the kettle may not switch off. Never use with the lid open.
- Ensure the kettle is securely on the base before switching on.
- Keep hands away from the spout when water is heating, steam is hot.
- The kettle must be only used with the base supplied by the manufacturer. Do not use the base with any other appliances.
- The kettle must be filled to at least the MIN level (0.5 litres) of water.
- Do not fill beyond the MAX level (1.2 litres) or the kettle may spit boiling water.
- Do not move the kettle while it is switched on. Ensure that the kettle is switched off before removing it from its base.
- Do not remove the kettle from its base during operation.
- Remove the kettle from the base unit to fill or pour water. Pour slowly and do not over-tilt the kettle.
- Store and keep the appliance and its cord out of reach of children aged less than 8 years.
- **WARNING:** Do not open the lid or reach into the water tank when the appliance is switched on. Hot steam will escape and is a scalding hazard. Ensure the tank lid is fully closed.

Surfaces marked with this symbol  will be hot when the appliance is on and for some time after it is switched off.

Allow the appliance to fully cool down before moving, cleaning or storing.



USING THE KETTLE FOR THE FIRST TIME

1. Remove all the packaging from the kettle and its power base.
2. Before first use, fill the kettle to MAX, boil, discard the water, and then rinse the inside of the kettle. Do this three times to clean thoroughly, allow the kettle to cool.
3. Position the kettle as close to the wall socket as possible. Wind any excess cord around the cord storage area underneath the power base. Guide the cord length you require through the gap in the base.



INSTRUCTIONS FOR USE



- With the kettle on the base, plug in the base unit into the socket and switch on.
 - The kettle will beep, the display will flash all the LED icons, then the ON/OFF icon will remain illuminated and continue flashing, showing that the appliance has power and is now in “stand-by” mode.
 - Take the kettle off the base, press the lid switch, open the lid and fill the kettle through the lid opening (not the spout).
- The kettle must be filled to at least the MIN level (0.5 litres) of water.
 - Do not fill beyond the MAX level (1.2 litres) or the kettle may spit boiling water.
 - Press the ON/OFF icon and all the icons will illuminate to allow you to select the correct temperature (see Heating Mode) for heating your water.
 - If no icon is press within 5 seconds the kettle will start heating the water at 100°C. There will be a double beep and the 100° icon will flash.
 - The kettle will switch off automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switches off, press the ON/OFF icon.
 - **WARNING:** The kettle will be hot to touch when it is heating and for some time after it has boiled. Avoid touching surfaces other than the handle, and use lid switch to open. Steam will escape as soon as the lid is opened.
 - Always fill the kettle with water before switching it on.

HEATING MODE

- Press the ON/OFF icon and the 60°C, 80°C, 90°C, 100°C LEDs will illuminate.
- Select the desired temperature, the selected temperature icon will illuminate and flash, and the indicator of keep warm icon will illuminate.
- Press the keep warm icon to turn off this mode, the icon will go out.
- The appliance will enter into heating mode after 5 seconds or press the button directly. When the water reaches selected temperature, the selected icon will flash, the icon of selected temperature will go out and make a beep. The appliance will go into “stand-by” mode. At this time, you can lift up the kettle from the base unit and it will beep twice when you lift the kettle up.

HEATING AND KEEP WARM MODE

- Press the ON/OFF icon and all the icons will illuminate.
- Select your desired temperature icon 60°C, 80°C or 90°C and it will illuminate. The selected temperature icon will flash and the icon of the keep warm mode will illuminate.
- The appliance will enter into heating mode after 5 seconds or press button directly.
- When the water reaches selected temperature, the appliance will make 3 short beeps and change into the keep warm mode. At this time, the icon of keep warm mode will flash.

- After 40 minutes, the keep warm mode will finish and make a long beep sound. At this time, you can lift up the kettle from the base unit, and it will make two short beeps when you lift the kettle up.

KEEP WARM MODE

- You can select three temperatures at which to keep the boiled water warm at 60°C, 80°C or 90°C.

PLEASE NOTE: The 100°C will not allow you to select the keep warm setting.

LIFTING DISPLAY MODE

- When lifting the kettle under heating mode, all LEDs will go out except the ON/OFF icon.
- The base unit cannot make any operation. It can turn into “stand-by” mode when replacing the kettle onto the base unit.
- When lifting the kettle under keep warm mode, the current status cannot be changed. When replacing the kettle onto the base unit, the appliance will automatically continue to the keep warm process.
- Turn off and disconnect the plug from the socket when the water has arrived at the set temperature. Take the kettle from the base and pour the water from the spout. Only hold it by the handle.
- Do not open the lid because the hot water could splash out.

WARNING: The kettle will be hot to touch when it is heating and for some time after it has boiled. Avoid touching surfaces other than the handle, and use lid switch to open. Steam will escape as soon as the lid is opened.

BOIL-DRY SAFETY PROTECTION

The heating element in your kettle is protected against damage by a safety cut-out device which will automatically switch the kettle off in approx. 20 seconds, if it is accidentally switched on and allowed to boil with little or no water. If this occurs, the power indicator will go out. Disconnect the kettle from the mains supply and allow 15 minutes for the kettle to cool, the safety cut-out will automatically reset during this time. Remove the kettle from the base unit and fill with cold water. The kettle may then be operated normally.

RECOMMENDED TEMPERATURE FOR VARIOUS TEAS

	60°C	80°C	90°C	100°C
Green tea		2-3 minutes		
White/yellow tea		2-3 minutes		
Black tea				3-5 minutes
Fruit and herbal infusions				3-5 minutes
Oolong			3-5 minutes	
Matcha		2-3 minutes		
Rooibos				3-5 minutes
Chai tea				3-5 minutes
Delicate tea	2-3 minutes			
Coffee			•	

- Coffee optimum brewing temperature.

HINTS AND TIPS

- Only use this kettle to heat water.
- Only heat the amount of water you need to use.
- Clean and descale regularly even in soft water areas.

MINIMISING SCALE

- Empty the kettle after each use; do not allow water to stand in the kettle overnight.
- Use filtered water instead of tap water.
- Descale the kettle regularly, at least once a month. In areas of very hard water you may need to descale more often.

DESCALING

- Limescale may be white, coloured, even rusty-looking, but it's normally visible on the floor of the kettle. Phosphate scale isn't generally visible, but it's there, even in soft water areas.
- All scale causes overheating and reduces the kettle's life.
- Even with soft water, descale regularly, to help keep your kettle in working order. Use a descaler suitable for plastic products (all kettles have plastic parts).
- When descaling has finished, rinse and boil the kettle several times and discard the water.

FREQUENTLY ASKED QUESTIONS

Question: Why won't the kettle light up when switched on?

Answer: It may not be switched on at the plug or is not securely on the base. Check the power is switched on and that the kettle is on the base properly.

Question: Why doesn't the kettle switch off?

Answer: The lid is not securely closed. Ensure the lid is properly closed.

Question: Why is the water cloudy?

Answer: Some drinking water has limescale which goes cloudy when being boiled. This is perfectly normal.

Question: Why do drinks made with water from the kettle leave a scum in the cups?

Answer: The kettle may need descaling. Follow the descaling instructions in this manual.

Question: Why is the kettle spitting water when it boils?

Answer: The kettle has been overfilled. Make sure you only fill with water up to the MAX level.

CARE AND CLEANING

- Unplug the kettle, take it off the base and allow it to cool completely before cleaning and storing.
- Periodically check all parts before use.
- Never immerse the kettle, base or cable in water or any other liquid.
- Wipe the kettle on the outside with a damp soft cloth.
- You may use a little mild detergent to clean the inside, but if you do, rinse well with clean water to avoid tainting when the kettle is next used.
- Do not use harsh or abrasive, or alkaline cleaning agents or solvents.
- Ensure that connectors and sockets are kept dry.
- Store the kettle with the power cable loosely coiled or stored in the base. Never wrap it tightly around the base or kettle.

TECHNICAL INFORMATION

- Power: 1850-2200W.
- Voltage: 220-240V.
- Frequency: 50/60Hz.

ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 10 AMP FUSE

Use a 10 amp BS1363 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electrical products to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.



Lakeland

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ

Tel: +44(0)15394 88100 lakeland.co.uk