

LAKELAND

INSTRUCTION BOOKLET

DIGITAL BEAN-TO-CUP COFFEE MAKER



Model: 63482

LAKELAND DIGITAL BEAN-TO-CUP

Thank you for choosing the Lakeland Digital Bean-to-Cup.

Please take a little time to read this booklet before you use your appliance and keep it in a safe place for future reference.

Enjoy freshly ground coffee every morning with a rich aroma to wake you up, at a touch of a button - espresso, lungo and Americano. With 5 levels of grind and a setting to remember your desired cup volume, a sleek LED touchscreen control panel, 1.2L capacity.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	4
Touchscreen control panel.....	5
Safety cautions.....	6-8
Using your Digital Bean-to-Cup for the first time.....	9
Filling the water tank	10
Filling the coffee bean container.....	11
Instructions for use	12
Hot water	13
Favourite function	13
Set up the favourite coffee setting.....	13
Using the favourite function.....	13
Turning off the appliance	13
Auto-shut off.....	13
Further settings.....	14
Adjusting the volume of your coffee/hot water	14
Grinding adjustment	14
Mode selection	14-15
Daily cleaning of the appliance.....	16-18
Hints and tips.....	19
Frequently asked questions.....	20-21
Cleaning and maintenance	22
Descaling	22
Empty system function	23
Care and cleaning	24
Technical information	25
Electrical connections	25
Recycling your electricals	25

PRODUCT FEATURES

- | | |
|------------------------------|------------------------|
| 1. Water Tank | 8. Internal Drip Tray |
| 2. Coffee Bean Container Lid | 9. Drip Tray Cover |
| 3. Coffee Bean Container | 10. External Drip Tray |
| 4. Power ON/OFF Button | 11. Brewer Assembly |
| 5. Control Panel | 12. Service Door |
| 6. Adjustable Coffee Spout | 13. Steam Vent |
| 7. Coffee Grounds Container | |

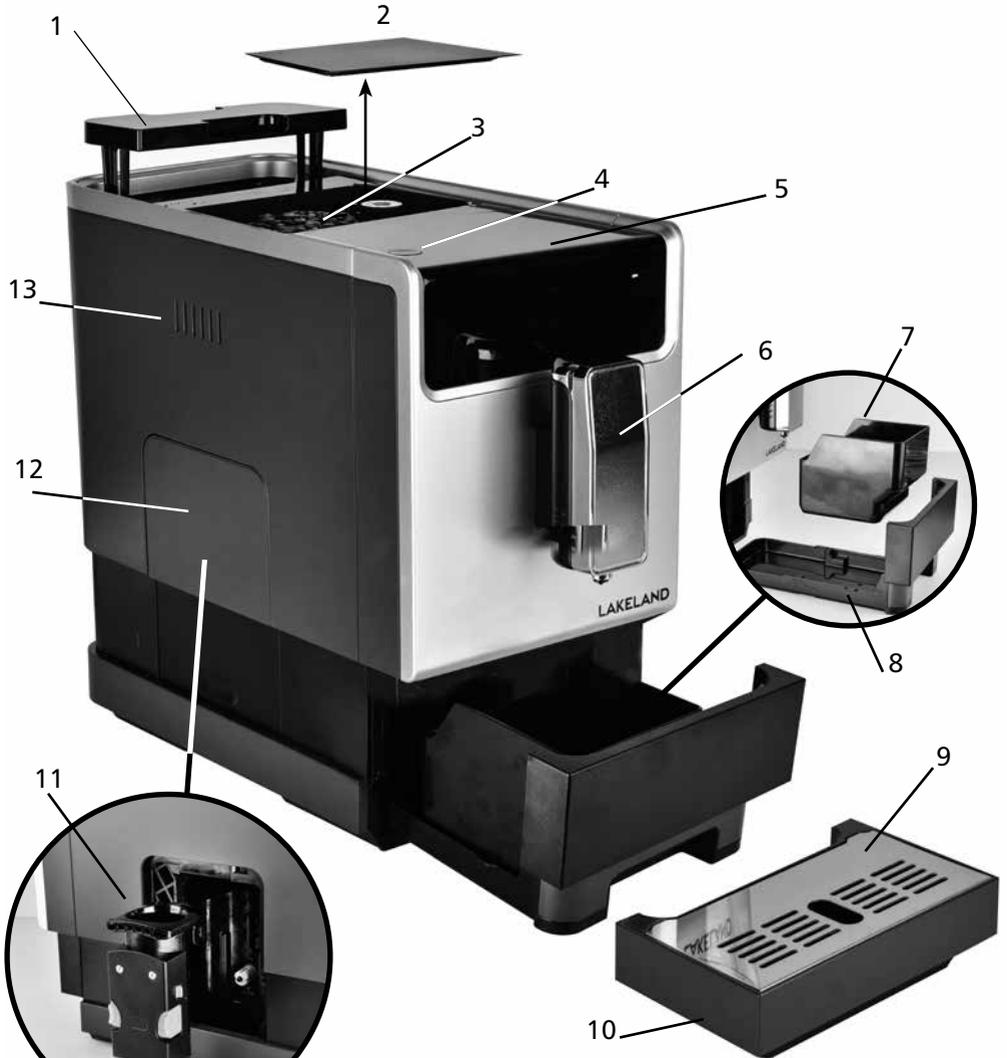

Accessories including in the box, a cleaning brush, a cleaning cloth for the control panel and three packs of cleaning agents are included for the process of descaling.

TOUCHSCREEN CONTROL PANEL



	Power ON/OFF button
	Espresso coffee button
	Lungo coffee button
	Americano coffee button
	Favourite coffee button
	Hot Water button
	Flashing: Low water level or water tank missing
	Lack of coffee beans
	Lights up stably: Requires descaling Flashing: Internal drip tray or coffee grounds container is missing
	Coffee brewing indicator
	Lights up stably: Brewer is missing or not properly installed Flashing: Service door is opened or not properly installed
	Lights up stably: Requires descaling Flashing: Descaling process is under process
	Empty system function is running

SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or lid in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for preparation of drinks as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.

- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
- **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be  dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- Disconnect the appliance from mains socket, when you are going to carry out any of the following operations:
 - Before the water tank is filled with water.
 - Before removing any parts from the appliance or refit any parts on the appliance.
 - Before cleaning or maintenance.
 - When the appliance is not working correctly.
 - After using the appliance.
- Empty the water tank, when the appliance is unused for long period of time.
- The water tank must be filled with water to at least half full, before it is switched on. **DO NOT** fill beyond the '**MAX**' mark, or the appliance may spit boiling water.
- Only use the grinder for grinding coffee beans only.
- **DO NOT** place the appliance on or near a gas or electric oven, or any hot surfaces.
- **DO NOT** move the appliance while it is switched on.
- **DO NOT** use the appliance if the drip tray is improperly placed in position.
- **DO NOT** attempt to open the main body or dismantle any parts from the appliance, there is no serviceable part inside.
- The appliance normally cleans after use and is not intended to be immersed in water for cleaning and the appliance must not be immersed.
- The use of accessories not included in the box is not recommended. It might be dangerous and should be avoided.
- **DO NOT operate the hot water function continuously for more than one tank of water.**

WARNING - HOT SURFACES Do not open the coffee beans container cover, water tank lid/handle when the appliance is switched on. Hot steam will escape and is a scalding hazard.


Ensure the water tank lid/handle is fully closed. **DO NOT** place any cloths or objects over the steam vent.

Surfaces marked with this symbol  will be hot when the appliance is on and for some time after it is switched off. Allow the appliance to fully cool down before adding or taking off parts, moving, cleaning or storing.



USING THE DIGITAL BEAN-TO-CUP FOR THE FIRST TIME

1. Unpack the Digital Bean-to-Cup, remove all the packaging materials, including any protective films and stickers.
2. Before first use, wipe the main unit with a clean damp cloth and dry thoroughly.
3. Wash the drip tray, drip tray cover, internal drip tray, coffee grounds container, coffee beans container cover and brewer in hot soapy water, rinse and dry thoroughly.
4. Make sure all parts are clean and dry before assembling the product.
5. Place the appliance on a dry, level heat resistant surface. The appliance should only be used in a well-ventilated area, at least 15cm away from walls and other surfaces to allow sufficient airflow.

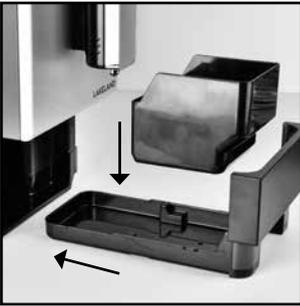

6. Place the coffee grounds container inside the internal drip tray and slot into the appliance.



7. Insert the external drip tray. Make sure it is inserted correctly.

FILLING THE WATER TANK

When  is flashing, the water tank is in low water level and requires filling the water tank.



1. Lift the water tank by using the lid as the handle.



2. Rinse the water tank with fresh cold water and then fill the tank to the 'Max' mark level and place it back into the appliance. Make sure it is fully inserted.

Note: To prevent overflow of water from the water tank, **DO NOT** add water directly into the appliance with another container.

IMPORTANT: Never fill the water tank with warm, hot, sparkling water or any other liquid which might damage the water tank and the appliance.

FILLING THE COFFEE BEAN CONTAINER

When ☉ the appliance needs to be filled with coffee beans.



1. Remove the bean container lid.
2. Slowly pour in the coffee beans.



3. Install the container lid back on top.

IMPORTANT: Fill the coffee bean container with coffee beans only. Ground coffee, instant coffee, caramelized coffee and any other objects may damage the appliance.

4. Unwind and straighten the power cord and insert the plug into the socket located on the back of the appliance. Insert the other end of the power cord into a wall socket.

5. The Digital Bean-to-Cup Coffee Maker is now ready to use.

INSTRUCTIONS FOR USE

1. Switch on the appliance by pressing the power ON/OFF button  and there will be a short beep sound. Make sure the drip tray is under the coffee spout and water tank with water inside. The appliance will perform auto-rinsing for a small cup of water, you can stop it by pressing Hot Water button.
2. The appliance will then go into the standby mode.
3. Place a cup under the coffee spout and adjust the height of the spout to fit the cup. Depending on the size of the cup (too tall or too wide) you can remove the drip tray or adjust the position of the drip tray, as shown.



4. Warm your coffee cup with hot water to get a hotter cup of coffee. Press the  Hot Water button.
5. Depending on the taste of coffee you would like to have, press  espresso coffee button,  lungo coffee button or  Americano coffee button.
6. The coffee button being pressed will light up, brewing coffee indicator  and spout illumination will light up, to indicate that the appliance is preparing the cup of coffee. You can stop dispensing coffee by pressing the button again.
7. When the appliance is back to standby mode, the coffee is ready to serve.

HOT WATER

The appliance can dispense hot water by simply pressing the Hot Water button . The hot water button will light up, the brewing coffee indicator  and spout illumination will light up, indicating that the appliance is heating up the water. When the Hot Water button and the illumination will go off, the water is ready to serve.

FAVOURITE FUNCTION

You can use the favourite function to memorize your desired volume of espresso, lungo and Americano coffee which is not easy to be adjusted by other people.

SET UP THE FAVOURITE COFFEE SETTING

Press and hold the favourite button  for 2 second, then the espresso, lungo, Americano coffee and hot water buttons will flash and you can select any one to memorize the volume.

When you select either espresso, lungo, Americano coffee or hot water. You will see the drinks come out, and then you can press and hold to keep dispensing the drinks and stop it by release the button. After that the volume will be memorized.

USING THE FAVOURITE FUNCTION

Press the favorite function button , the memorized favorite drinks will come out.

TURNING OFF THE APPLIANCE

Switch off the appliance by pressing the power ON/OFF button .

AUTO-SHUT OFF

The appliance is equipped with auto-shut off. Depending on the mode you have selected the appliance will have different auto-shut off timing, see 'Mode Selection'.

FURTHER SETTINGS

ADJUSTING THE VOLUME OF YOUR COFFEE/HOT WATER

You can memorize your desired volume of coffee for espresso, lungo, Americano and also the hot water from 25ml to 250ml.

1. When making your coffee (either espresso, lungo or Americano coffee) or dispensing hot water, press and hold the button you selected. The appliance will continue to make the cup of coffee or hot water.
2. When the volume of coffee meets your desired volume, release the button. Two beep sounds will be heard indicates that the volume of coffee is being memorized.

GRINDING ADJUSTMENT



You can adjust the grinder to suit the taste of your coffee by turning adjuster knob in the bean container:

1. When the grinder is grinding the coffee beans during making the coffee, you can turn the adjuster knob to do the adjustment (**CAUTION:** Never do the grinding adjustment when the grinder is not operating. It may damage the grinder.)
2. The dots on the adjuster knob indicate the fineness of the grind.

MODE SELECTION

The appliance has three different settings: default setting, ECO mode and speed mode. In ECO mode, the appliance helps to save more energy. In speed mode, the user can make their coffee faster than in default setting.

	ECO Mode	Speed Mode	Default Setting
Illumination Light	No	Yes	Yes
Pre-brewing*	Yes	No	Yes
Auto-shut off time	10mins	30mins	20mins
Cup Volume memory	Yes	Yes	Yes

*Note: The pre-brewing function moistens the grounded beans in the brewer with a small amount of water before full extraction. This expands the coffee grounds to build up a greater pressure in the brewer which help extraction of all the oils and full flavour from the grounded beans.

1. When the appliance is in standby mode, press and holds the  for 5 seconds.
2. The  will then be flashing and the following button will have the following indications in different settings:

	 Hot water button	 Espresso coffee button	 Lungo coffee button
In ECO Mode	Lights on	Flashing	Flashing
In Speed Mode	Flashing	Lights on	Flashing
In Default Setting	Flashing	Flashing	Lights on

3. Press the hot water button  for ECO mode, espresso coffee button  for speed mode and lungo coffee button  for default setting. Two beep sound will be heard indicates that the mode is being selected.
(Note: If you are pressing the relative lighted on button for each mode, the appliance will not respond).
4. If you would like to remain the setting unchanged, press  again or wait for 5 seconds for the appliance to return to the standby mode.

DAILY CLEANING OF THE APPLIANCE

Timely cleaning and maintenance of the appliance is very important in prolonging the life of the appliance.



1. Remove the external drip tray.
2. Remove the cover and empty the water inside the drip tray into the sink. Wash it with fresh water and dry thoroughly.



3. Slide open the internal drip tray and the coffee grounds container.
4. Empty the coffee grounds container and wash it with fresh water and dry thoroughly.


Note: When  lights up, the coffee grounds container needs to be empty.



5. Press at the bottom of the service door to release it.



6. Remove the service door.

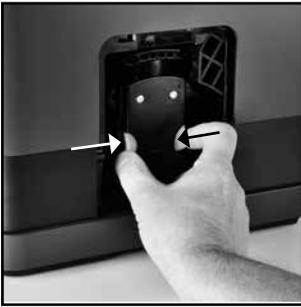

7. Press the release knobs on either side of the brewer.




8. Remove the brewer.

9. Wash the brewer with fresh water and dry thoroughly.

10. Insert the brewer, back to its original position and install back the service door to its original position.

Note: When  lights up stably, it indicates that the brewer is missing / installed improperly.

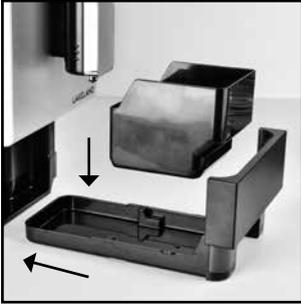

11. Place the coffee grounds container on the internal drip tray and insert back into its original position.

Note: When  is flashing, the coffee grounds container is missing.



12. Place the external drip tray at its original position.

HINTS AND TIPS

- Try to use the coffee beans within a week of adding to the appliance.
- For hotter coffee, warm your coffee cup with warm water before brewing.

FREQUENTLY ASKED QUESTIONS

Question: Why is the appliance not working?

Answer: The appliance may not be connected at the socket, check that it is plugged in and turned on at the mains socket. Press the ON/OFF button on top of the appliance.

Question: Why after pressing a function key on the control panel and there is a delayed response, or nothing happens after several tries?

Answer: The appliance could be under electromagnetic interference, or there is dirt on the control panel. Unplug the appliance and switch back on after a few minutes. Clean the control panel with the cloth provided.

Question: Why is my coffee not hot enough?

Answer: Remember to preheat the coffee cups with warm water. The brewing unit maybe too cold, rinse the appliance at least 3 times before making your coffee.

Question: Why is there no coffee coming out of the spout?

Answer: The 'Empty System Function' may have been used last on the appliance. Press the hot water button until water comes out from spout.

Question: Why is my first cup of coffee a poor quality?

Answer: When you use the appliance for the first run to grind the coffee beans, it may not pour sufficient quantity of coffee grounds into the brewing unit. Throw the coffee away, the other coffees will always be of good quality.

Question: Why has my cup of coffee got no crema on top?

Answer: The coffee beans are not fresh, change or use appropriate brand of coffee bean.

Question: Why are the touch buttons on the control panel not sensitive?

Answer: Try pressing the buttons directly from the front, also press the lower bottom part of the touch button icon from the front direction of the appliance.

Question: Why is the appliance taking a long time to warm up?

Answer: There could be an excessive built up of scale inside the appliance, descale the appliance.

- Question:** My water tank is removed, or the water level is very low in the water tank, but no indicator alert has appeared on the control panel, why is that?
- Answer:** There may be excess water round where the water tank connector inside the appliance. Wipe the excess water around the water tank connector.
- Question:** Why has the internal drip tray filled with a lot of water?
- Answer:** The coffee grounds are too fine which block the water to come out. Adjust the coffee fineness to a bigger dot during the grinder operation.
- Question:** Why is my coffee being delivered slowly or a drop at a time?
- Answer:** The coffee grounds are too fine which block the water to come out. Adjust the coffee fineness to a bigger dot during the grinder operation.
- Question:** Why is the 'Lack of Bean' indicator flashing but there is still a lot of coffee beans inside the container?
- Answer:** The internal coffee grounds outlet is blocked, you may need to clean the coffee grounds outlet.
- Question:** Why is the 'Descaling' indicator keep flashing even though I have performed the descaling process?
- Answer:** The descaling process has not completed. To follow the steps of 'Descaling' and make sure the appliance switches off automatically.

CLEANING AND MAINTENANCE

DESCALING

When  is flashing, it indicates that the appliance needs to undergo descaling. The appliance will remain in the best condition if this function is performed at least once a month or more regularly depending on the hardness of water used. It is also suggested that to:

1. Fully fill the water tank.
2. Add one pack of cleaning agent included in the box to the water tank.

IMPORTANT: Do not use vinegar or other cleaning agent to do descaling of this appliance. The cleaning agent might damage the appliance.

3. Plug in the appliance.
4. Place a sufficient large container under the coffee spout.
5. In standby mode, press and hold  and espresso coffee button  for 5 seconds. A beep sound will be heard with  and espresso button  will be flashing.
6. Press espresso coffee button  to confirm undergoing the Descaling process. To resume back to the standby mode, press .
7.  will be flashing indicates that the appliance is undergoing the descaling process.

CAUTION: Keep skin/body away from the hot water.

8. When all the water in the water tank is being dispensed out,  and espresso button  will be flashing. Remove all the remaining solution in the water tank and fill the tank with normal tap water to the 'Max' mark level. When water is filled into the water tank,  will go off. Then the appliance will continue the descaling process, the appliance will brew half of water tank first and then waiting for around 1 minute, after that will brew the outstanding water from the water tank.
9. When the descaling process is completed, the appliance will switch off automatically.

Note: To ensure the descaling process can be completed, please be patient during the process and make sure the applicant switch off automatically

EMPTY SYSTEM FUNCTION

The empty system function is recommended to be used before long period of non-use, frost protection and before moving or transporting.

1. In standby mode, press and hold the  and lungo coffee button  together for 5 seconds.
2.  will then be flashing.
3. Remove the water tank from the appliance  will light up stably indicates that the empty system is under process. You can press  before removing the water tank to resume back to the standby mode.
4. When the empty system function is completed, the appliance will switch off automatically.

Important: After performing EMPTY SYSTEM FUNCTION; press the hot water button until water come out from spout when the coffee maker is reused again.

CARE AND CLEANING

- Switch off and unplug the appliance from the socket before cleaning.
- Always allow the appliance to cool down completely before cleaning.
- Clean thoroughly before using for the first time and after every use.
- Check the parts for wear or damage after every few uses.
- Do not use abrasive cleaners or steel wool.
- Remove the contents in the internal and external drip tray, clean and dry thoroughly.
- Never immerse the main unit in water or any other liquid. To clean the outer surfaces, wipe with a clean damp cloth and dry thoroughly before storing.
- Wash all removable parts in hot soapy water, rinse and dry thoroughly before reusing or storing.
- Store the Digital Bean-to-Cup with the power cable loosely coiled. Never wrap it tightly around the product.

TECHNICAL INFORMATION

- Power: 1400W.
- Voltage: 220-240V.
- Frequency: 50/60Hz.

ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 10 AMP FUSE

Use a 10 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electrical products to recycling points set up around the country.

Visit www.recycle-more.co.uk to find your nearest recycling point.



Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 lakeland.co.uk