

LAKELAND

INSTRUCTION BOOKLET

THE SNUGLER SLEEVED HEATED THROW



Model: 63717

LAKELAND THE SNUGGLER SLEEVED HEATED THROW

Thank you for choosing the Lakeland The Snuggler Sleeved Heated Throw.

Please take a little time to read this booklet before you use your heated throw and keep it in a safe place for future reference.

Your The Snuggler Sleeved Heated Throw is made from soft, thick fleece. There are 3 heat settings and the auto shut-off function switches off the heated throw after 3 hours.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS


Product features	3
Important instructions and safety notes	4-7
Using your Heated Throw for the first time	8
Instructions for use	8
Care and cleaning	9
Frequently asked questions	10
Technical data	10
Electrical connections	11
Recycling your electricals	11

PRODUCT FEATURES

1. Throw
2. Plug
3. Control Unit
4. Temperature Slider
5. Connector
6. Connector Plug



1

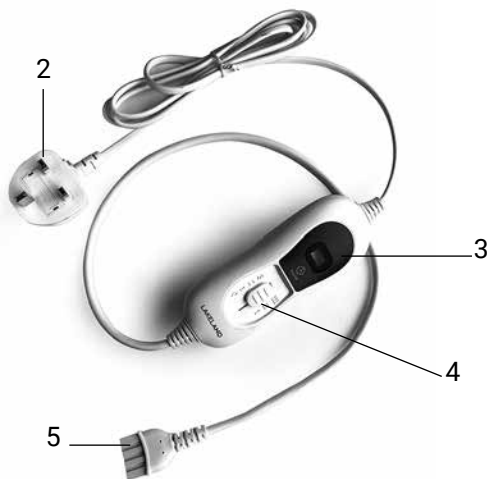

2

3

4

5



4



6

IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.

WARNING! Instructions and warnings for safe use.

SAFETY NOTES



- Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.
- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage due to transportation. If in any doubt, do not use the appliance and contact an authorised service centre.
- This appliance must be used only for the purpose for which it was designed, namely as a heated throw for home use. Any other use is considered not compliant with the intended use and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit, if any (see illustrative guide).
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.



- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- This appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.



- **DO NOT** use the appliance with wet hands or damp feet.



- **DO NOT** pull the supply cord or the appliance itself to remove the plug from the socket.



- **DO NOT** pull or lift the appliance by the supply cord.
- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that electric cords shall be arranged in a safe way.



- **DO NOT** expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.

- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, contact an authorised technical service centre before switching it on again.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, so as to prevent all risks.



- **DO NOT** use this appliance to warm animals.



- **DO NOT** place the control unit under the pillow or between the sheets or blankets.

- If the appliance is used on an adjustable bed, check that the heated throw and cord do not become trapped or rucked, for example in hinges.



- **DO NOT** tuck in.

- This appliance is not intended for medical use in hospitals.



- **DO NOT** use if wet.



- **DO NOT** use folded or creased.



- **DO NOT** insert pins or needles.

- **PLEASE NOTE:** This item is not recommended for use by anybody who has a pacemaker.

- See the external packaging for the characteristics of the appliance.

USING YOUR HEATED THROW FOR THE FIRST TIME

- Unpack the heated throw, remove all the packaging materials.
- Insert the connector plug into the connector on the heated throw.
- Ensure the connector plug is fully pushed in until the catch engages.



The heated throw is now ready to use.

INSTRUCTIONS FOR USE

- Plug in the control unit and switch on at the socket.
- Turn on your throw by sliding the temperature slider up.



- There are 3 levels of heat, 1, 2, 3.
- To switch off your heated throw, slide the switch back to the 'OFF' position. Switch off and unplug at the socket.

AUTO SHUT-OFF

Your throw will automatically switch off after 3 hours.

CARE AND CLEANING

- Unplug the heated throw and let it cool completely before cleaning.
- Check parts for wear and damage after every few uses.
- Never immerse the control unit/s in water or any other liquid.

WASHING INSTRUCTIONS

- Disconnect the control unit from connector on the heated throw.
- Machine washable at 30°C on a wool programme.
- **DO NOT** iron, tumble dry, dry clean or bleach.
- To hand wash, use a mild washing powder or detergent and soak your heated throw in lukewarm water for 15 minutes. After soaking, gently wash the heated throw and rinse thoroughly with clean, lukewarm water.
- Allow the excess water to drain from the heated throw. It may be gently squeezed, but do not wring the heated throw.

DRYING YOUR HEATED THROW

- Air dry on a clothes line, avoid use of clothes pegs as they will damage the heated throw.
- Do not use your heated throw until it is completely dry.
- Do not wring the heated throw.
- Hold the heated throw up to the light and inspect it to ensure that none of the wires have formed into loops, or become twisted. Contact the Lakeland customer care team on 015394 88100, if any of the wires have moved.

STORING YOUR HEATED THROW

- When storing the heated throw, allow it to cool down before folding.
- Avoid creasing the heated throw.
- Do not place heavy items on the heated throw when in storage, as deep creases or folds may damage the wiring.
- Do not use any moth-proofing chemicals.

FREQUENTLY ASKED QUESTIONS

Question: Why is the control unit not illuminating?

Answer: Check that the appliance is plugged in and switched on at the socket.
Check that the control unit is properly attached to the heated throw.

Question: Why is my control unit on but there is no heat?

Answer: Check that the connector plug is fully pushed into the connector.












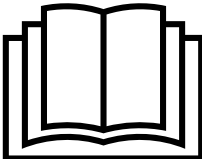

The heated throw automatically switches off after 3 hours and may have gone into Standby mode. Slide the temperature slider to the 'OFF' position and then back on.

The heated throw may be faulty or damaged. If so, contact the Lakeland customer care team on 015394 88100.

Question: Why is there heat discolouration on the fabric?

Answer: There may be a fault with the appliance, discontinue use and contact the Lakeland customer care team on 015394 88100.

TECHNICAL DATA

LAKELAND	HEATED THROW							
	220-240V 50Hz 120W							
								
								

ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).

RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.



Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: 015394 88100 **lakeland.co.uk**