

STAY?SNUG™

**BUBBLE FAUX FUR  
HEATED THROW**

INSTRUCTION BOOKLET



Model: 63894

**LAKELAND** innovation

# STAYSNUG BUBBLE FAUX FUR HEATED THROW

Thank you for choosing the Lakeland StaySnug Bubble Faux Fur Heated Throw.

Please take a little time to read this booklet before you use your heated throw and keep it in a safe place for future reference.

Your Bubble Faux Fur Heated Throw is made from luxurious faux fur. The control unit has 10 variable heat settings and 10 auto shut-off settings, from 1 hour to 10 hours to switch off the heated throw.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.



Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

## CONTENTS

Product features.....	3
Important instructions and safety notes.....	4-7
Using your Heated Throw for the first time.....	8
Instructions for use.....	8-9
Care and cleaning.....	10
Frequently asked questions.....	11
Error codes.....	12
Technical data.....	13
Electrical connections.....	14
Recycling your electricals.....	14

# PRODUCT FEATURES

1. Throw
2. Plug
3. Connector plug
4. Control unit
5. Indicator panel
6. Auto shut-off setting button
7. Power button
8. Temperature increase button
9. Temperature decrease button
10. Connector

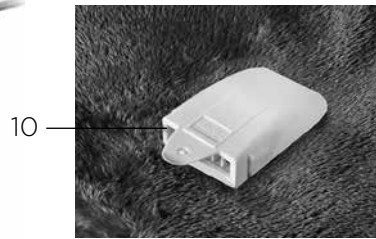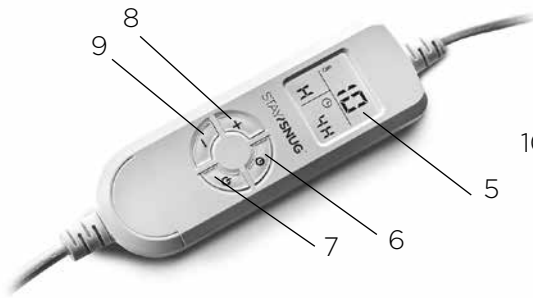

# IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.

**WARNING! Instructions and warnings for safe use.**

## SAFETY NOTES



- Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.
- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage due to transportation. If in any doubt, do not use the appliance and contact an authorised service centre.
- This appliance must be used only for the purpose for which it was designed, namely as a heated throw for home use. Any other use is considered not compliant with the intended use and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit, if any (see illustrative guide).
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.



- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- This appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.



- **DO NOT** use the appliance with wet hands or damp feet.



- **DO NOT** pull the supply cord or the appliance itself to remove the plug from the socket.



- **DO NOT** pull or lift the appliance by the supply cord.

- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that electric cords shall be arranged in a safe way.



- **DO NOT** expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.
- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, contact an authorised technical service centre before switching it on again.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, so as to prevent all risks.



- **DO NOT** use this appliance to warm animals.



- **DO NOT** place the control unit under the pillow or between the sheets or blankets.

- If the appliance is used on an adjustable bed, check that the heated throw and cord do not become trapped or rucked, for example in hinges.
- During use, ensure that the power cord is completely unwound.
- Not recommended to be used with a plug in timer switch.



- **DO NOT** tuck in.



- This appliance is not intended for medical use in hospitals.



- **DO NOT** use if wet.



- **DO NOT** use folded or creased.



- **DO NOT** insert pins or needles.

- **PLEASE NOTE:** If you wear a pacemaker please contact a medical professional or your pacemaker provider to ensure this product is compatible with your device.
- See the external packaging for the characteristics of the appliance.

# USING YOUR HEATED THROW FOR THE FIRST TIME

- Unpack the heated throw, remove all the packaging materials.
- Lift the locking tab up with your finger and insert the connector plug into the connector on the heated throw.
- Ensure the connector plug is fully pushed in until the catch engages.




- To remove the controller, lift the locking tab up with your finger and pull the connector plug directly out. **DO NOT** pull the cable and do not try to pull the controller plug out without lifting the locking tab as you will damage the socket.

## Please note:

- Due to the nature of the fabric some shedding may occur during initial use which will subside.

# INSTRUCTIONS FOR USE

- Plug in the control unit and switch on at the socket. The indicator panel on the control unit will light up for 1 second then the lights will go out as the control unit enters standby mode.
- Turn on the throw by pressing the power button for 3 seconds. The heated throw will turn on to the default setting of level 8. The throw will gradually start to warm up.

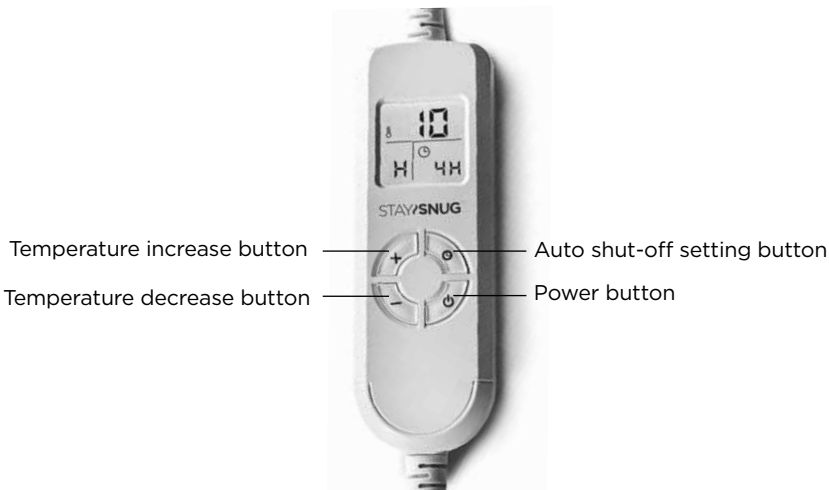



- There are 10 levels of heat, the default is 8, with a 3 hour timer. The temperature will then drop to level 3 after 1 hour. If you require a different temperature setting, set the temperature setting between levels 1 to 10 by pressing the increase/decrease temperature button. Once you have reached level 10 if you press the temperature increase button again the setting will no longer change, press the temperature decrease button to move back down the levels. Once you have reached level 1 the setting will no longer change, press the temperature increase button to move back up the levels.
- Should the throw get too warm for you, adjust the heating setting back to level 1 or 2 by pressing the temperature decrease setting button.
- Change the temperature setting to level 1 before falling asleep.
- To switch off your heated throw, press the power button and there will then be nothing showing on the indicator panel. Switch off and unplug at the socket.

## **AUTO SHUT-OFF**

- Your throw has 10 settings for automatically switching off up to 10 hours. The default is 3 hours.
- Should you like to adjust the setting, once you have set the temperature, press the auto shut-off setting button to select a setting between 1 and 10. Each increment being 1 hour.

<b>Level</b>	<b>Default auto shut-off time</b>	<b>Settings</b>
1	3 hours	Temperature will remain constant until the end of the selected auto shut-off time.
2	3 hours	Temperature will remain constant until the end of the selected auto shut-off time.
3	3 hours	Temperature will remain constant until the end of the selected auto shut-off time.
4	3 hours	Temperature will remain constant until the end of the selected auto shut-off time.
5	3 hours	Temperature will drop to level 3 after 3 hours.
6	3 hours	Temperature will drop to level 3 after 3 hours.
7	3 hours	Temperature will drop to level 3 after 3 hours.
8	3 hours	Temperature will drop to level 3 after 1 hour.
9	3 hours	Temperature will drop to level 3 after 1 hour.
10	3 hours	Temperature will drop to level 3 after 1 hour.

## CARE AND CLEANING

- Unplug the heated throw and let it cool completely before cleaning.
- Check parts for wear and damage after every few uses.
- Never immerse the control unit in water or any other liquid.

## WASHING INSTRUCTIONS

- Disconnect the control unit from connector on the heated throw.
- Machine washable at 30°C on a wool programme.
- **DO NOT** iron, tumble dry, dry clean or bleach.
- Wash with similar colours.
- To hand wash, use a mild washing powder or detergent and soak your heated throw in lukewarm water for 15 minutes. After soaking, gently wash the heated throw and rinse thoroughly with clean, lukewarm water.
- Allow the excess water to drain from the heated throw. It may be gently squeezed, but do not wring the heated throw.

## DRYING YOUR HEATED THROW

- Air dry on a clothes line, avoid use of clothes pegs as they will damage the heated throw.
- Do not use your heated throw until it is completely dry.
- Do not wring the heated throw.
- Hold the heated throw up to the light and inspect it to ensure that none of the wires have formed into loops, or become twisted. Contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk) if any of the wires have moved.

## STORING YOUR HEATED THROW

- When storing the heated throw, allow it to cool down before folding.
- Avoid creasing the heated throw.
- Do not place heavy items on the heated throw when in storage, as deep creases or folds may damage the wiring.
- Do not use any moth-proofing chemicals.

## FREQUENTLY ASKED QUESTIONS

**Question:** Why is the control unit not illuminating?

**Answer:** Check that the appliance is plugged in and switched on at the socket.

Check that the control unit is properly attached to the heated throw.

**Question:** Why is my control unit on but there is no heat?

**Answer:** Check that the connector plug is fully pushed into the connector.

The heated throw automatically switches off after the selected auto shut-off time and may have gone into Standby mode. Press the power button to turn the throw back on.

The heated throw may be faulty or damaged. If so, contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk)

**Question:** Why is there heat discolouration on the fabric?

**Answer:** There may be a fault with the appliance, discontinue use and contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk)

<b>Error code</b>	<b>Cause</b>	<b>Solution</b>
"C" appearing on the screen.	The controller has been placed under or inside the blanket and it has overheated. As a safety measure, the heated throw has turned off.	Turn the controller OFF, unplug the heated throw, lay it down completely flat and leave to cool down. Then restart the controller.
"P" appearing on the screen.	The controller or connector is not connected properly.	Turn the controller OFF, unplug the electric blanket, reconnect the connector plug and ensure the controller and/or connector are connected properly.
"E" appearing on the screen.	The blanket has been used while folded or crumpled and it has overheated. As a safety measure, the heated throw has turned off.	Turn the controller OFF, unplug the heated throw, lay it down completely flat and leave to cool down. Then restart the controller.
No display	The blanket has been used while severely folded or crumpled and it has overheated, the heating element has been damaged. The controller blown the over-temp thermal fuse.	Need to dispose of the heated throw.

# TECHNICAL DATA

**LAKELAND**

63894

**HEATED THROW**

220-240V.~ 50/60Hz. 120W.



UK  
CA



RoHS



## ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

### CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

**Note:** After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop.

## RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.





**Lakeland**  
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ  
Tel: 015394 88100 **lakeland.co.uk**