

STAY?SNUG™

**OUTDOOR WEARABLE
HEATED ROBE**

INSTRUCTION BOOKLET



Model: 63906

LAKELAND innovation

STAYSNUG OUTDOOR WEARABLE HEATED ROBE

Thank you for choosing the Lakeland StaySnug Outdoor Wearable Heated Robe.

Please take a little time to read this booklet before you use your Outdoor Wearable Heated Robe and keep it in a safe place for future reference.

Your Outdoor Wearable Heated Robe is made from water resistant polyester fabric with a fleecy lining. There are 3 heat settings for personalised warmth. It has pockets to keep your belongings in and sleeves to keep you cosy.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	3
Important instructions and safety notes	4-7
Instructions for use.....	8
Care and cleaning	9-10
Frequently asked questions	11
Technical information.....	12
Recycling your electricals.....	13

PRODUCT FEATURES

- 1. Hood
- 2. Fleece lining
- 3. Power and heat buttons
- 4. Fleece lined pocket
- 5. Elasticated cuffs
- 6. Zip closer
- 7. USB-C connector cable
- 8. Power bank* pocket with zip closure



*Power bank not included

Required Power Bank Specification:
10K mAh Power Bank
Output: USB-C 15W

IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.

WARNING! Instructions and warnings for safe use.

SAFETY NOTES



- Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.
- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage due to transportation. If in any doubt, do not use the appliance and contact an authorised service centre.
- This appliance must be used only for the purpose for which it was designed, namely as a wearable heated robe for home use. Any other use is considered not compliant with the intended use and therefore could be dangerous.
- Before connecting the appliance to your chosen power bank, please check that it is 5V. DC and capable of supplying 2A and is fully charged.
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.

- This appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.



- **DO NOT** use the appliance with wet hands or damp feet.



- **DO NOT** pull the USB Connector Cord or the appliance itself to disconnect it from the power source.



- **DO NOT** pull or lift the appliance by the USB-C connector cable or power bank if attached.

- The cable of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that electric cords shall be arranged in a safe way.



- **DO NOT** expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.
- Always disconnect the appliance from the power bank before cleaning or performing maintenance and when the appliance is not in use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, contact an authorised electrical specialist before switching it on again.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised electrical specialist.
- If the USB-C connector cable is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, so as to prevent all risks.



- **DO NOT** use this appliance to warm animals.



- **DO NOT** use folded or creased.



- **DO NOT** insert pins or needles.

- **PLEASE NOTE:** If you wear a pacemaker please contact a medical professional or your pacemaker provider to ensure this product is compatible with your device.

- The Outdoor Wearable Heated Robe should not be applied directly to the skin.
- The Outdoor Wearable Heated Robe should always be worn over clothing.
- Always test the temperature of the robe prior to application.
- Prolonged use of the Outdoor Wearable Heated Robe at a high setting could lead to skin burns.
- Do not fall asleep while wearing the Outdoor Wearable Heated Robe.
- For external use only.

INSTRUCTIONS FOR USE

Always make sure that the Outdoor Wearable Heated Robe is not creased or folded while it is in use.

1. Unpack the Outdoor Wearable Heated Robe, remove all the packaging materials.
2. Make sure your power bank is fully charged before using. Working time is approximately 3 hours using a fully charged 10,000mAh power bank.
3. Connect the power bank to the USB cable, located in the left hand outer pocket. The other end of this cable is attached to the power button.
4. The power button will illuminate green to show that it is successfully connected, then will go off.
5. Place the power bank in the pocket and zip it up.
6. Place the robe over to your shoulders and and push your arms through the sleeves.
8. Using the zip at the front, fasten the robe.
9. Press and hold the power button for 3 seconds until it illuminates red, indicating it is on the high setting.
10. To change the temperature, press the temperature button and it will then illuminate blue, indicating it is on the medium setting.
11. Press the temperature button again and it will then illuminate green, indicating it is on the low setting.
12. You can power off the Outdoor Wearable Heated Robe on any heat setting. To turn off power, press the power button for 3 seconds and the power button will not be illuminated.

Function: 3-level temperature control



High - Red Light (approx. 55°C)

Medium - Blue Light (approx. 45°C)

Low - Green Light (approx. 35°C)

13. The heating zone sizes approx.: 2 chest zones: 12 x 22cm each.
Back zone: 30 x 50cm.
14. When not in use for a period of time, unplug the power bank from the USB-C cable.

CARE AND CLEANING

- Remove your power bank from the Outdoor Wearable Heated Robe and let it cool completely before cleaning.
- Check parts for wear and damage after every few uses.
- Never immerse the Outdoor Wearable Heated Robe with the power bank attached in water or any other liquid.

WASHING INSTRUCTIONS FOR THE OUTDOOR WEARABLE HEATED ROBE

- Remove your power bank from the robe ready to wash.
- Machine washable at 30°C on a wool programme.
- **DO NOT** iron, tumble dry, dry clean or bleach.
- To hand wash, use a mild washing powder or detergent and soak the Outdoor Wearable Heated Robe in lukewarm water for 15 minutes. After soaking, gently wash the Outdoor Wearable Heated Robe and rinse thoroughly with clean, lukewarm water.
- Allow the excess water to drain from the Outdoor Wearable Heated Robe. It may be gently squeezed, but do not wring.

DRYING YOUR OUTDOOR WEARABLE HEATED ROBE

- Air dry on a clothes line. Avoid use of clothes pegs as they will damage the Heated Robe.
- **DO NOT** use your Outdoor Wearable Heated Robe until it is completely dry.
- **DO NOT** wring the Outdoor Wearable Heated Robe.

STORING YOUR OUTDOOR WEARABLE HEATED ROBE

- When storing the Outdoor Wearable Heated Robe, allow it to cool down before folding.
- Avoid creasing the Outdoor Wearable Heated Robe.
- Do not place heavy items on the Heated Robe when in storage, as deep creases or folds may damage the wiring.
- Do not use any moth-proofing chemicals.

FREQUENTLY ASKED QUESTIONS

Question: Why is there is no heat?

Answer: Check that your power bank is fully charged and you are using the output port. Check that the type-C connector is fully pushed into the power bank.

The Outdoor Wearable Heated Robe may be faulty or damaged. If so, contact the Lakeland Customer Services team on 015394 88100 or info@lakeland.co.uk

Question: Why is there heat discolouration on the fabric?

Answer: There may be a fault with the appliance, discontinue use and contact the Lakeland Customer Services team on 015394 88100 or info@lakeland.co.uk

TECHNICAL DATA

LAKELAND

63906

**OUTDOOR WEARABLE
HEATED DRYROBE**



UK
CA



RoHS



RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.



Lakeland
Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: 015394 88100 **lakeland.co.uk**