



# The Flyscreen Company

LAKELAND Product Name: **Standard Fly Screen** Product Code: **7327**

**Issue:           Weights falling off mesh panels**

If there is a problem with weights falling off the mesh panel please refer to the Assembly Instruction sheet, procedure 10, 11 and 12 and also the Care and Maintenance instructions.

## **IMPORTANT**

### **During Assembly:**

- Ensure that the mesh is located in the correct position in the weight and that the two parts of each weight are aligned correctly so that the spikes fit into the corresponding holes.
- **For additional grip the mesh can be positioned to overlap the 3 locating lugs inside the weights.**
- **The mesh panel and weight should be able to swing freely above the threshold or door sill by a minimum of 5mm.** If it snags on the door sill the weights may become dislodged.

### **In Use:**

- Please part the panels before walking through the doorway.
- Do not let the panels and weights swing from any height (e.g. from shoulders or from objects such as boxes and chairs being carried through the doorway).
- Do not kick or step on the weights.