

The Flyscreen Company

Important

Dear Customer,

In order to prolong the life of your Insect Panel Curtain please read the following advice.

Care and Maintenance

- A fly screen is designed to allow fresh air in and keep flying insects out. It is not designed
 for any other purpose and so it needs to be treated accordingly and with care.
- Whilst the mesh is tough it can be cut or snagged with sharp objects.
- Please do not allow children to swing on the panels.
- Please part the panels before walking through the doorway.
- Do not kick or step on the weights.
- Do not let the panels and weights swing from any height (e.g. from shoulders or from objects such as boxes and chairs being carried through the doorway).

The bottom of the curtain should not touch the ground but hang 5 – 7mm above the threshold or sill.

Although the Insect Panel Curtain is robust and weather resistant we do not recommend that it remains outside during high winds or prolonged poor weather conditions.

The curtain should not be left in a location where magnification of the sun through glass can cause extreme temperature levels.

When the curtain is not in use, it is best rolled carefully and stored safely to avoid crumpling or distortion of the mesh.

Cleaning

The Insect Panel Curtain can be cleaned by immersing it in (or spraying it with) a mild soapy solution. The curtain should be rinsed with fresh water and either hung up or replaced in the brackets to dry. The track can be cleaned with a soft cloth and a household cleaner.

Never put any of the component parts of this Insect Curtain into a commercial or domestic dishwasher or washing machine.

If you have any questions about your Insect Curtain or would like information on other products in our range please call us on **01454 238288**.