

## FAQ Sheet

### How Do I fill my blowtorch?

Fill in a well ventilated area. Turn the unit upside down and insert fill stem into fill valve and press down for 3 to 4 seconds. Repeat three times. Back spray from fill valve indicates that appliance is full.

It is VERY IMPORTANT to remember to leave for two minutes before lighting after filling. This is just to ensure that any vapour has dissipated properly.

### Do I use the black attachment to fill my blowtorch?

For the majority of aerosol butane canisters, there is no need to use the attachment enclosed with your blowtorch. Fill straight from the canister.

### What type of gas do I use to fill my blowtorch?

Use a proprietary branded butane gas aerosol. Cheaper brands may contain impurities that can cause eventual blockages in the blowtorch.



### Where can I buy the gas to fill my blowtorch?

You can buy butane gas from most stores or supermarkets.

### Can I get replacement parts for my blowtorch?

Unfortunately replacement parts are not available for our blowtorches.

### What is the maximum temperature of my blowtorch?

The maximum temperature is 1150°C.

### What should I do if I can hear gas leaking from the blowtorch?

Stop using your blowtorch immediately and contact Kitchen Craft.



## Trouble Shooting

### The blow torch will not ignite.

- Blow torch is supplied empty – Ensure gas has been inserted
- Check that the safety lock is in the off position
- With the gas switched off, check that a spark is being created in the nozzle when the trigger is pressed.

### The flame is very yellow and not powerful

- Twist the burner adjust collar so that the air vents behind the nozzle are completely exposed.

