

**Cuisinart®**

**Professional Burr Mill**

DBM8U



The Cuisinart logo is a dark blue square with the word "Cuisinart" in white, sans-serif font, positioned in the top right corner of the page.

Congratulations on your purchase of the Cuisinart Professional Burr Mill.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment so that cooks at home as well as professional chefs have the tools to express their creativity.

All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day. That is why they have come to be regarded as the defining machines in their field by chefs across the world.


Whatever you cook, cook it better with Cuisinart.



# Contents

- Product Description** ..... 5
- Safety Cautions.** ..... 6
- Instructions for Use** ..... 8
- Hints & Tips** ..... 9
- Cleaning & Maintenance** ..... 10
- Guarantee** ..... 11
- UK After Sales Service** ..... 12

## Product Description

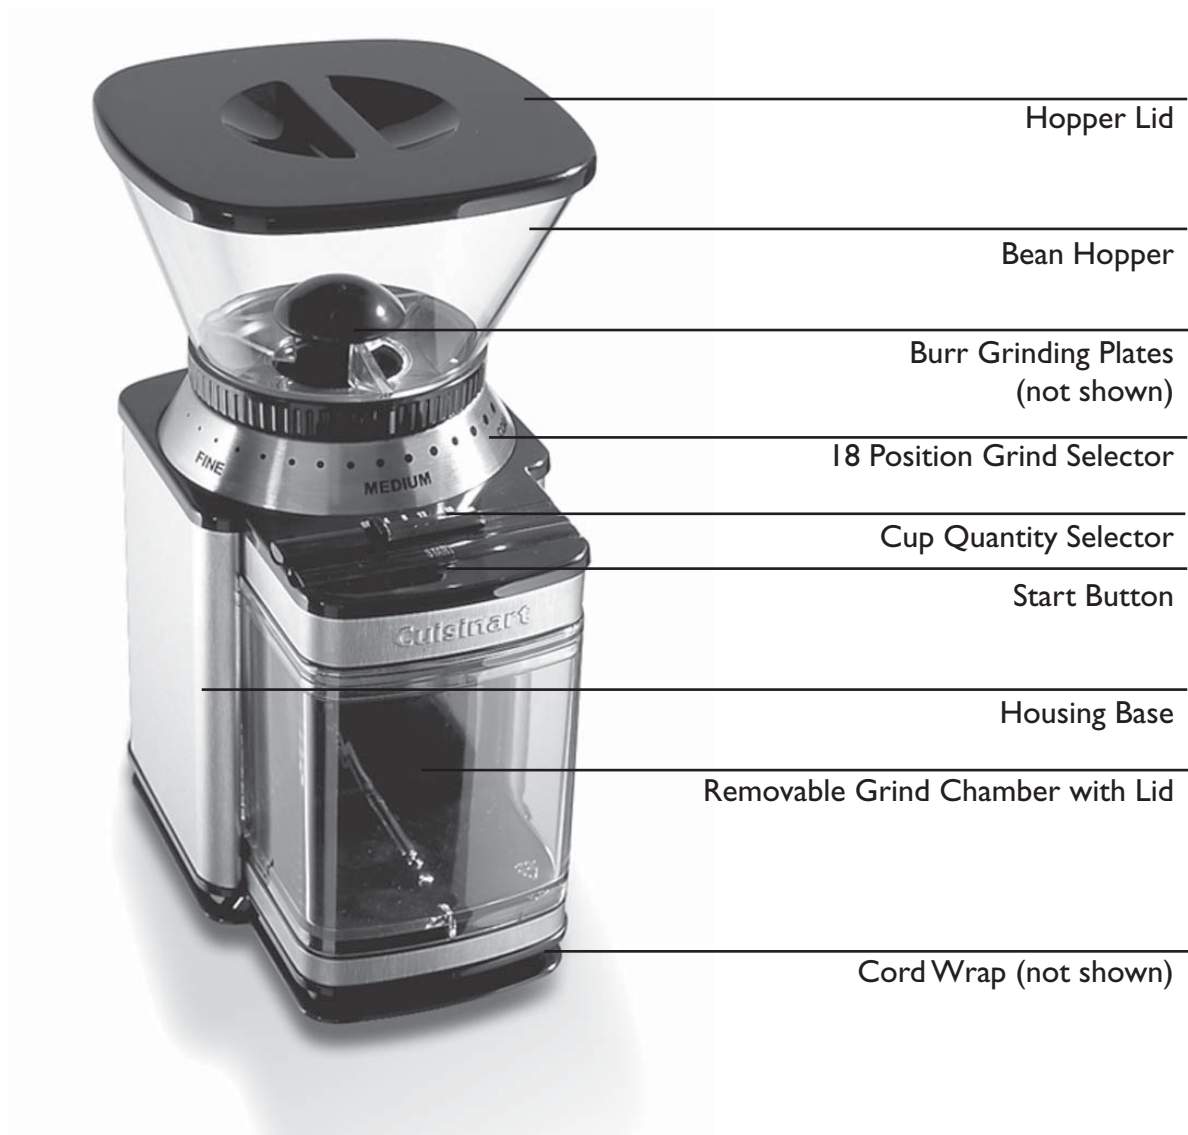

The Cuisinart logo is displayed in white text on a dark blue square background.

**Cuisinart®**

**Read all the instructions thoroughly before using the appliance and keep in a safe place for future reference**


## **Safety Cautions**

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Do not immerse motor unit in water or any other liquid or put in a dishwasher.
- Always disconnect the appliance immediately after use and before cleaning.
- Never leave the appliance unattended when plugged in.
- Never pull the plug out of the mains socket by the lead.
- Do not allow the lead to overhang the kitchen table or worktop.
- Avoid contact between the lead and hot surfaces.
- Do not use this appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by a special lead available from the manufacturer or its service agent. (See “UK After Sales Service” section).
- Do not use the appliance if it has fallen, shows signs of damage or cuts out in use. Discontinue use immediately and contact Cuisinart (See “UK After Sales Service” section).

- No repair can be carried out by the user. Return the appliance to ‘Cuisinart Service Centre’ for inspection or repair / replacement (See “UK After Sales Service” section).
- Use this appliance for grinding coffee beans as described within the instructions for use which accompany it. Please retain these for future reference.
- For indoor use only.
- For domestic use only.
- Always ensure that your hands are dry before removing the plug from the mains socket.
- This appliance complies with the requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 06/95/EEC (Electrical Safety of Domestic Appliances) amended by Directive 93/68/EEC (CE Marking).
- Always ensure the voltage to be used corresponds with the voltage on the appliance, which is indicated on the bottom of the motor unit.
- Do not use any attachments other than those recommended or sold by Cuisinart.
- Do not touch moving parts whilst in use.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- **WARNING:** A cut off plug inserted into a 13 amp outlet is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
- **WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.



- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

The Cuisinart logo is displayed in white text on a dark blue square background.

## Instructions for Use

- Remove all packaging and plug the appliance into a suitable mains socket.
- Remove the bean hopper lid and ensure that the bean hopper is securely in place.
- Fill bean hopper to top, making sure that the lid closes securely. (Maximum fill is 250g).
- Set the grind selector to the desired setting by twisting in a clockwise or anticlockwise direction. The '1' mark on the hopper base should be aligned with the desired grind setting.
- Slide the cup quantity selector to the desired number of cups, between 4 and 18.
- Press and release start button to begin grinding.
  - **N.B.** If the bean hopper and grind chamber are not properly in place, the grinder will not operate
- Grinding will automatically stop once the pre-set quantity of beans have been ground.
- To manually stop the operation, slide the cup quantity selector all the way to the left to the 'Off' position and the appliance will stop. To restart, reposition the cup quantity selector to the desired number of cups and press and release the start button.
- To remove the grind chamber, simply pull away from the mains unit. Always ensure the motor has stopped completely before removing any parts. The coffee can be used or stored with the grind chamber lid fitted, ready for use.



## Hints & Tips

- The following table highlights the general grind settings required for basic types of coffee. As there are 6 settings per grind type, you will have to experiment with different grind settings to determine the right consistency to suit your taste.

<b>Grind Position</b>	<b>Grind Result</b>
Coarse	Percolator/Cafetière
Medium	Filter
Fine	Espresso

- When choosing fine settings, you may need to set the cup selector at a higher number of cups to get the desired amount of coffee, as fine grinds are very compact. The opposite is true for coarse settings. You may need to set the cup selector at a lower number of cups to get the desired amount of coffee, as coarse grinds are very loose.
- You may also vary the strength of the coffee by increasing or decreasing the quantity of cups, i.e. select a greater quantity than actually required for a stronger flavour and vice versa.

The Cuisinart logo is displayed in white text on a dark blue square background.

**Cuisinart®**

## **Cleaning & Maintenance**

- Always ensure the plug has been removed from the mains before cleaning.
- The bean hopper and grind chamber are dishwasher safe, and we recommend washing them on the top rack of the dishwasher. Due to high water temperature, washing these parts on the bottom rack may cause damage over time.
- Never immerse the housing base in water or other liquid.
- Do not use abrasive cleaners on the housing base. To clean, simply wipe with a damp cloth and dry thoroughly. Apply any cleaning agent to the cloth, not directly to the housing base.
- Use the cleaning brush provided to clean the grind release area.
- Use the cord wrap on the underside of the housing base to store excess cord.

## Guarantee

- This Cuisinart appliance is guaranteed for domestic consumer use for 5 years.
- The guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorized persons.
- If the appliance does not perform satisfactorily due to defects of material or manufacture, it will be repaired or replaced by the manufacturer (see UK After Sales Service for details).
- This guarantee is only valid in the United Kingdom (including Northern Ireland, Republic of Ireland, the Channel Islands and the Isle of Man).
- No responsibility will be accepted for any damage caused in transit.
- A charge may be made if goods are returned outside the relevant guarantee period or if the product is returned unnecessarily.
- The manufacturer reserves the right to amend terms and specifications without prior notice.
- This guarantee in no way affects your statutory rights.

The Cuisinart logo is displayed in white text on a dark blue square background.

## **UK After Sales Service**

For further advice on using your Cuisinart Professional Burr Mill and other products in the Cuisinart range, contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk)

### **In Guarantee**

Return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre  
P.O. Box 506  
WIGAN  
WNI 9AA

Enclose your name and address, together with proof of purchase and details of the fault. Cuisinart will either repair or replace the product, as appropriate.

### **Out of Guarantee**

Contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk) for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre  
P.O. Box 506  
WIGAN  
WNI 9AA

**[www.cuisinart.co.uk](http://www.cuisinart.co.uk)**