

 LAKELAND

USER MANUAL



The Lakeland Guarantee....
is probably the simplest guarantee in the world!
If you are not satisfied at any time, you receive your money back!
This is our promise.


Lakeland
Alexandra Buildings, Windermere, Cumbria LA23 1BQ
Tel: 015394 88100 Web: www.lakeland.co.uk

CORDLESS WARMING TRAY

Model: 14209
Helpline No: 015394 88100

INTRODUCTION

Thank you for choosing the Cordless Warming Tray, which is designed to keep cooked foods appetisingly hot at the table. To help you make the most of your purchase, please take a few moments to read these instructions before using the warming tray for the first time, and keep them in a safe place for future reference.

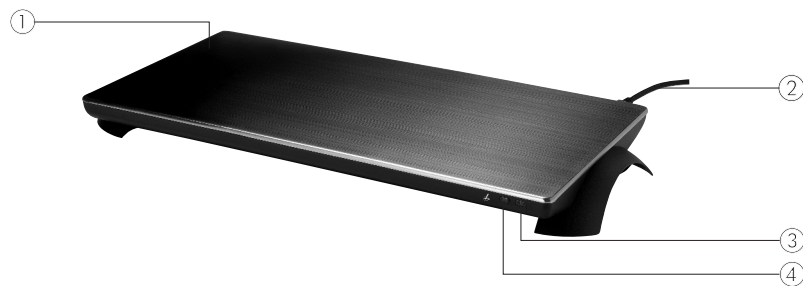

FEATURES

1. Brushed chrome hotplate
2. Detachable power cord
3. Ready light
4. Power light

Power: 1000W

Operating voltage: 230V~50Hz

IMPORTANT SAFEGUARDS

When using this warming tray, please follow these basic safety precautions.

1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. This warming tray is for household use only. It is not suitable for commercial use, or for use outdoors.
4. This warming tray is purely for the purpose of keeping cooked food warm. It is not intended for any other use, such as defrosting, reheating leftovers, or cooking food from scratch.

5. Using the warming tray with accessories not recommended by the manufacturer may result in fire, electric shock or injury, and should be avoided.
6. Place the warming tray on a level, sturdy and dry surface.
7. Do not let the power cord hang over the edge of your table or worktop, where a child could grab it or people could trip over it. The power cord must not become tangled or touch any hot surfaces, including the warming tray itself.
8. Do not place the warming tray on or near a hot gas or electric burner, or in or near a heated oven.
9. Ensure the warming tray is switched off before plugging it into the mains socket.
10. The warming tray should not be plugged into a mains socket for longer than 2 hours during any 6 hours.
11. The warming tray will get very hot during use and should not be placed directly onto a very delicate surface that may be damaged by heat.
12. Take care not to touch the hot surface or sides of the tray. For your safety, please wear oven gloves when carrying the hot tray.
13. Never attempt to carry the warming tray with dishes balancing on top.
14. Always switch off and unplug the warming tray and let it cool down completely when not in use, before cleaning or storing away. Grasp the plug, not the power cord, and ensure your hands are dry.
15. To protect against electric shock, never immerse the warming tray, power cord or plug in water or any other liquid. Do not let the power cord or plug get wet.
16. The warming tray is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the warming tray. It will get very hot during use and must not be left unattended.
17. Do not use the warming tray if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair or replacement. Never try to repair the warming tray yourself as this may cause electric shock.

BEFORE USING YOUR WARMING TRAY FOR THE FIRST TIME

Carefully unpack the warming tray and remove any packaging. Wipe the tray with a slightly damp cloth and dry with a soft cloth.

USING THE WARMING TRAY

This warming tray takes just 8 minutes to heat up to 150°C and stays warm for 1 hour after being unplugged. The power cord is easily detached so that the tray can be placed conveniently on your table. After unplugging, the warming tray will release heat for a full hour, gradually cooling to around 50°C or 60°C.

If you prefer, you can keep the warming tray plugged in during use, for up to 2 hours during any 6 hours. The tray has a thermostat to maintain the temperature at 150°C and prevent overheating.

1. Place the warming tray on a level, sturdy and dry surface. Making sure the warming tray is switched off, connect it to the power cord, then plug into a mains socket. The red power light will stay on as long as the tray is plugged in.
2. Begin heating up the warming tray by pressing the on/off switch. After around 8 minutes the green ready light will come on to show that the correct temperature has been reached. If you are not ready to use the tray immediately, keep it plugged in (for up to 2 hours) and the thermostat will maintain the temperature.
3. When you are ready to use the warming tray, switch off and unplug it. Detach the power cord and carry the tray to your table, where it will stay warm for 1 hour. Take care not to touch any part of the metal hotplate; carry the hot tray by its handles and wear oven gloves for protection.
4. If you prefer to keep the warming tray plugged in during use, please do not exceed 2 hours during any 6 hours. Place the tray well away from the edge of your worktop or table, and position the power cord so that it cannot be tripped over or grabbed accidentally.
5. Place your food on the warming tray in suitable heatproof dishes. Take care not to scrape dishes across the surface, especially porcelain and china, as they may scratch the brushed chrome.
6. After use, let the warming tray cool down completely before carrying, cleaning and storing away. See CARE AND CLEANING.

HELPFUL HINTS

- For best results, begin with piping-hot food and pre-warmed dishes.
- Choose dishes that are HEATPROOF, with flat bases to ensure maximum contact with the hotplate.
- High-sided dishes are best avoided as they may encourage loss of heat.
- Covering the dishes will help to keep food warm for longer.
- If in any doubt about the temperature of your food, please check with a kitchen thermometer.
- Once dishes are empty, lift them off the hotplate.
- For your safety, the warming tray has been designed to protect against overheating with its automatic shut-off and temperature control features.

CARE AND CLEANING

Before cleaning the warming tray, ensure it is switched off and the power cord is unplugged from the mains socket. CAUTION: always allow the warming tray to cool completely before cleaning.

Wipe the surface with a slightly damp cloth and dry with a soft cloth. Never use abrasive cleaners or scourers as they will damage the chrome surface. CAUTION: the warming tray, power cord and plug must not be immersed in water or any other liquid.

RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point.




ELECTRICAL CONNECTIONS**THIS APPLIANCE MUST BE EARTHED**

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

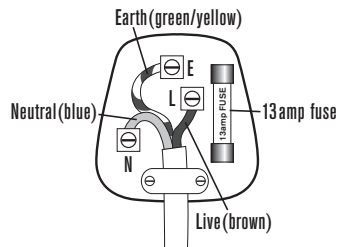

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).