

 LAKELAND

## USER MANUAL



### **DRY:SOON HEATED TOWER AIRER**

**D** Modell: 24062

**UK** Model: 21736

Helpline No: 015394 88100

## INTRODUCTION

Thank you for choosing the Lakeland Dry:Soon 3 Tier Heated Tower Airer. With 21m of drying space and quick heat up time, the airer is ready to start drying your laundry in minutes.

To get the best from your Lakeland Dry:Soon 3 Tier Heated Tower Airer, please take a few moments to read these instructions, and keep them in a safe place for future reference.

## SAFETY PRECAUTIONS

When using this Heated Tower Airer, please follow these basic safety precautions.

1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. The Heated Tower Airer is for household use only. It is not suitable for commercial use, or for use outdoors. It must only be used for its intended purpose.
4. To protect against electric shock, do not immerse the appliance, power cord or plug in water or any other liquid.
5. The appliance must be placed on a level, dry surface at least 1.5 metres away from heat or water sources.
6. Never pull or carry the Heated Tower Airer by its power cord. Do not allow the power cord to touch hot surfaces or sharp edges. Do not let it trail over the edges where it may be pulled by children or tripped over.
7. Always switch off and unplug the Heated Tower Airer after use, leaving it to cool down completely before storing it away. Do not wind the power cord around the Heated Tower Airer.
8. The appliance is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the appliance.
9. Please do not use the appliance if it has been dropped or damaged in any way. Check the power cord regularly for signs of damage. Never attempt to repair the appliance or replace the cord yourself as this may lead to severe injury or electric shock. Call the helpline on 015394 88100 to arrange a replacement.

## USING YOUR DRY:SOON HEATED TOWER AIRER FOR THE FIRST TIME

Carefully unpack the 3 Tier Heated Tower Airer and remove any packaging. Place the unit on a level, dry surface ready for use.



**Space saving tip:** For smaller loads or confined spaces open one side of the airer.

### TECHNICAL SPECIFICATIONS


Power consumption: 300W

Operating voltage: 230V



Maximum load: 15kg

## INSTRUCTIONS FOR USE:


1. Place your airer on a level, dry surface to assemble.
2. Open the supports to 90°

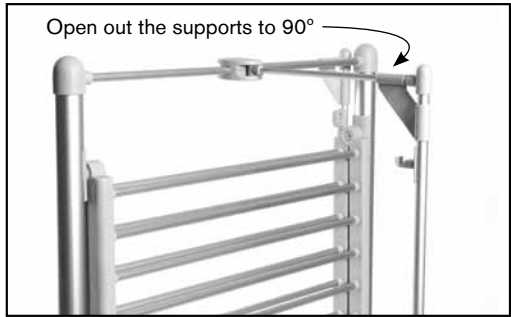

3. Raise the shelves and lower into clips to secure in position.

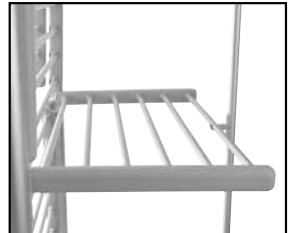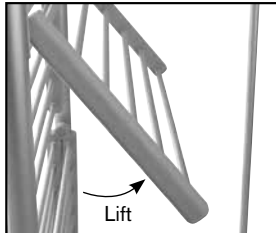

**CAUTION:**  
Do not force the shelf beyond the level indicated by this dotted line – approx. 2.5 cm (1") above the clip

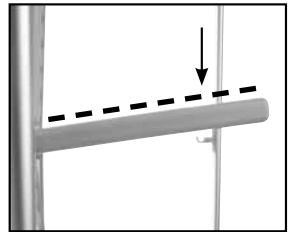

4. Plug in your airer.
5. Switch on your airer. The ON/OFF switch is on the leg of your airer close to the flex.
6. When you have finished using your airer switch off and unplug.



## TROUBLESHOOTING

Problem – the Tower Airer is not heating up.

Solution – check the Tower Airer is plugged in and the on/off switch is illuminated.

## RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) to find your nearest recycling point.




## ELECTRICAL CONNECTIONS

### THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

### FITTING A NEW PLUG

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

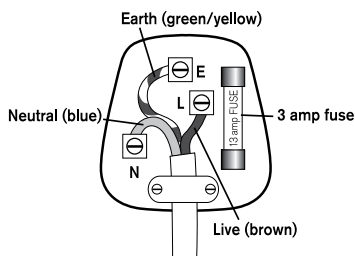

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

3 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).

**D**

# **DRY:SOON BEHEIZTER TURMTROCKNER**



## **BEDIENUNGSANLEITUNG**

### **EINFÜHRUNG**

Wir freuen uns, dass Sie sich für den Dry:Soon beheizten Turmtrockner mit 3 Ebenen von Lakeland entschieden haben.

Dank über 21 m Trockenlänge und einer schnellen Aufwärmzeit beginnt der Trockner bereits nach wenigen Minuten mit dem Trocknen Ihrer Wäsche.

Für die optimale Verwendung Ihres Dry:Soon beheizten Turmtrockners mit 3 Ebenen nehmen Sie sich bitte die Zeit, diese Bedienungsanleitung zu lesen. Bewahren Sie diese für den weiteren Gebrauch sicher auf.

## SICHERHEITSVORKEHRUNGEN

Bitte beachten Sie bei der Verwendung des beheizten Turmtrockners diese grundsätzlichen Sicherheitsvorkehrungen.

1. Bitte lesen Sie vor Gebrauch die vollständige Anleitung.
2. Stellen Sie sicher, dass Ihre Stromversorgung mit der auf dem Gerät angegebenen Spannung übereinstimmt.
3. Der beheizte Turmtrockner ist ausschließlich für den Hausgebrauch vorgesehen. Er ist nicht für den gewerblichen Einsatz oder für die Verwendung im Freien geeignet. Er darf nur für den vorgesehenen Zweck verwendet werden.
4. Um Stromschläge zu vermeiden, darf das Gerät, das Netzkabel oder der Netzstecker nicht in Wasser oder jegliche andere Flüssigkeiten getaucht werden.
5. Das Gerät muss in einem Abstand von mindestens 1,5 Meter von Wärme- oder Wasserquellen auf einem ebenen und trockenen Untergrund aufgestellt werden.
6. Ziehen oder tragen Sie den beheizten Turmtrockner niemals mittels des Netzkabels. Das Netzkabel darf nicht mit heißen Oberflächen oder scharfen Kanten in Berührung kommen. Lassen Sie es nicht über die Kanten hängen, damit Kinder nicht daran ziehen können oder es eine Stolpergefahr darstellt.
7. Schalten Sie den beheizten Turmtrockner nach Gebrauch immer aus und ziehen Sie das Netzkabel. Lassen Sie ihn vollständig abkühlen, bevor Sie ihn verstauen. Wickeln Sie das Netzkabel nicht um den beheizten Turmtrockner.
8. Das Gerät ist nicht für die Verwendung durch Kinder oder gebrechliche Personen vorgesehen, außer diese wurden angemessen durch eine verantwortliche Person über die sichere Verwendung unterwiesen. Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.
9. Bitte sehen Sie von der Verwendung des Gerätes ab, wenn dieses fallengelassen oder in jeglicher Weise beschädigt wurde. Überprüfen Sie das Netzkabel regelmäßig auf Anzeichen eines Schadens. Nehmen Sie niemals selbst Reparaturen am Gerät vor und wechseln Sie niemals das Netzkabel selbst aus, da dies schwerwiegende Verletzungen oder Stromschläge zur Folge haben kann.

## VOR DER ERSTEN INGEBRAUCHNAHME IHRES DRY:SOON BEHEIZTEN TRUMTROCKNERS

Packen Sie den beheizten Turmtrockner mit 3 Ebenen sorgfältig aus und entfernen Sie sämtliche Verpackungsmaterialien. Stellen Sie ihn auf einer ebenen und trockenen Oberfläche einsatzbereit auf.

Öffnen Sie die seitlichen Stützen bis 90°



**Tipp zum Platzsparen:** Öffnen Sie für kleinere Wäskemengen oder in engen Räumen nur eine Seite des Trockners.

### TECHNISCHE DATEN

Stromverbrauch: 300 W


Betriebsspannung: 230 V

Maximale Belastung: 15 kg




## GEBRAUCHSANWEISUNG:


1. Stellen Sie Ihren Trockner auf einer ebenen und trockenen Oberfläche auf.
2. Öffnen Sie die seitlichen Stützen bis 90°.

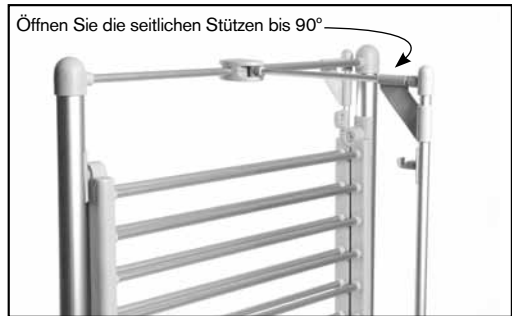


3. Klappen Sie die Seitenteile hoch und arretieren Sie diese in den vorgesehenen Haken.

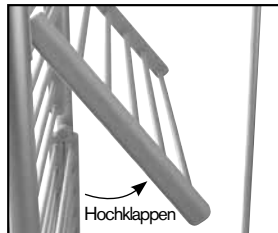

**ACHTUNG:**  
Klappen Sie das Seitenteil nicht weiter als bis zu der gestrichelten Linie hoch – ca. 2,5 cm oberhalb des Hakens

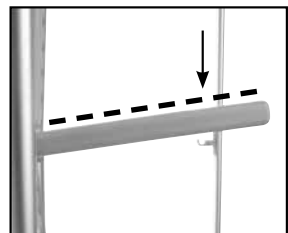

4. Stecken Sie den Netzstecker Ihres Trockners in die Netzsteckdose.
5. Schalten Sie Ihren Trockner ein. Der AN/AUS-Schalter befindet sich seitlich am Standfuß Ihres Trockners in der Nähe des Netzkabels.
6. Schalten Sie den Trockner nach Gebrauch aus und ziehen Sie den Netzstecker aus der Netzsteckdose heraus.

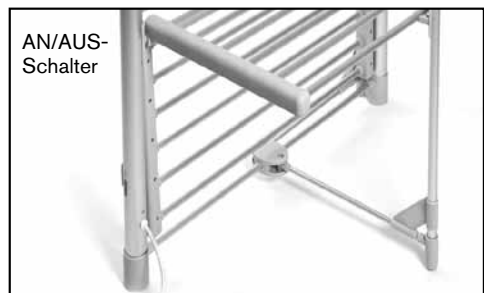

## FEHLERSUCHE

Problem – der Turmtrockner heizt nicht auf.

Lösung – überprüfen Sie, ob der Turmtrockner mit dem Stromnetz verbunden ist und ob der An/Aus-Schalter aufleuchtet.

## **ENTSORGUNG VON ELEKTRO-ALTGERÄTEN**

Lakeland hat sich wie viele andere Einzelhändler auch einem Recycling-Programm angeschlossen, im Rahmen dessen Benutzer ihre Elektro-Altgeräte an bundesweiten Rücknahmestellen abgeben können.



**Lakeland**

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ

Tel: +44(0)15394 88100 [www.lakeland.co.uk](http://www.lakeland.co.uk)

 [www.lakeland.de](http://www.lakeland.de)